






## EQUIPMENT

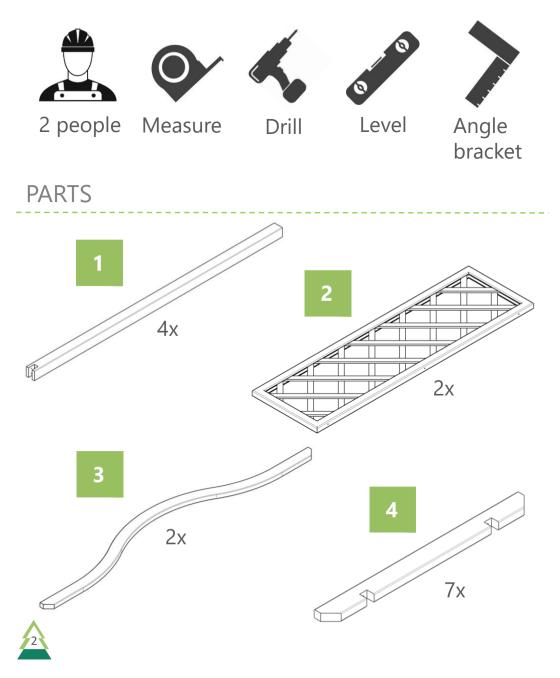






## SCREW BIT: PZ2








Step 1

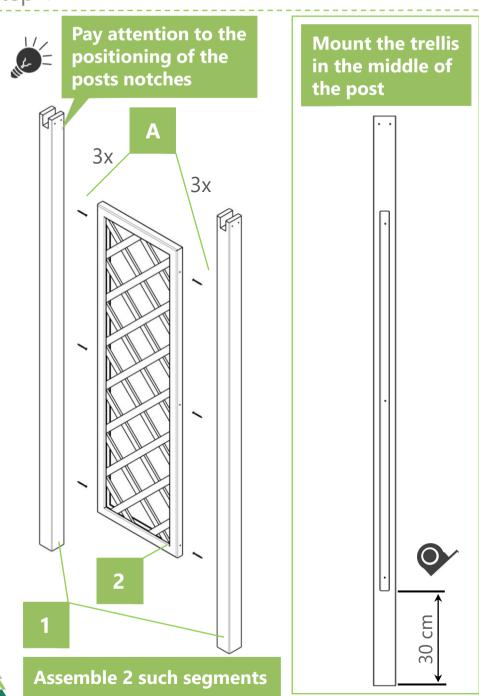

Step 2



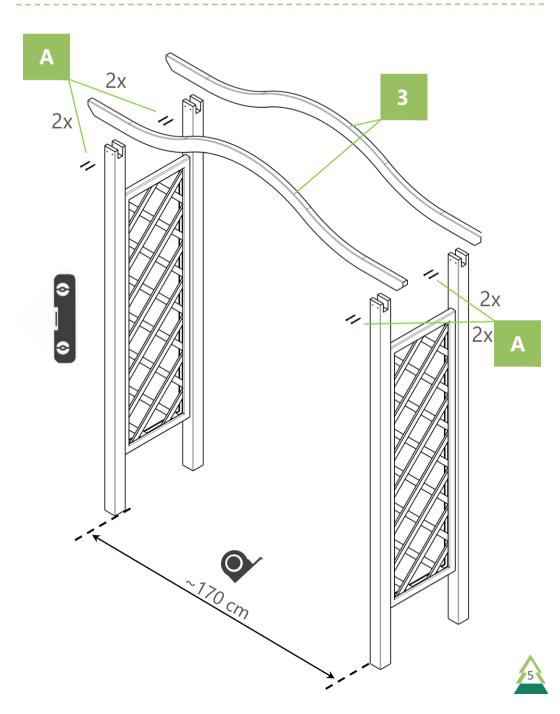

Step 3



