


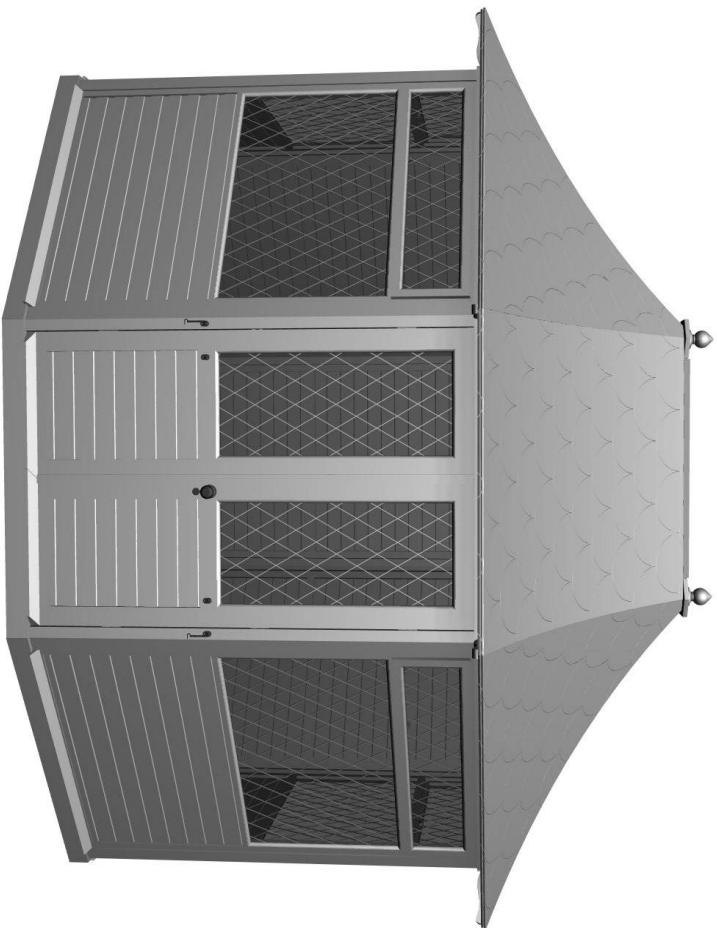

Georgian Pavilion
PRODUCT C42209

2x



PART: 1
4 pcs



FRONT POST

PART: 2
2 pcs




RIGHT POST

PART: 3
2 pcs




LEFT POST

PART: 6
2 pcs

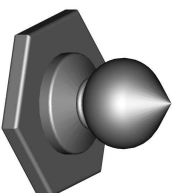

ROOF FINIAL

PART: 7
2 pcs

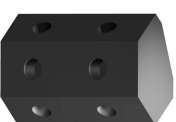

RAFTERS TIE

PART: 4
1 pc



DOOR (RIGHT)

PART: 5
1 pc



DOOR (LEFT)

PART: 8	4 pcs
---------	-------

SASH PANEL

PART: 9	3 pcs
---------	-------

FULLY BOARDED PANEL

PART: 10	1 pc
----------	------

ROOF LATH

PART: 12	2 pcs
----------	-------

FLOOR BOSS

PART: 13	1 pc
----------	------

FLOOR PANEL

PART: 11	2 pcs
----------	-------

FLOOR PANEL

PART: 14	6 pcs
----------	-------

FLOOR PANEL

PART: 15	1 pc
----------	------

BOTTOM DOOR STOP

PART: 16	1 pc
----------	------

TOP DOOR STOP

PART: 17	6 pcs
----------	-------

ROOF PANELS

PART: 18	2 pcs
----------	-------

ROOF PANELS

PART: 19	1 pc
----------	------

DOOR KNOB

PART: 20	2 pcs
----------	-------

EYE

PART: 21	1 pc
----------	------

ESYRUCSION

PART: 22	2 pcs
----------	-------


HOOK


PART: 23	2 pcs
----------	-------


SASH BOLT


PART: 24	2 pcs
----------	-------

BOLT KEEP

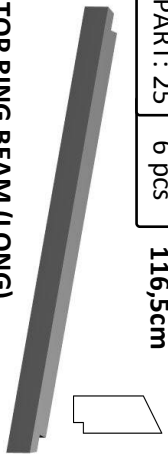PART: 25	6 pcs	116,5cm
		
TOP RING BEAM (LONG)		

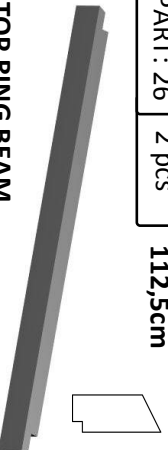PART: 26	2 pcs	112,5cm
		
TOP RING BEAM		

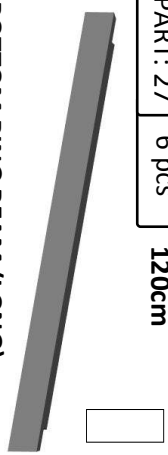
PART: 27	6 pcs	120cm
		
BOTTOM RING BEAM (LONG)		

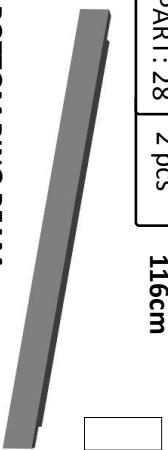PART: 28	2 pcs	116cm
		
BOTTOM RING BEAM		


PART: 29	8 pcs	
		
ROOF RAFTER		


PART: 30	16 pcs	183 cm
		
QUADRANT BEAD		


PART: 31	8 pcs	
		
BELT OF LEAD		

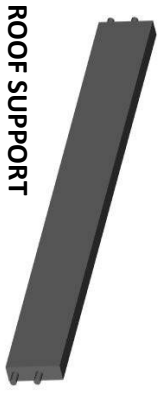PART: 32	1 pc	
		
ROOF SUPPORT		

PART: 33	88 pcs	
		
TILE		

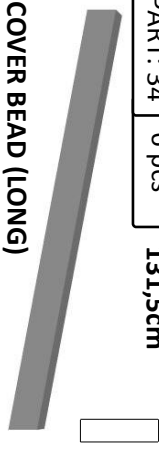
PART: 34	6 pcs	131,5cm
		
COVER BEAD (LONG)		

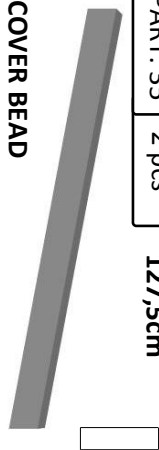
PART: 35	2 pcs	127,5cm
		
COVER BEAD		

PART: 36	12 pcs	
		
QUADRANT BEAD		

PART: 37	8 pcs	
		
WINDOW PEG		

PART: 38	10 pcs	GLASS
		
25 x 95 cm 36 x 97 cm 72 x 100 cm A 4x B 2x C 4x		

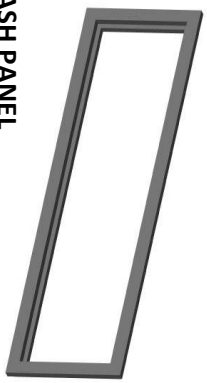PART: 39	4 pcs	
		
SASH PANEL		

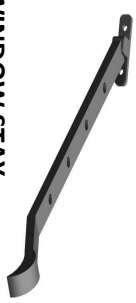PART: 40	4 pcs	
		
WINDOW STAY		

EXPLANATION

VIEW


MEASURE

DRAW

ZOOM


PART	FIXING HARDWARE	QUANTITY
A	5,0 x 90 mm 	6 pcs
B	5,0 x 80 mm 	4 pcs
C	5,0 x 60 mm 	64 pcs
D	4,5 x 60 mm 	136 pcs
E	3,5 x 40 mm 	32 pcs
F	4,0 x 25 mm 	42 pcs
G	1,2 x 25 mm 	252 pcs
H	2,5 x 25 mm 	176 pcs
I	2,2 x 50 mm 	96 pcs
	SILICONE	2 pcs
	WOODEN SCRIBER	1 pc

STEP 1

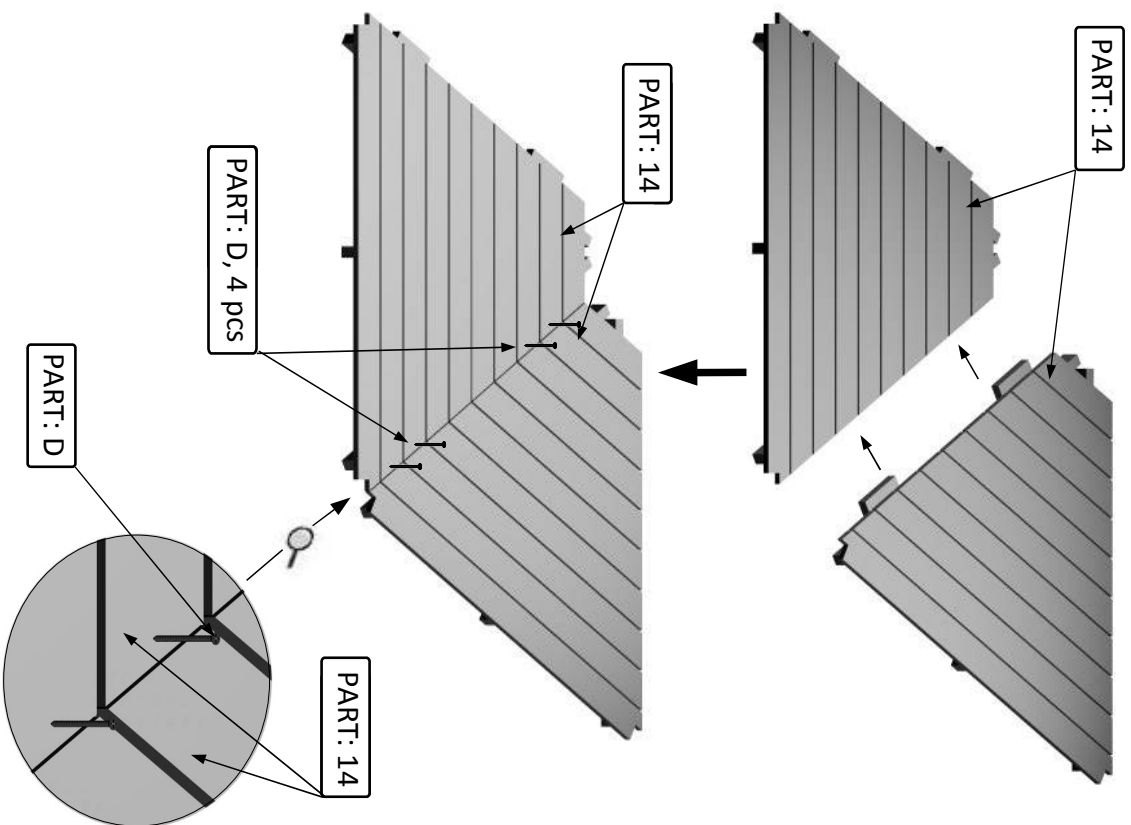


STEP 2


LIKE IN STEP 1

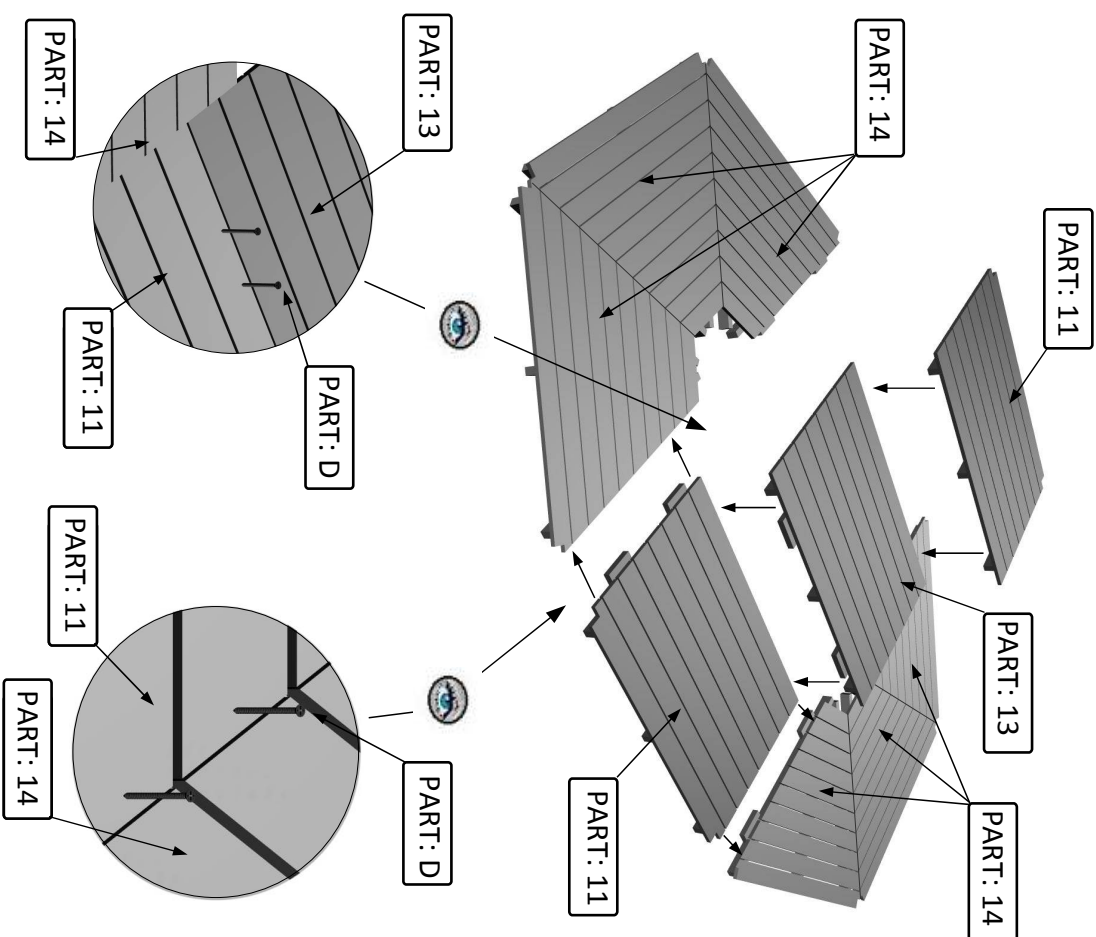


STEP 3

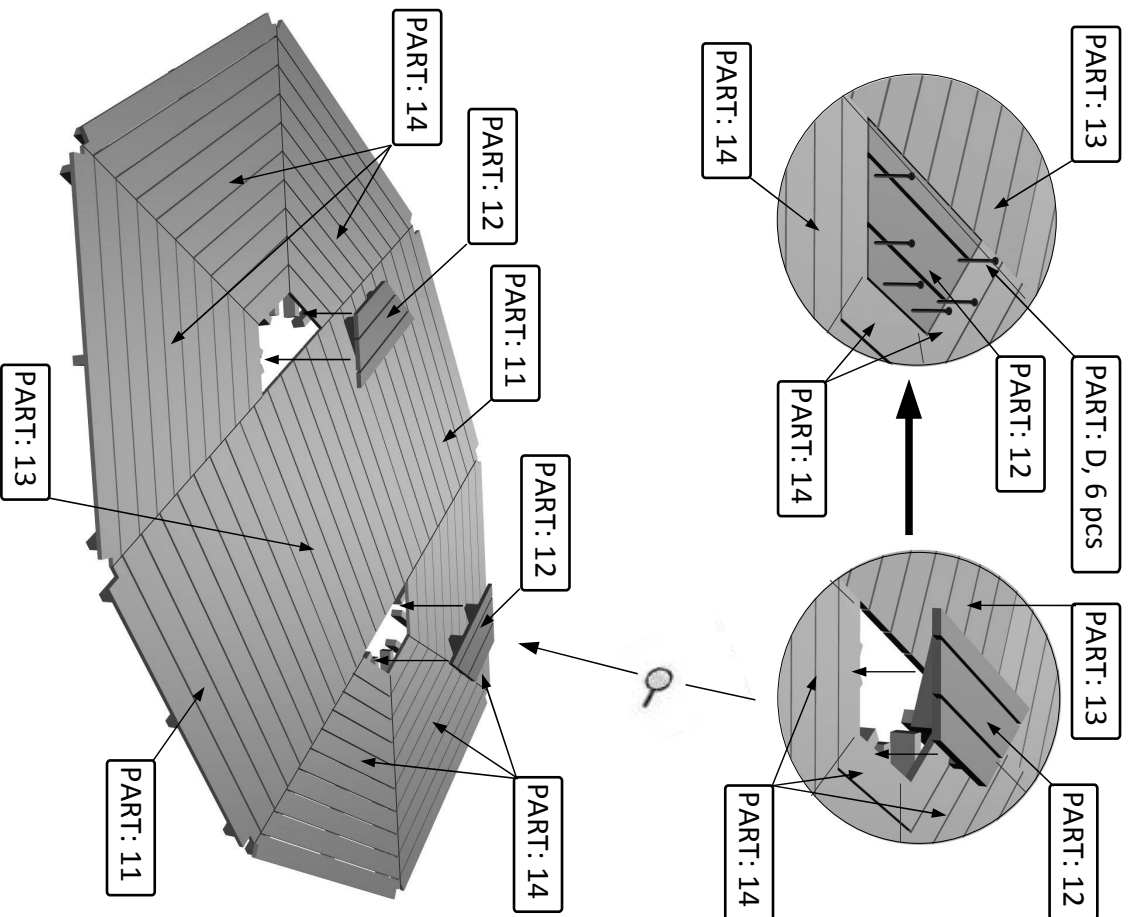


STEP 4

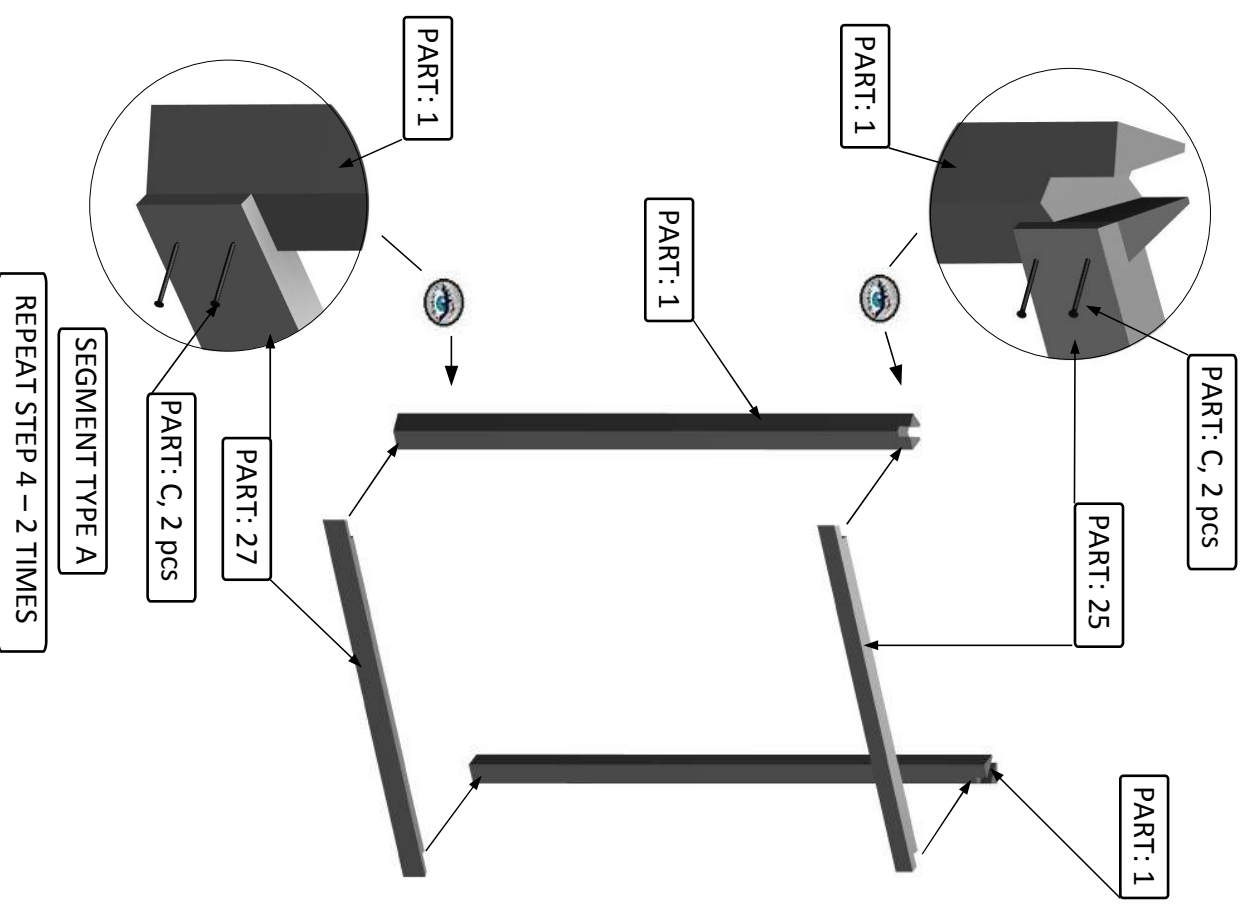

STEP 5

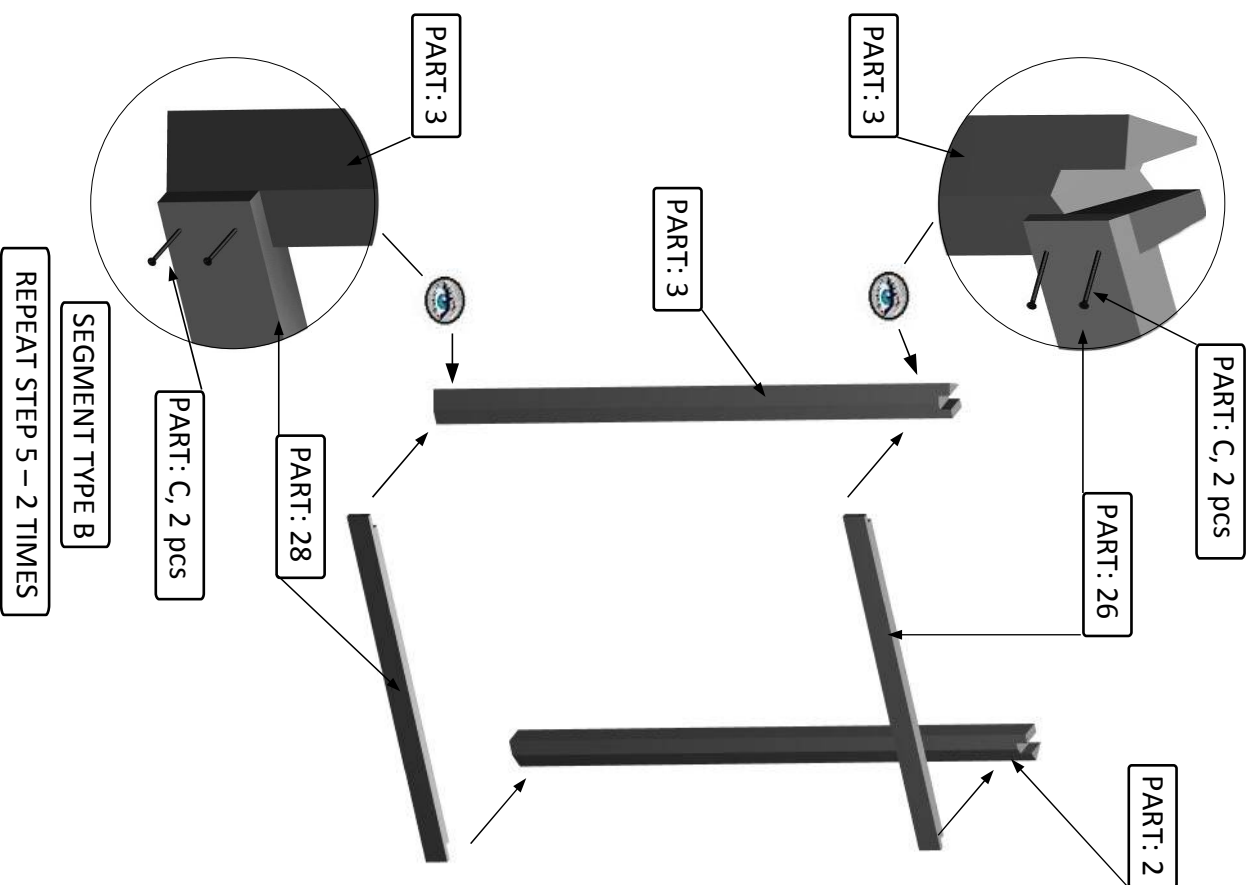


STEP 6

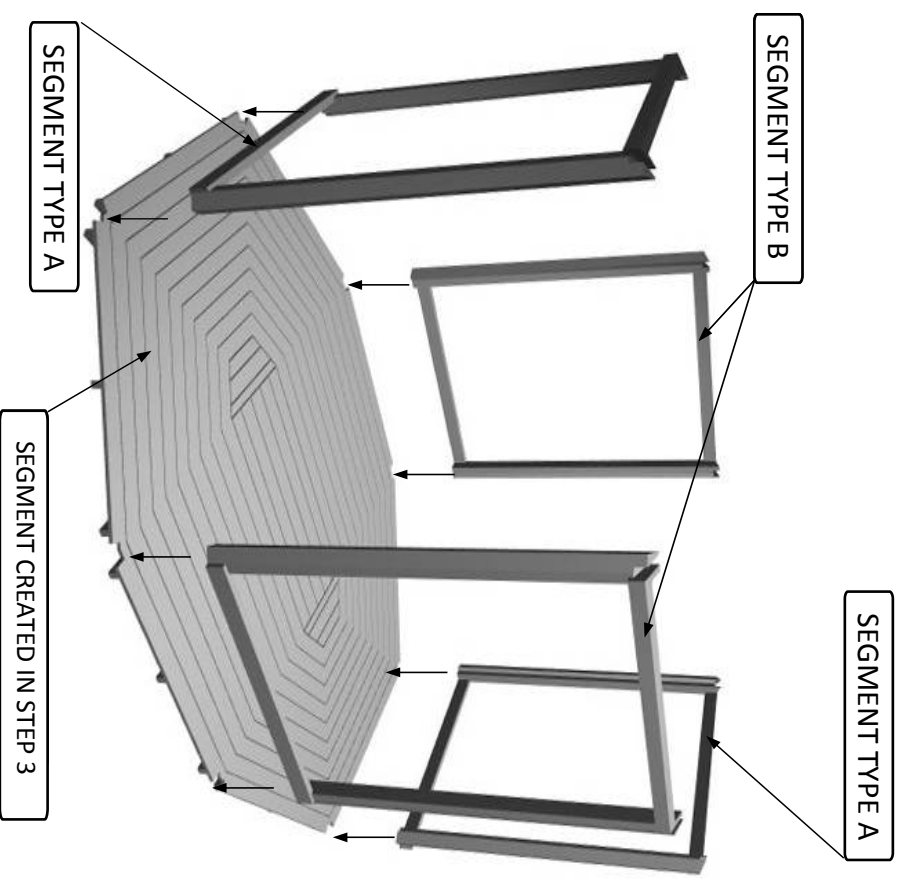


STEP 7

LIKE IN STEP 4

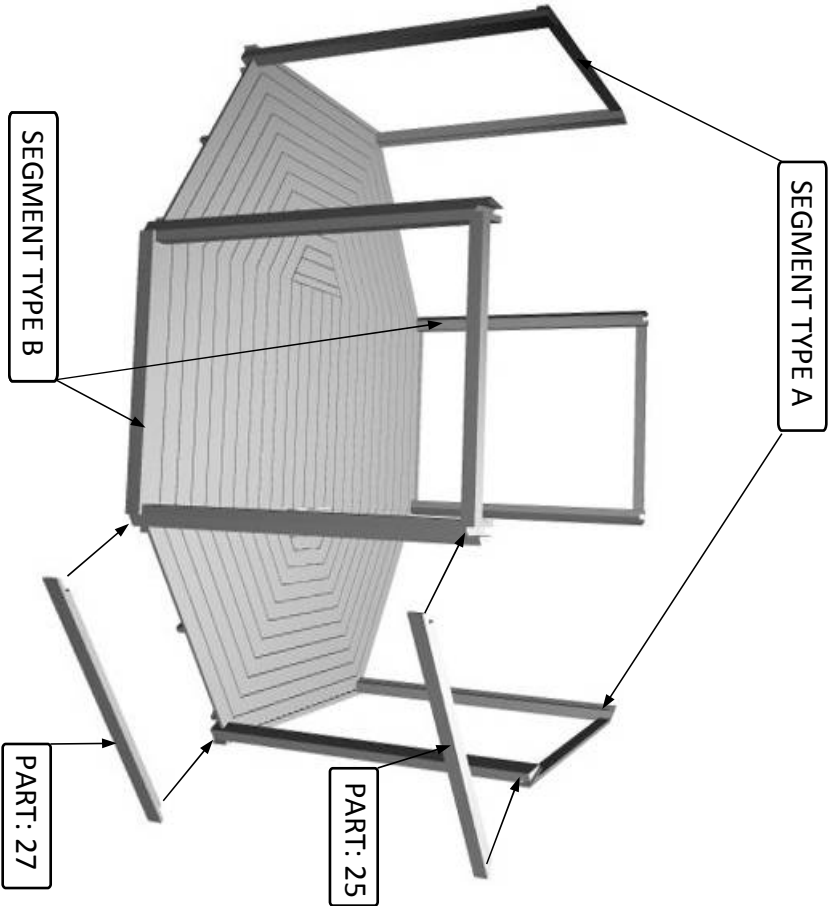

REPEAT STEP 7 – 4 TIMES

STEP 8

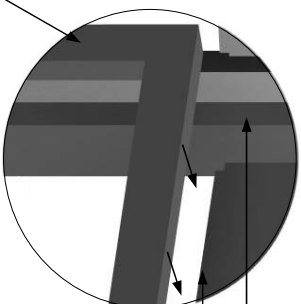


PART: 1

PART: 25

INSIDE VIEW

PART: 8

PART: 1, 3

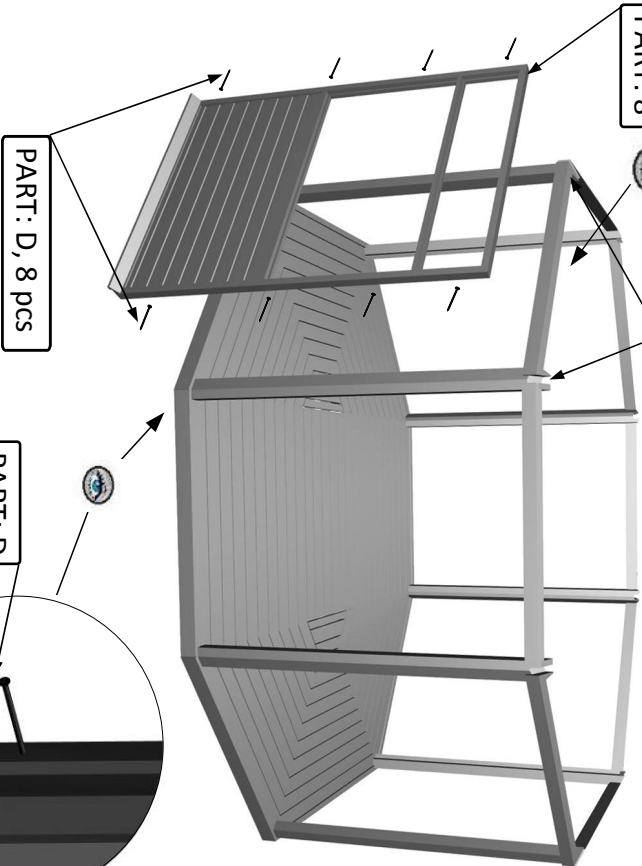


INSIDE VIEW


PART: 8

PART: 1


STEP 9

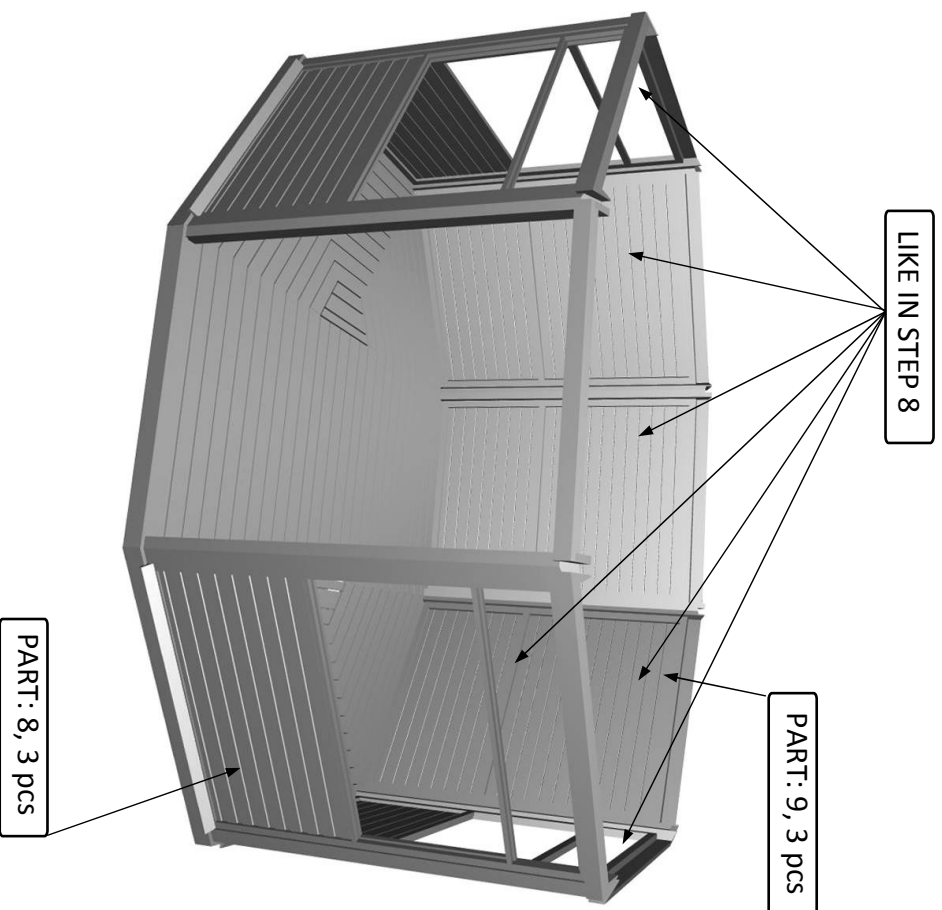


STEP 10

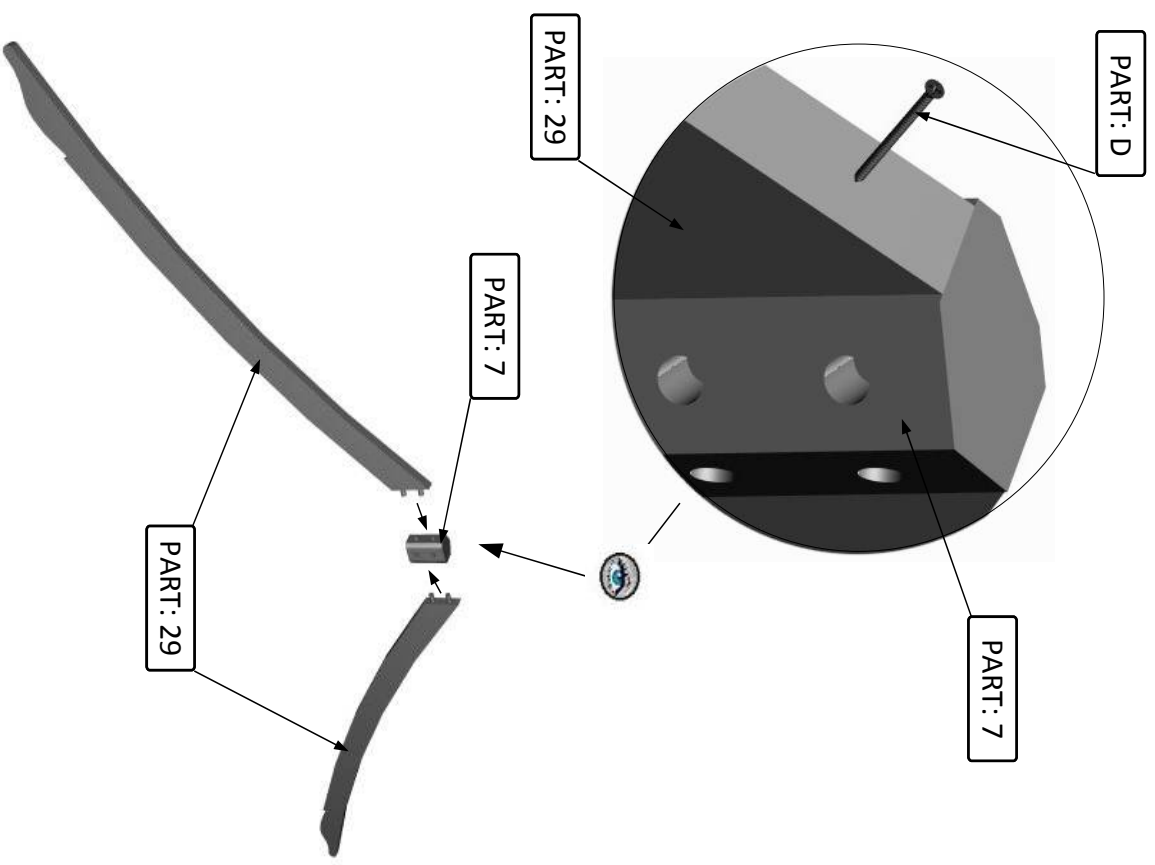

STEP 11

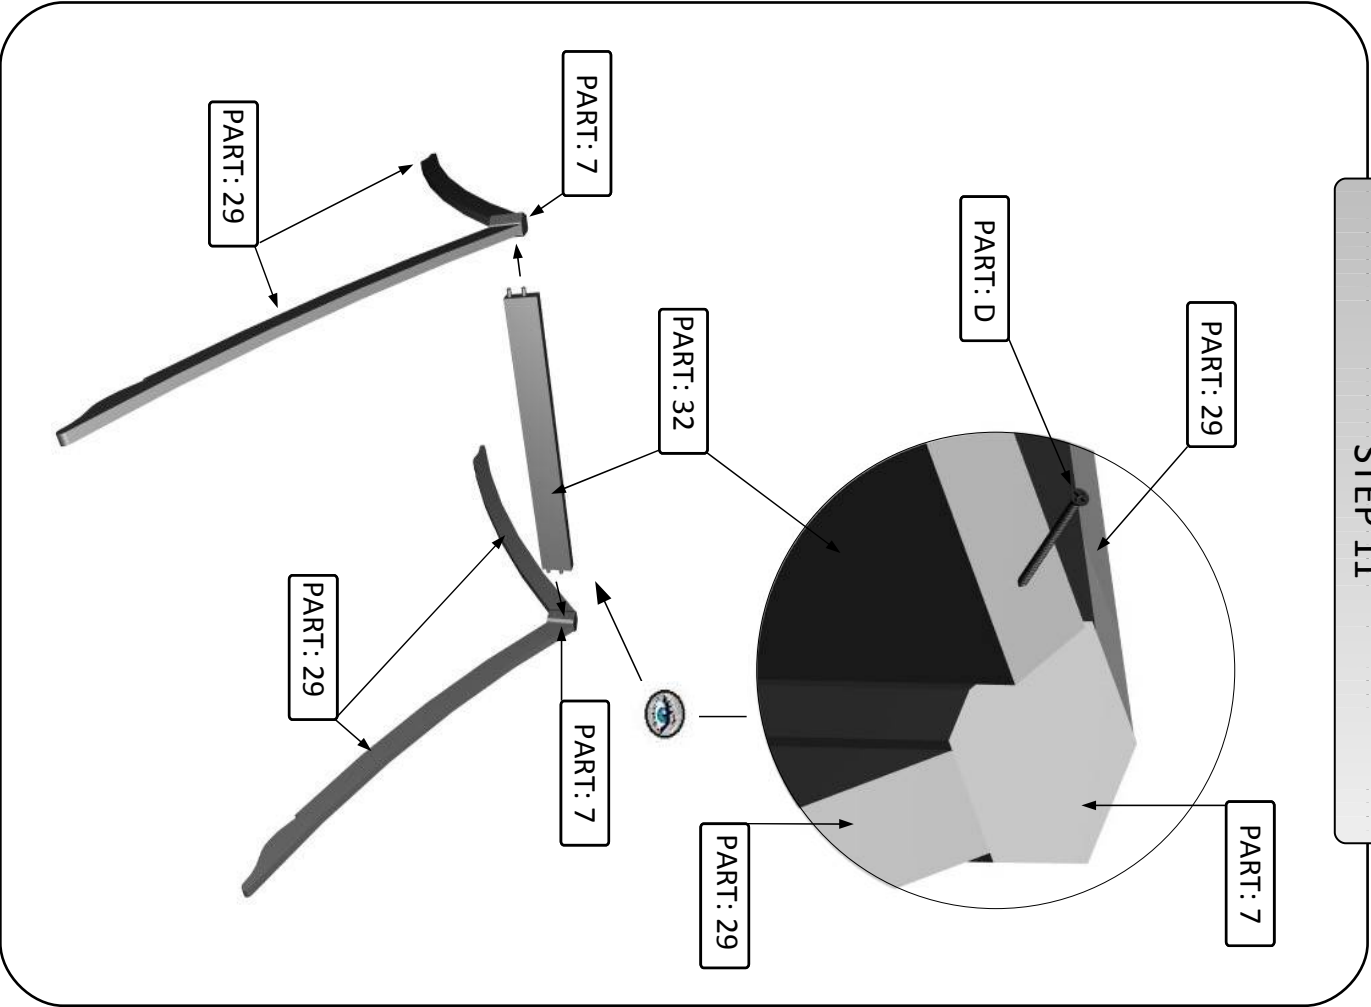


STEP 12

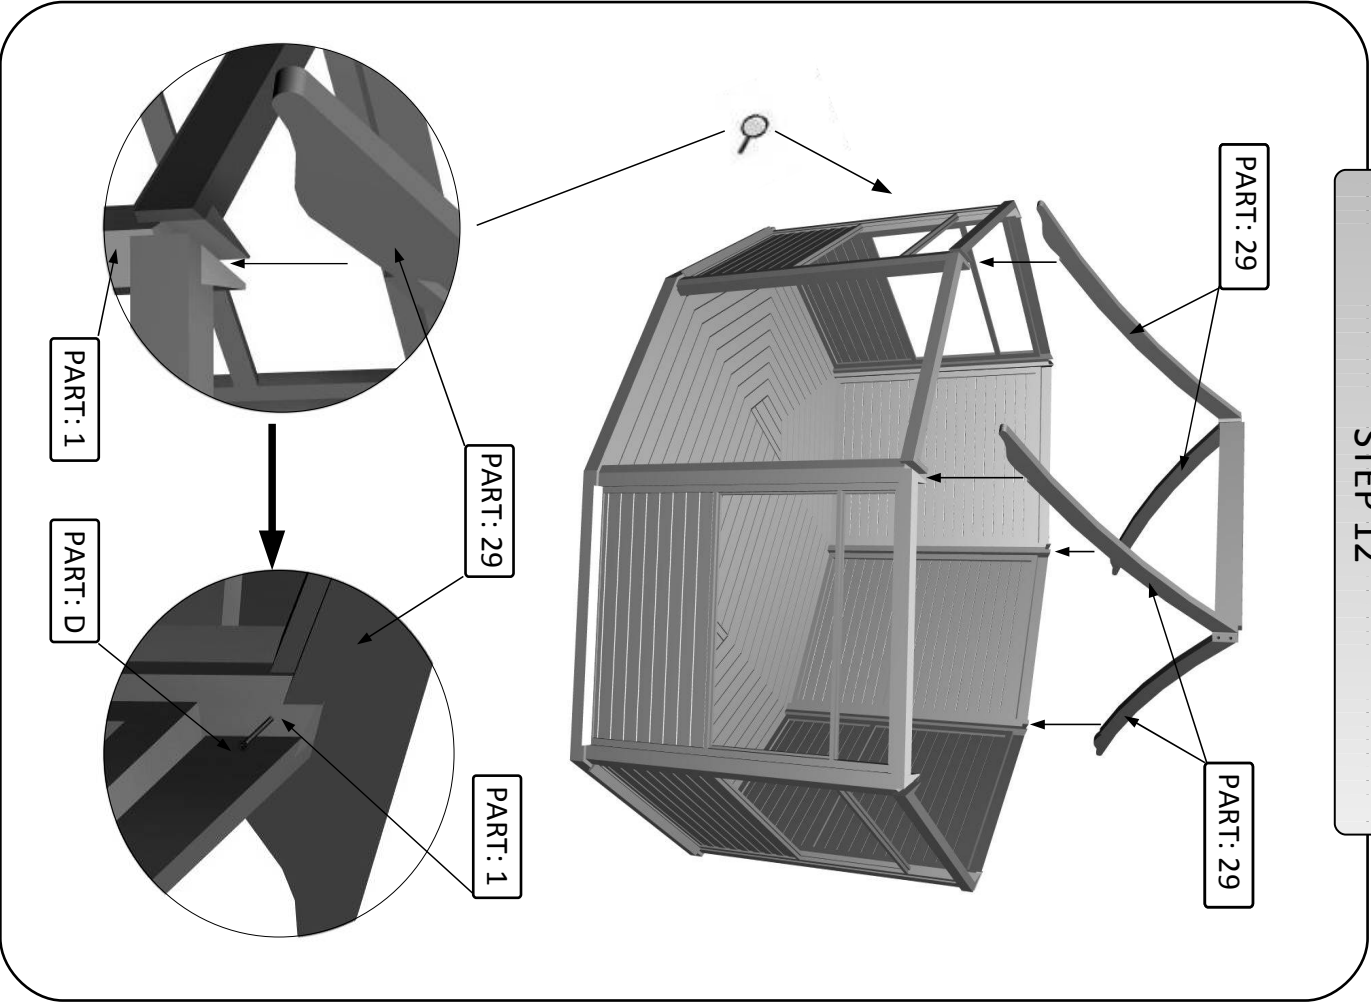


STEP 13


LIKE IN STEP 10, 12

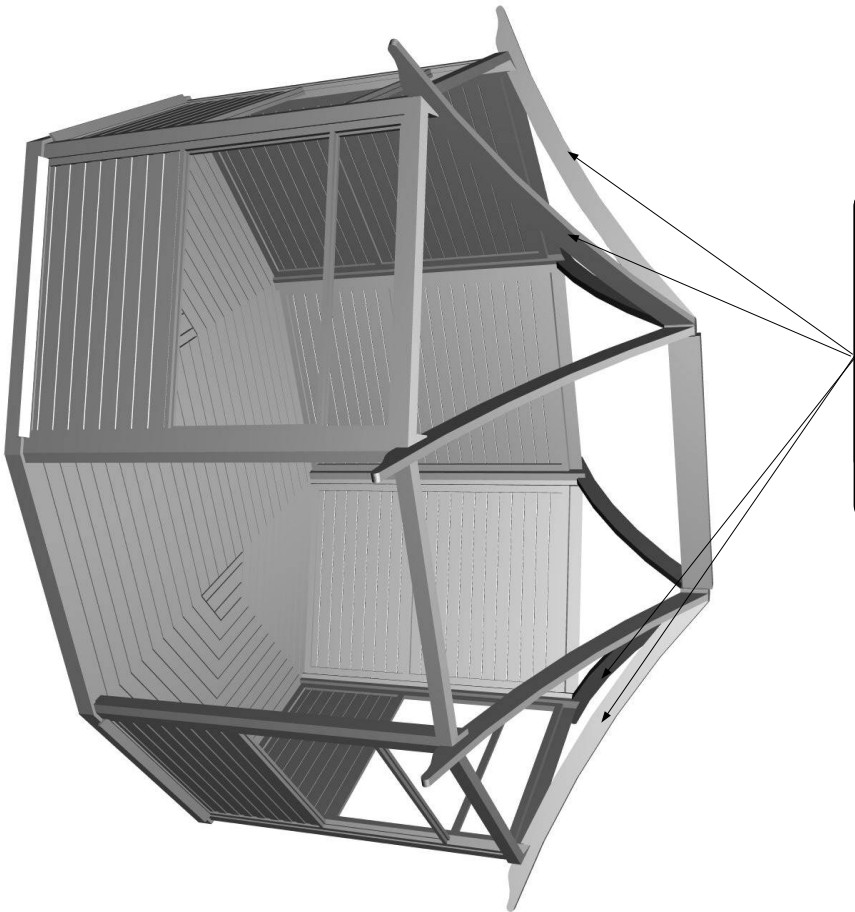


STEP 14

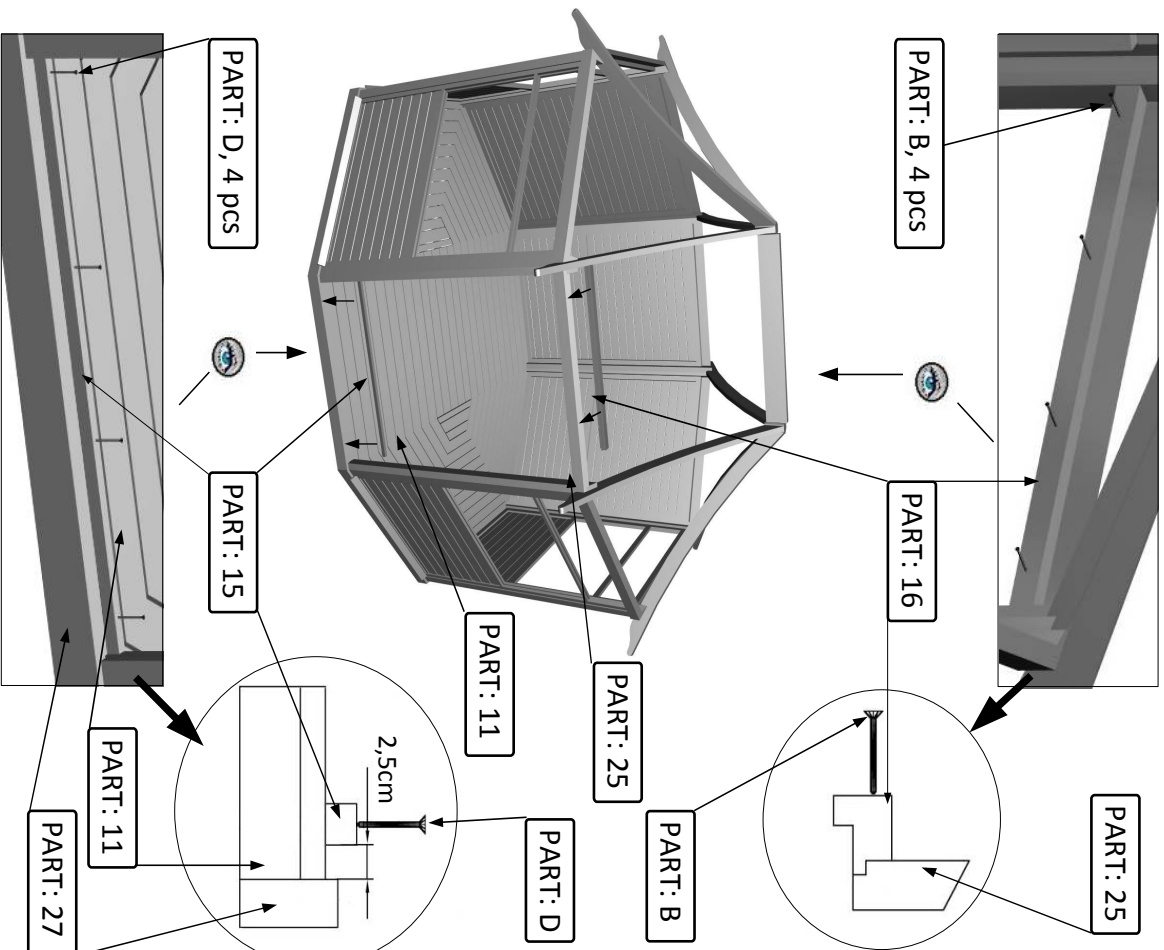

STEP 15

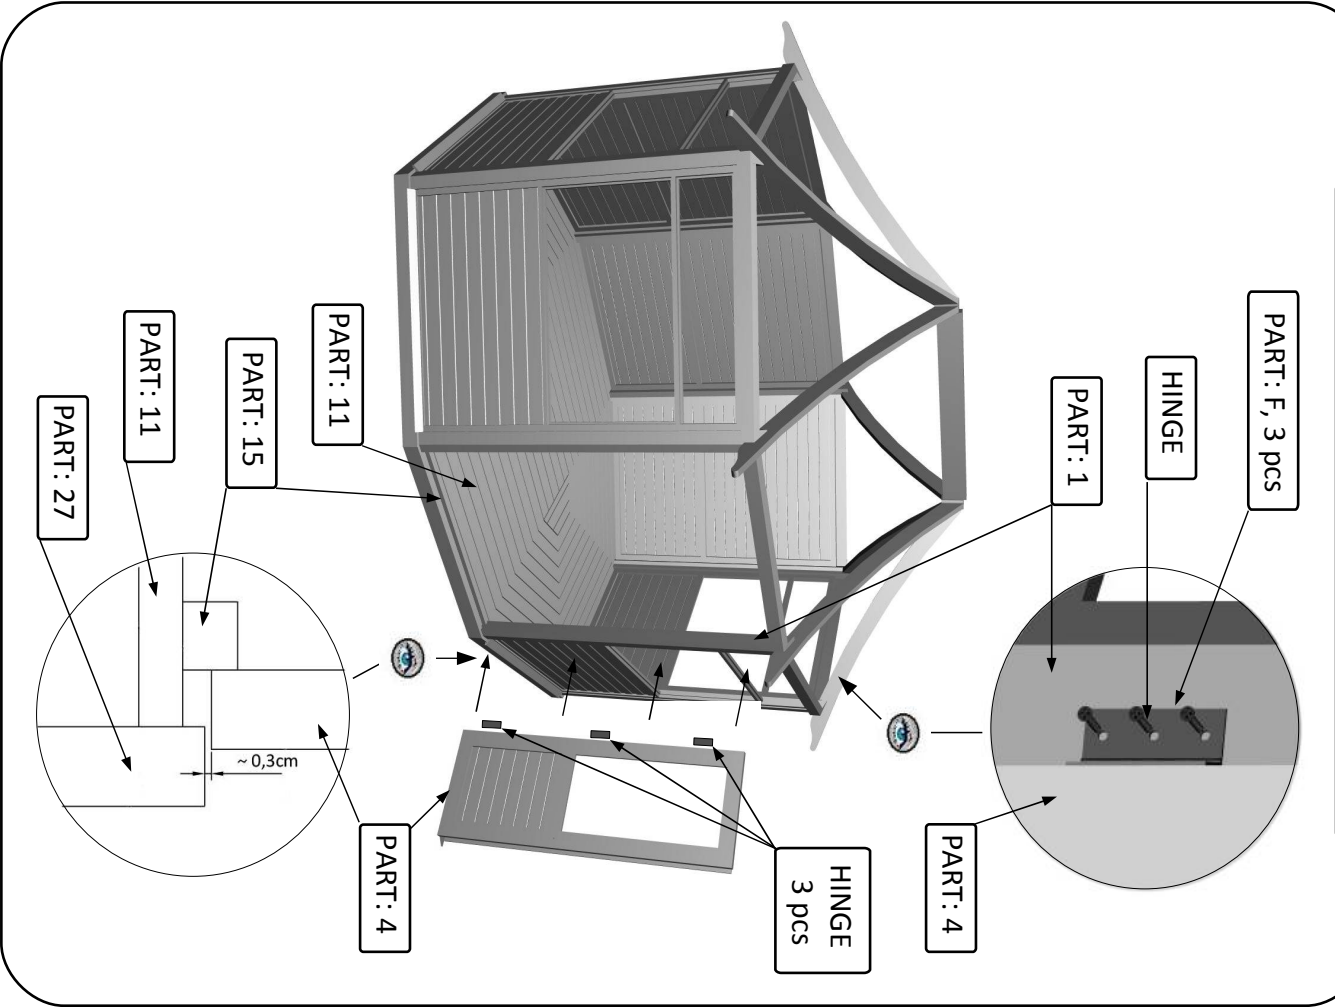


STEP 16

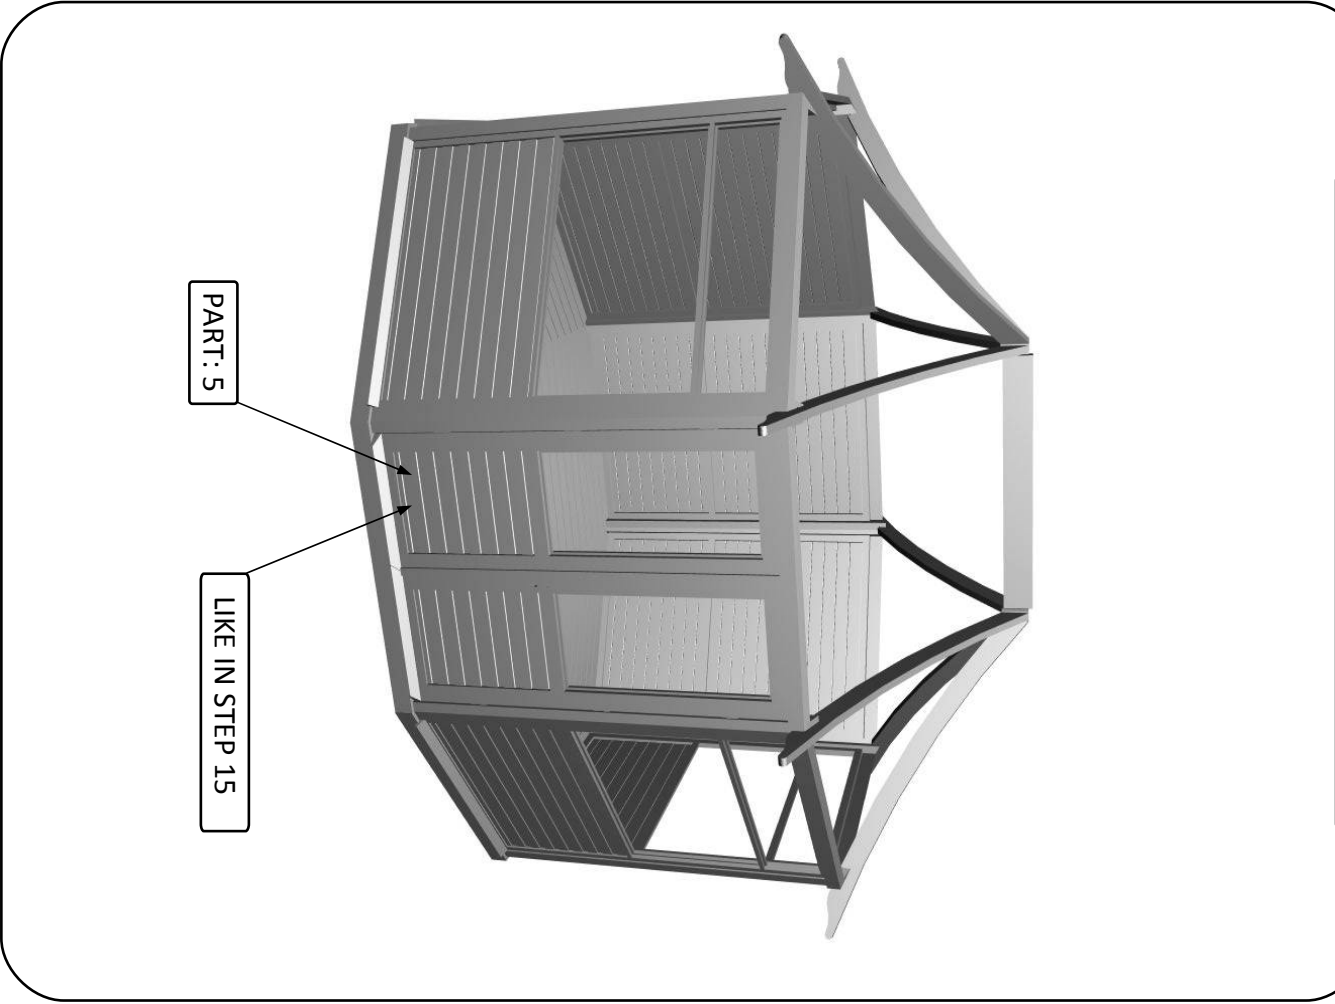


STEP 17

INSTALL WINDOW (PART: 39) LIKE AS DOOR IN STEP 15
HINGES IN WINDOW HAVE TO BE AT THE TOP

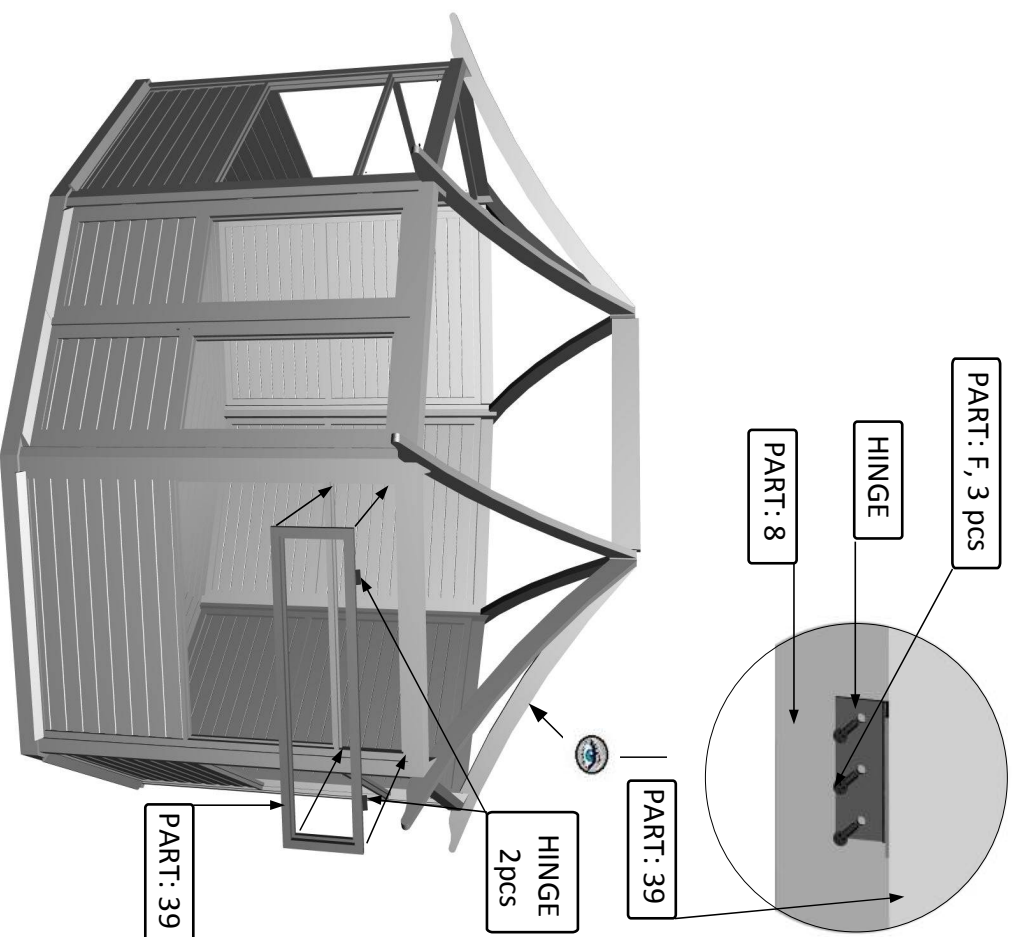


REPEAT STEP 17 – 4 TIMES

STEP 18

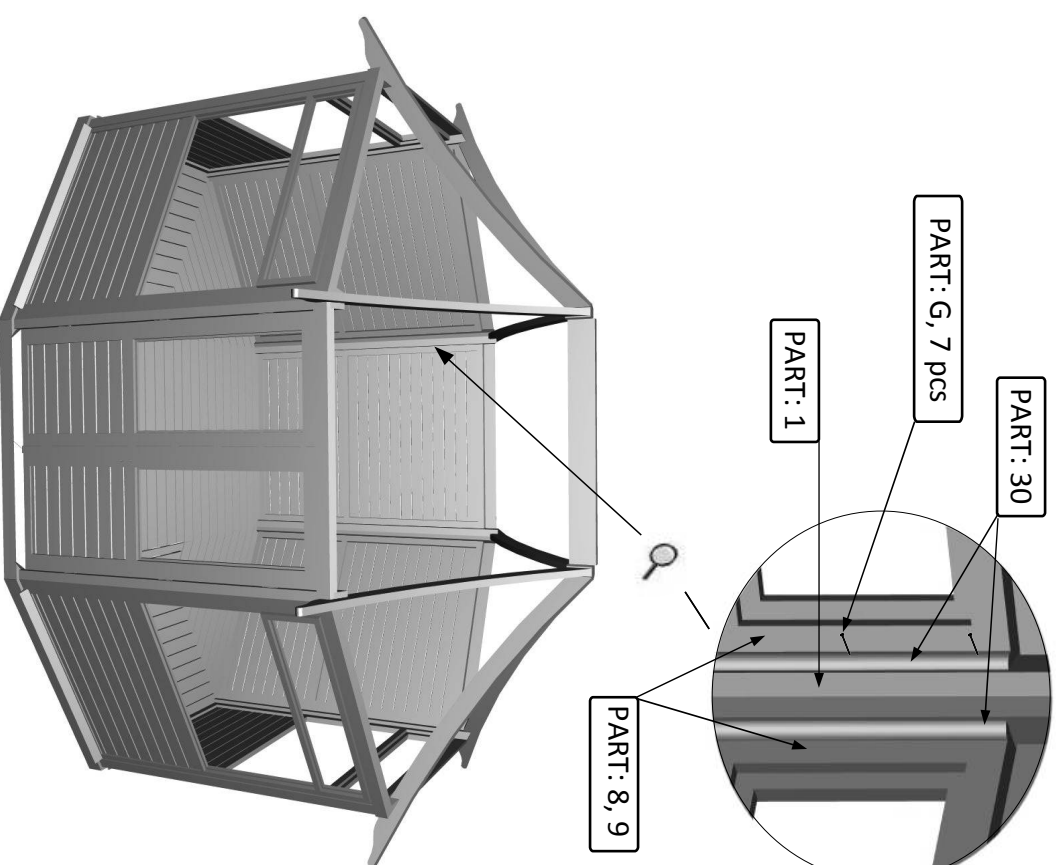

FOR ASSEMBLE PART: 30 IN THE CORNER FROM BOTH SIDES
OF COLUMNS (PART: 1,2,3) USE NAILS PART: G (7 pcs TO PART: 30)


STEP 19

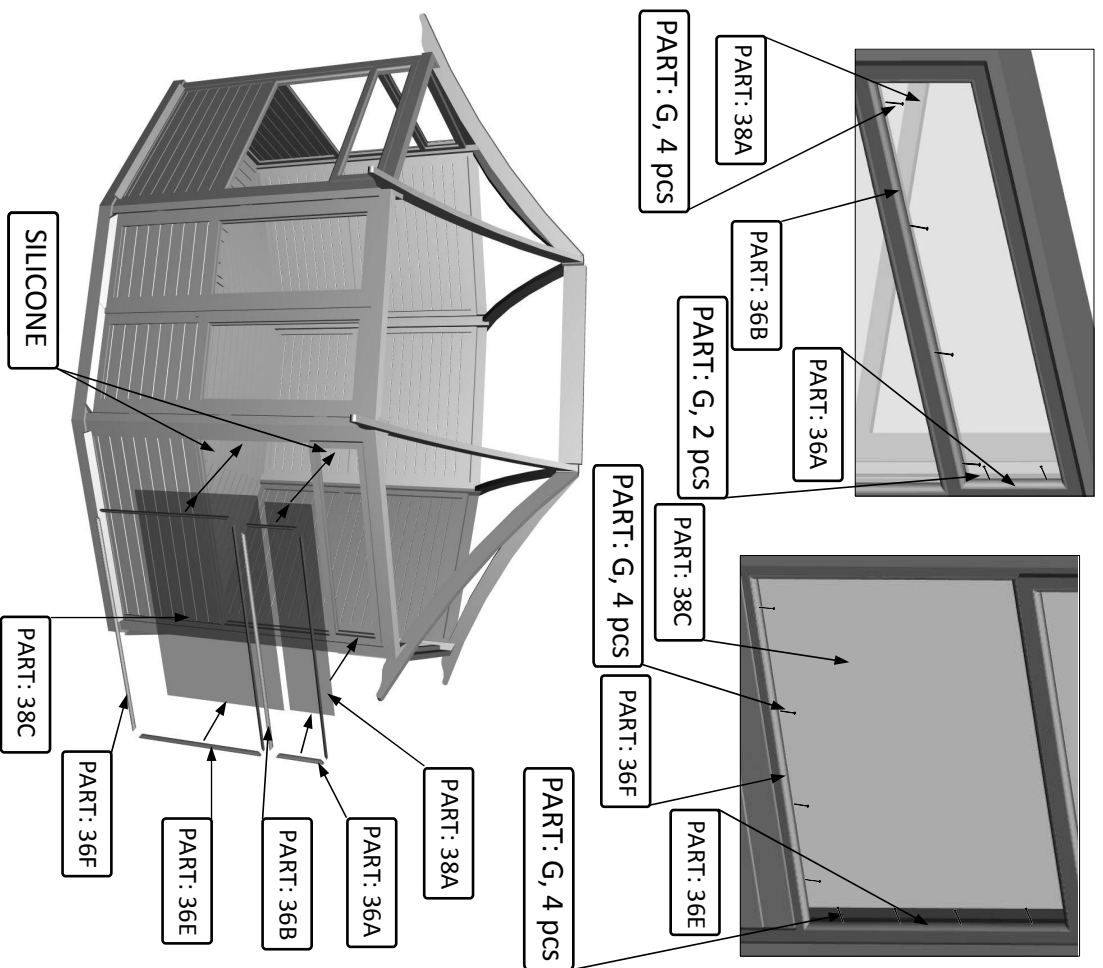


FIRST PUT THE SILICONE ON THE EDGES, THEN ASSEMBLE THE GLASS (PART: 38),
USE NAILS PART: G TO ASSEMBLE QUADRANT BEAD (PART: 36)

REPEAT STEP 19 – 4 TIMES


STEP 20

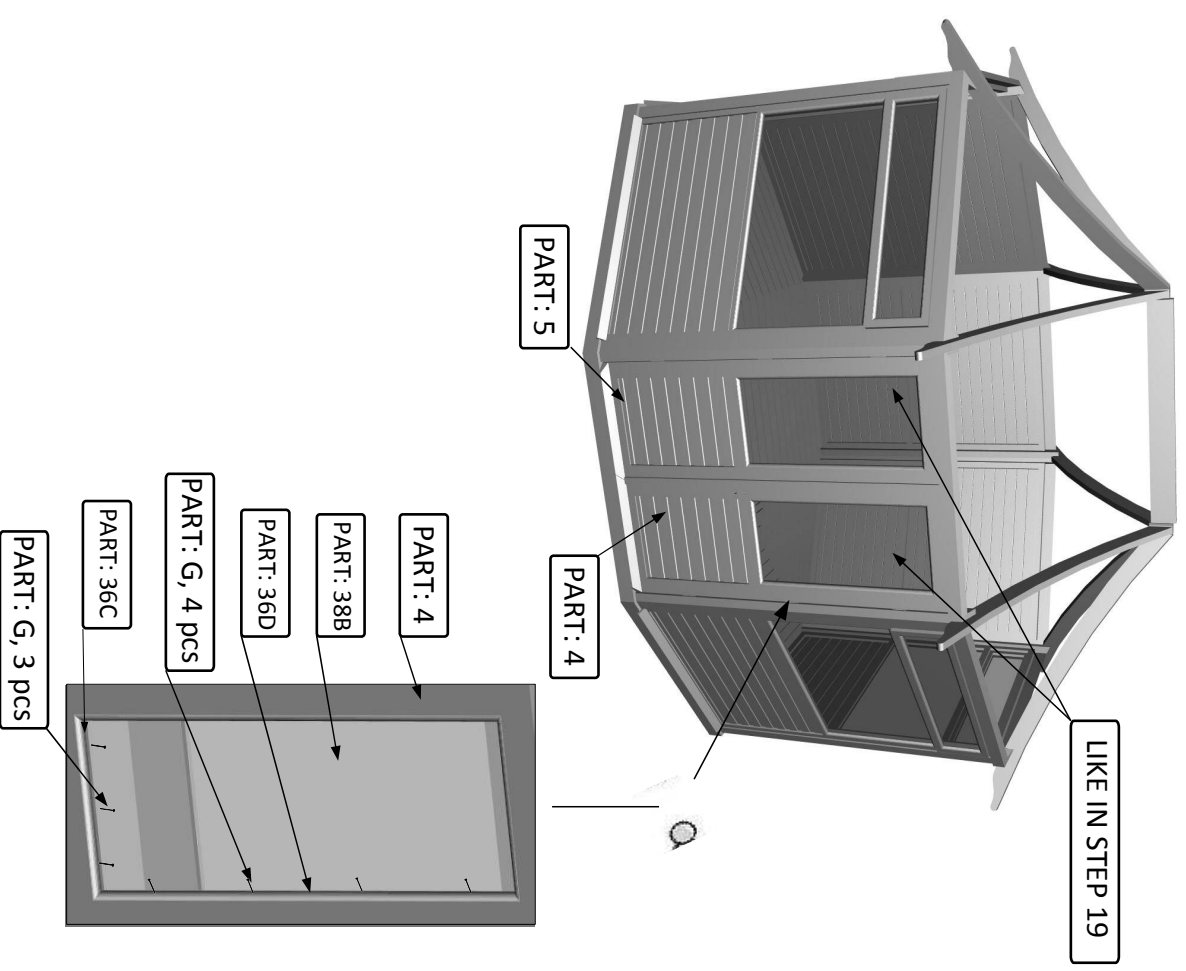


STEP 21

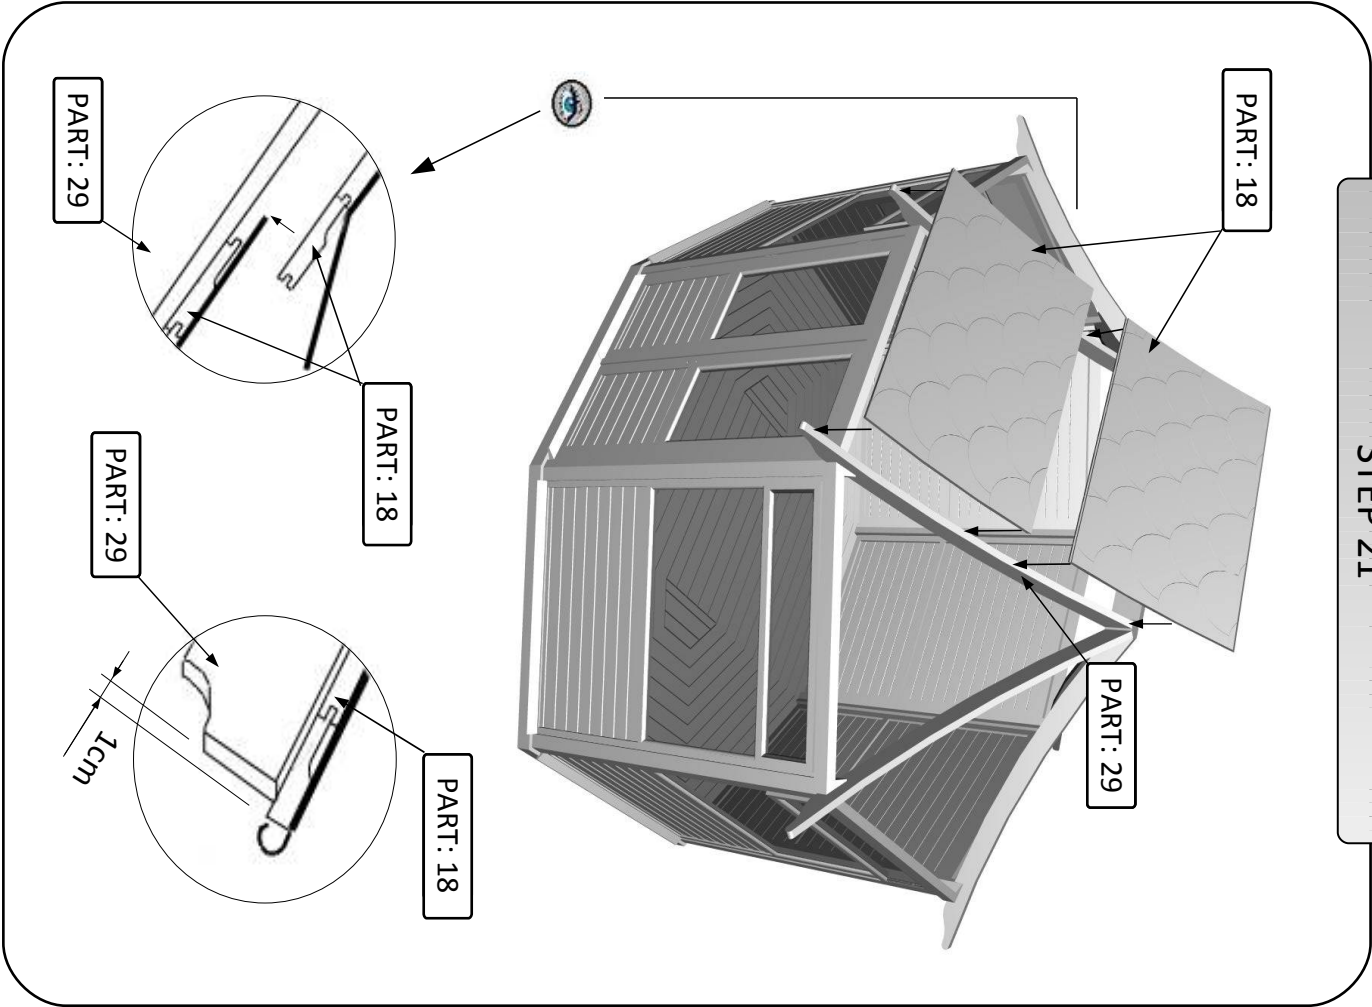

STEP 22

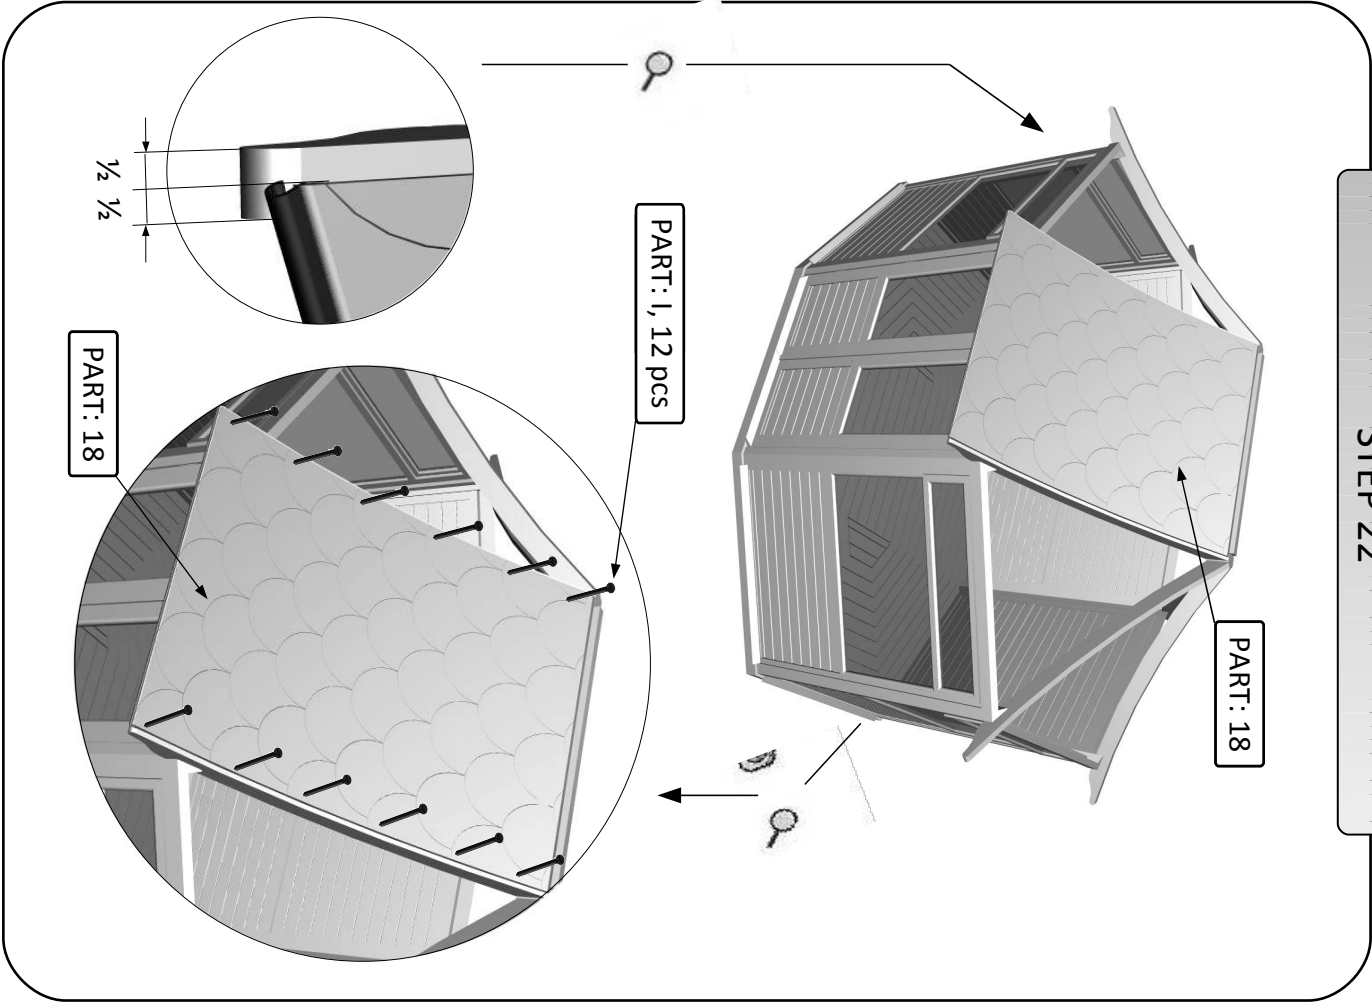


STEP 23

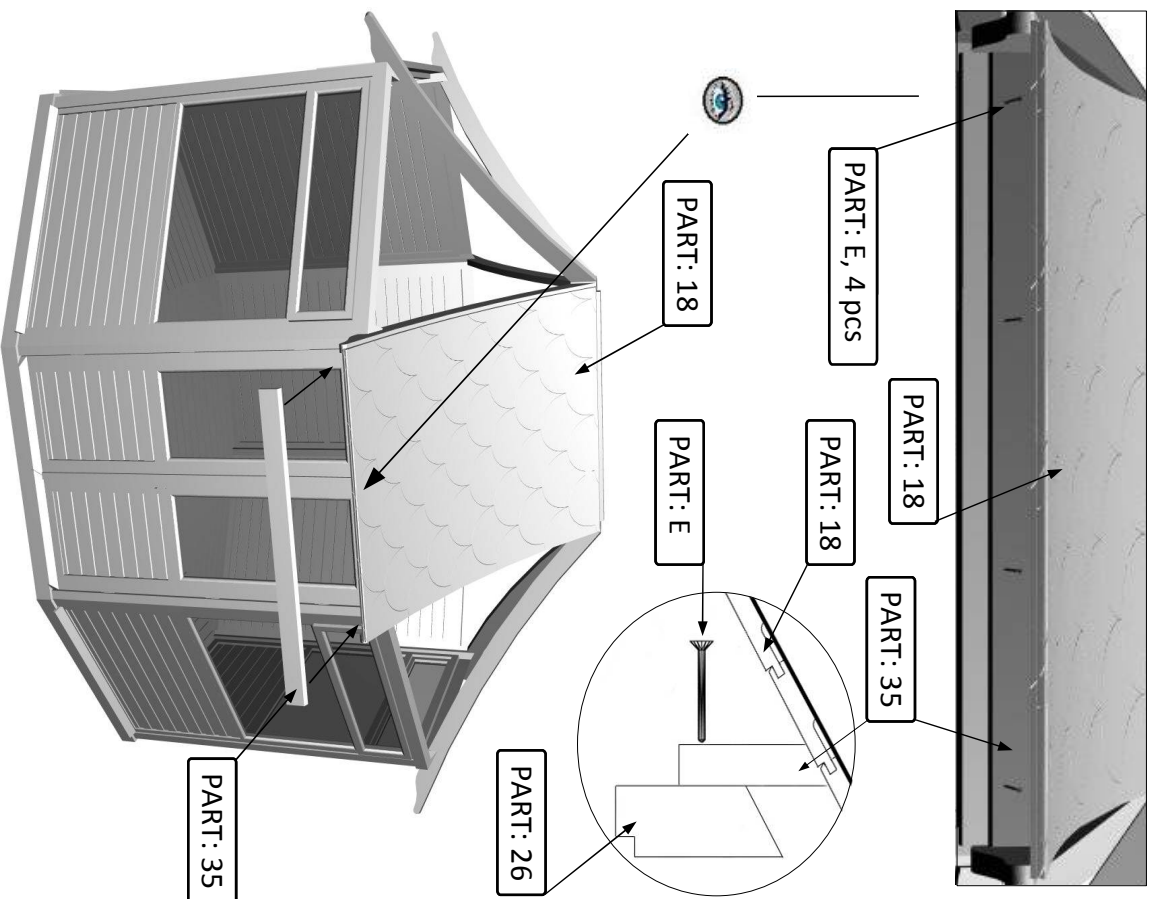


REPEAT STEP: 21, 22, 23 – 2 TIMES


STEP 24

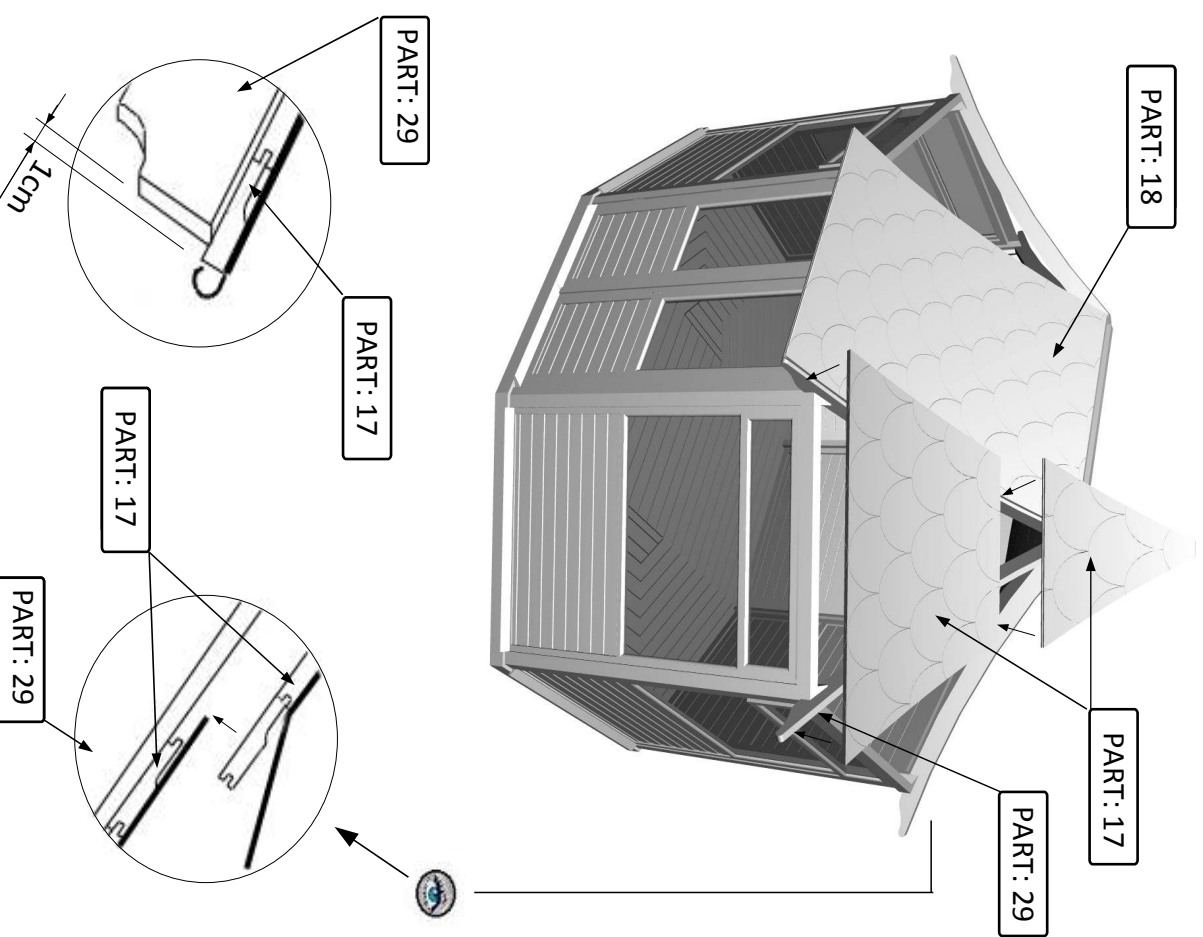

STEP 24

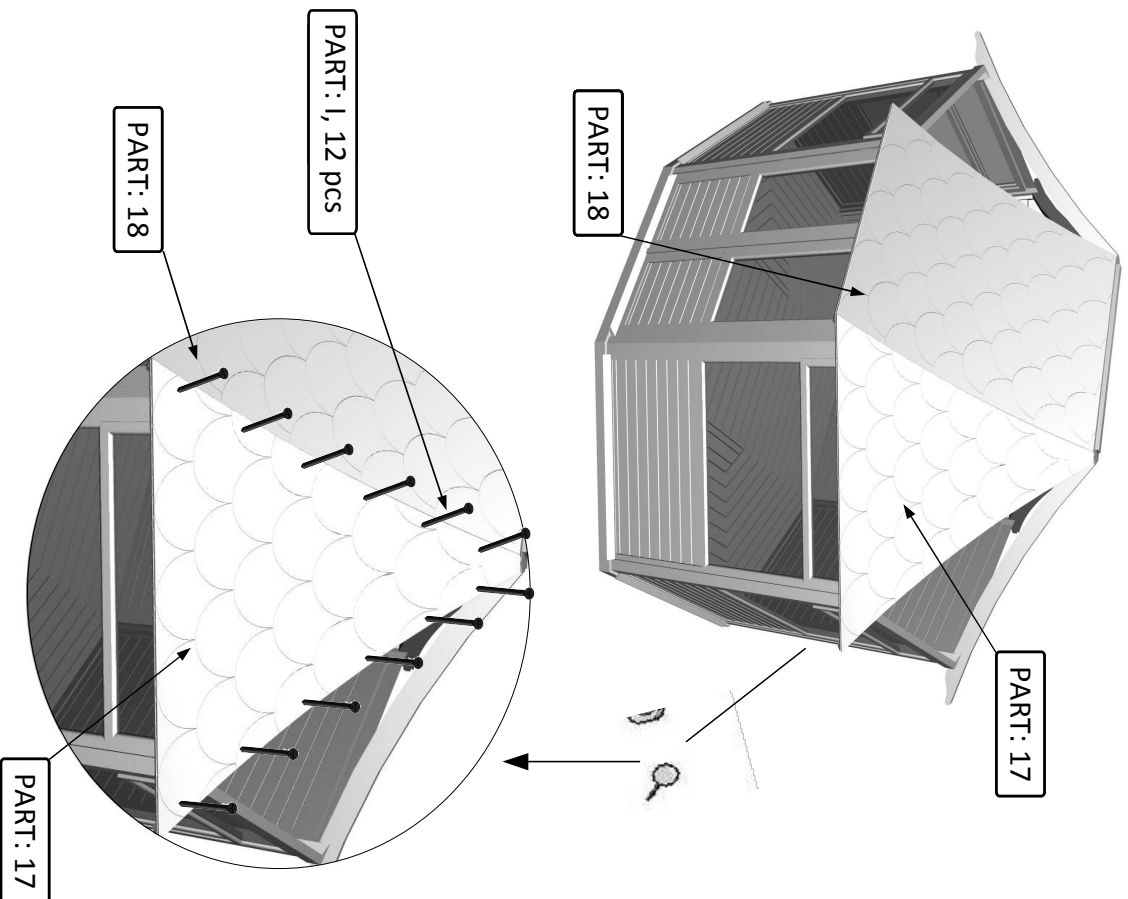


STEP 26

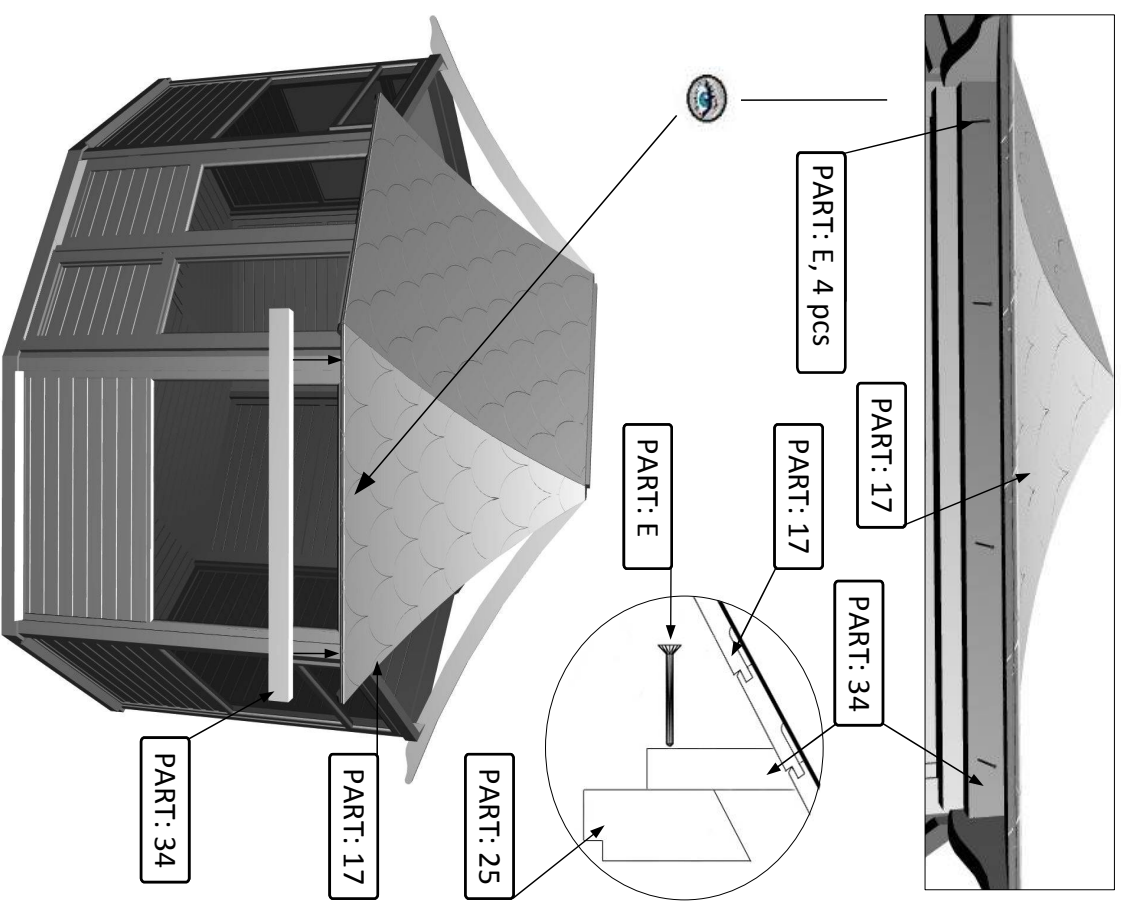


REPEAT STEP: 24, 25, 26 – 6 TIMES

STEP 27

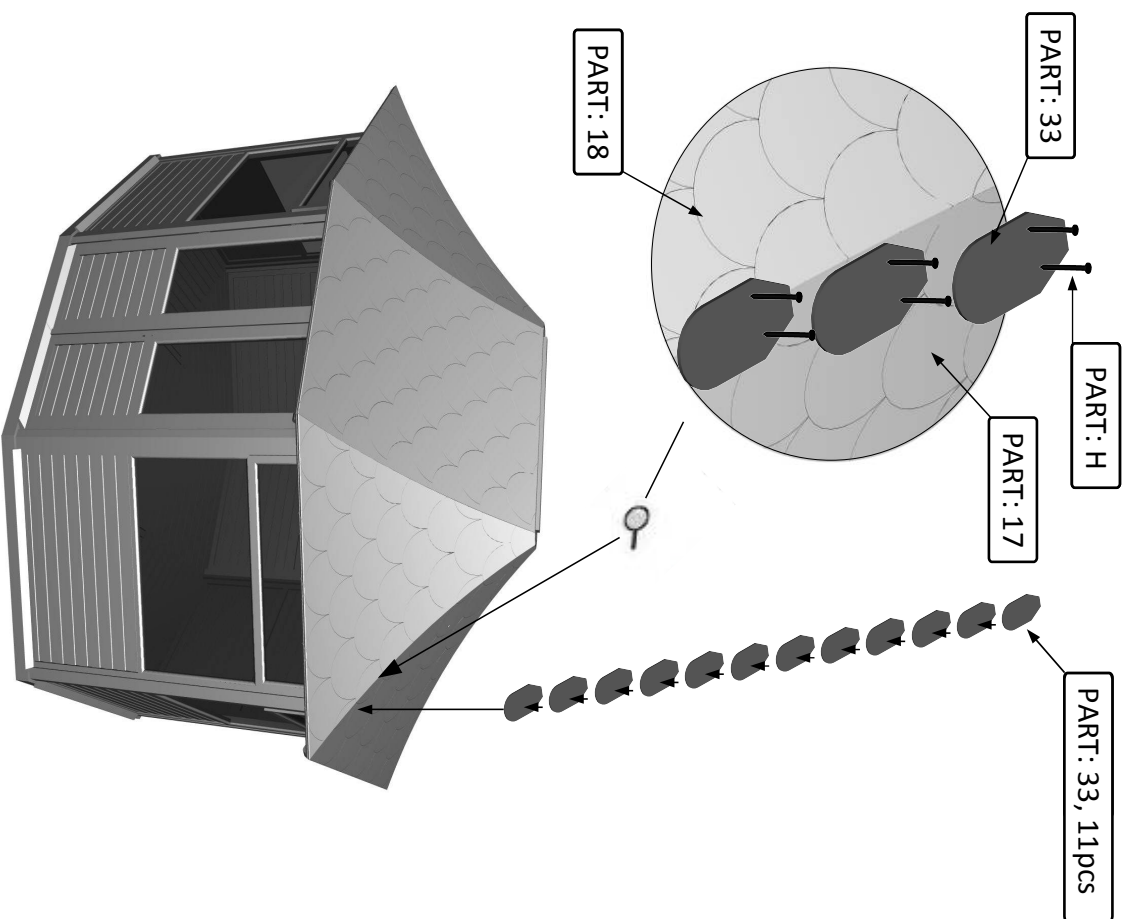


REPEAT STEP 27 AROUND THE ROOF

STEP 28

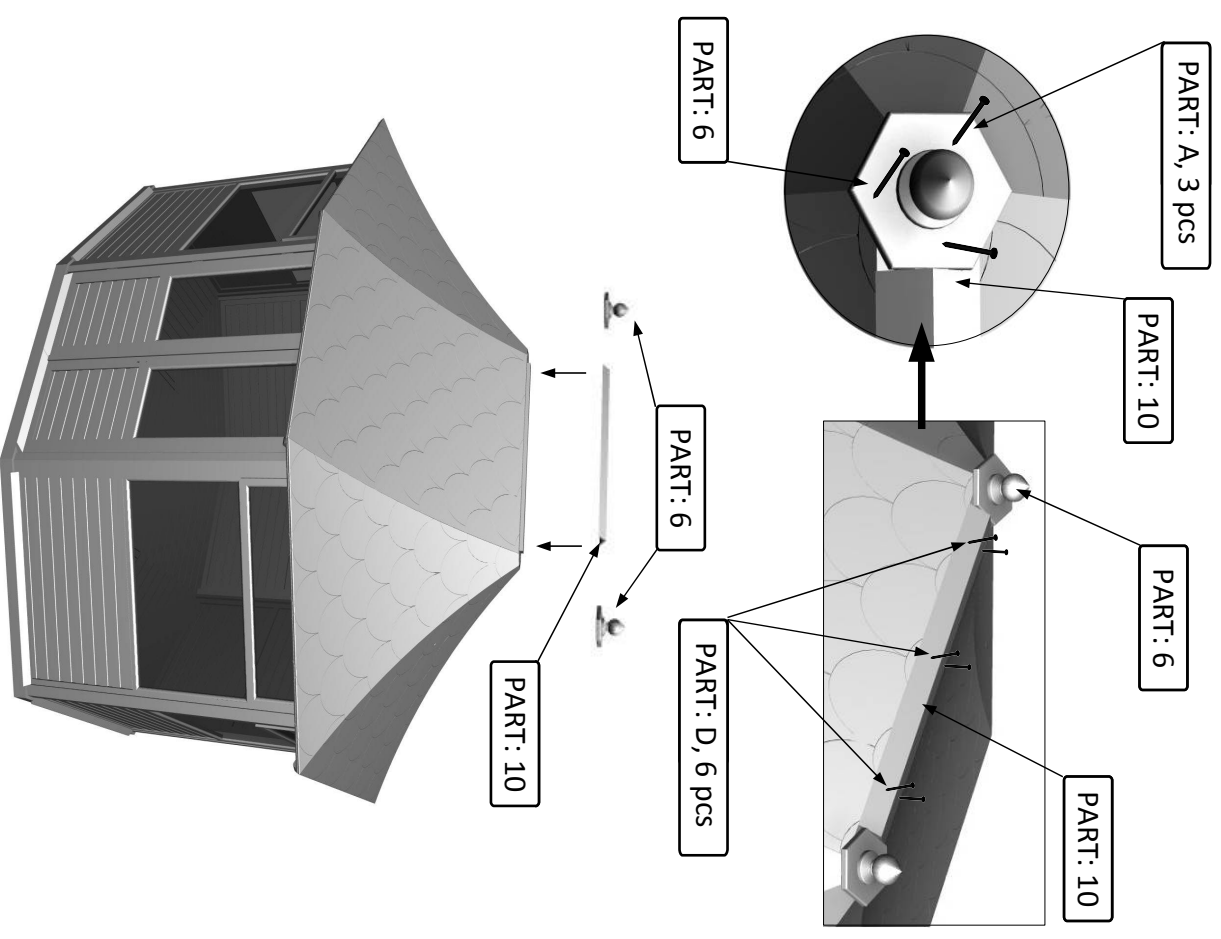

STEP 29


PUT BELT OF LEAD ON ROOF (PART: 18, 17)
THEN USE WOODEN SCRIBER TO COMPENSATE LEAD (PART: 31)

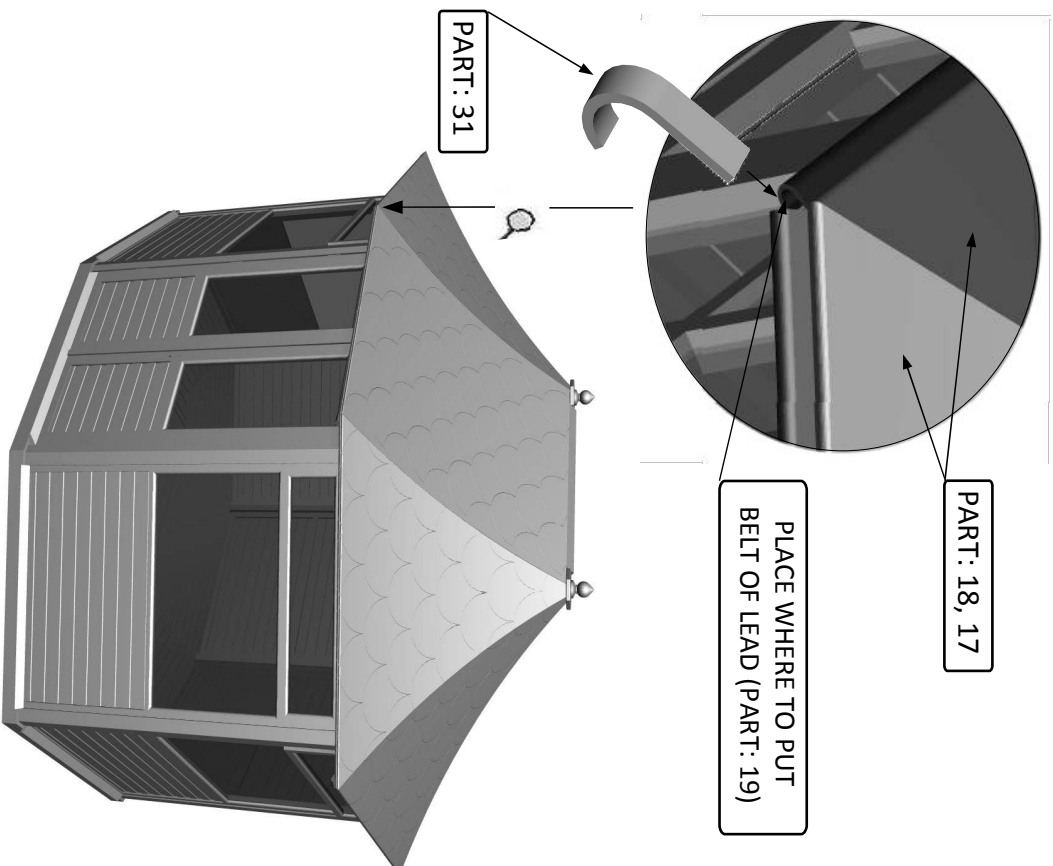

REPEAT STEP: 29 AROUND THE ROOF

STEP 30


MARK THE POSITION PART: 37

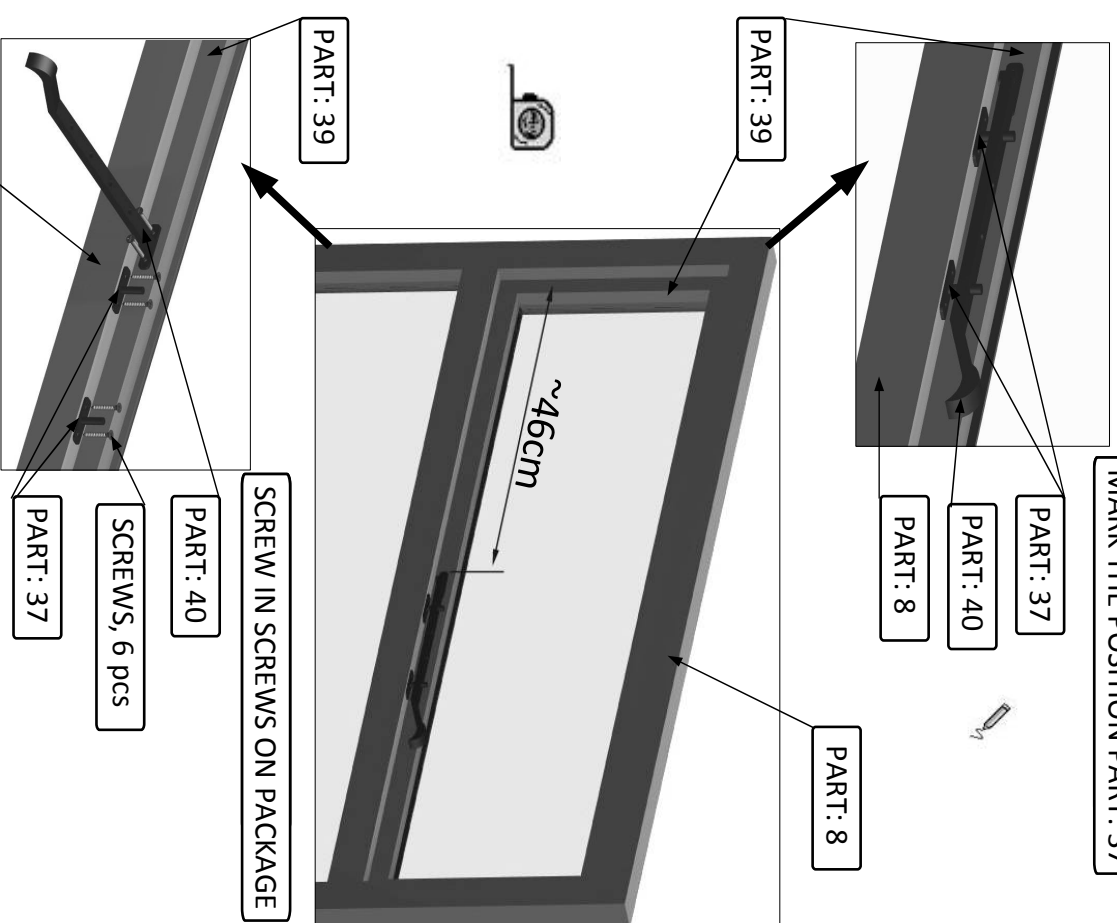


SCREW IN SCREWS ON PACKAGE

REPEAT STEP 30 – 4 TIMES


STEP 31

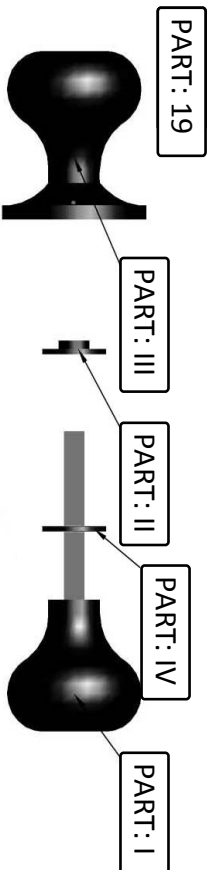

PUT PART: I FROM INTERNAL SIDE DOOR TO THE HOLE IN LOCK
THEN SCREW PART: II USE SCREWS FROM PACKAGE

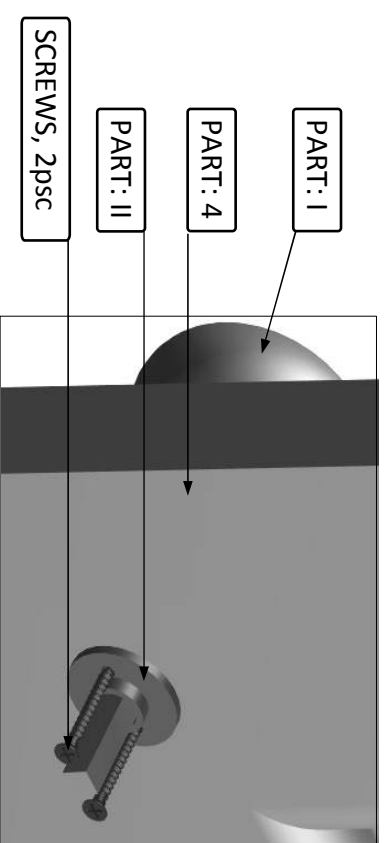


PUT PART: III ON PART: II AND SCREW USE SCREWS FROM PACKAGE

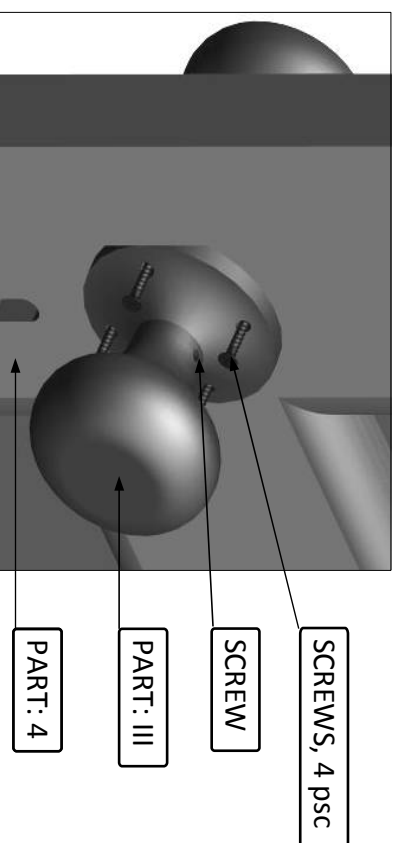

STEP 32

APPLY PART: 21 TO THE HOLE BELOW PART: 19
PUT THE KEY TO THE LOCK
AND PLACE PART: 21 SO THAT THE KEY BE IN THE MIDDLE
THEN SCREW USE SCREWS FROM PACKAGE

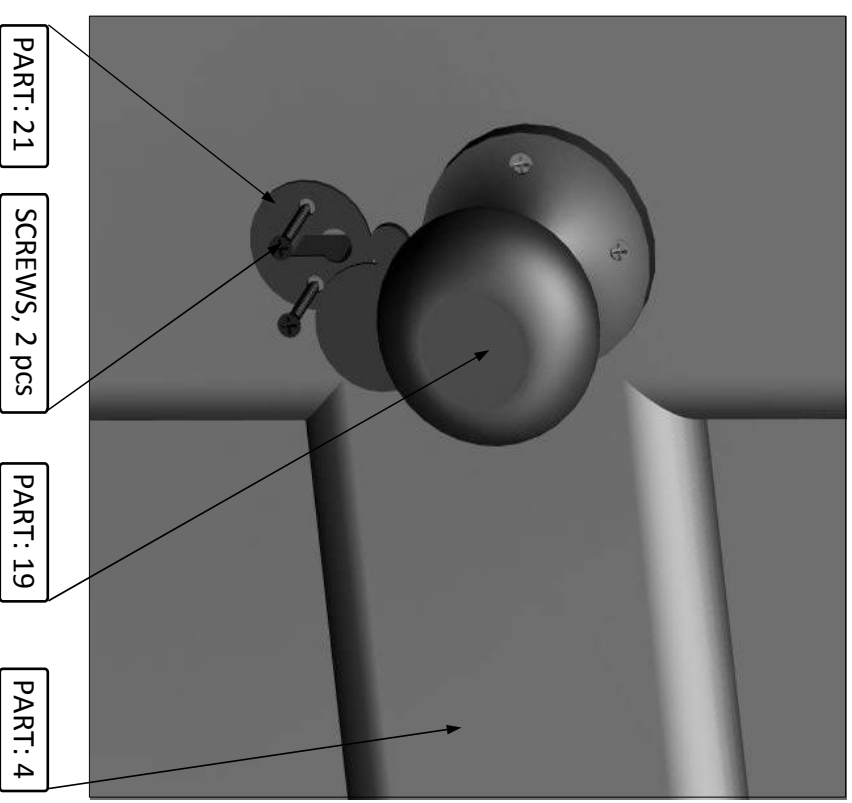


STEP 33

SCREW IN PART: 23 TO DOOR (PART: 5)
USE SCREWS FROM PACKAGE

SCREWS, 4 pcs

PART: 23

PUT PART: 24 ON PART: 23 SO THAT THE
HOLE FIT ON THE PIN, THEN MARK POSITION

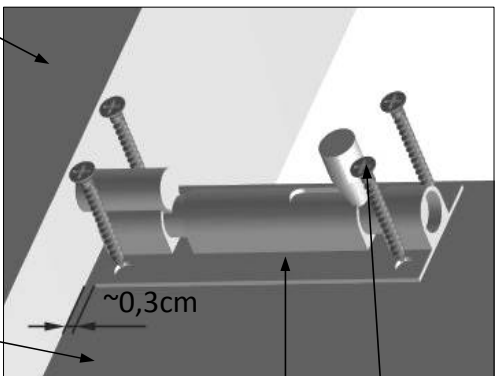


PART: 15

PART: 5

PART: 23

BORE HOLE USE DRILL DIAMETER 8
ON THE DEPTH 2cm
THEN SCREW USE SCREWS FROM
PACKAGE

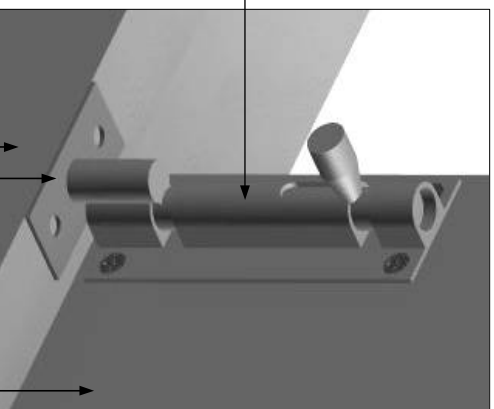

SCREWS, 2 pcs


PART: 15

PART: 24

DRILL

PART: 24

PART: 15

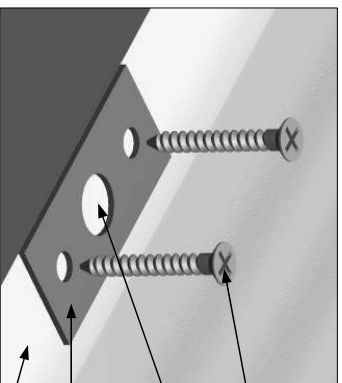

REPEAT STEP 33 AT THE TOP OF DOOR (PART: 5)

STEP 34


SCREW PART: 22 TO COLUMN (PART: 1)
USE SCREWS FROM PACKAGE

SCREWS, 2 pcs

PART: 22

PART: 1,2,3

OPEN DOOR TO THE MOMENT WHERE
YOU WANT TO BLOCK IT THEN APPLY
PART: 20 AND MARK POSITION

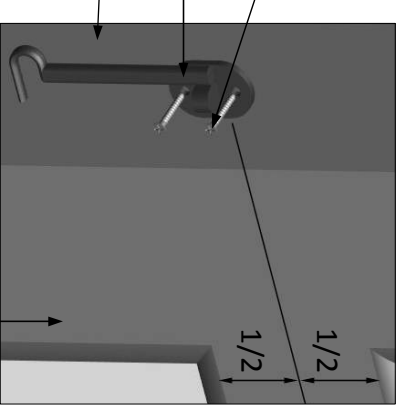


PART: 8

PART: 4

PART: 20

SCREW IN PART: 21 USE
SCREWS FROM PACKAGE

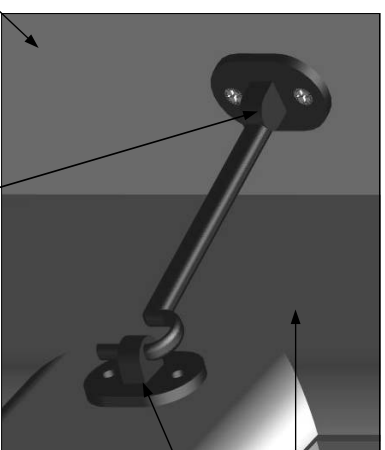


PART: 1,2,3

PART: 22

SCREWS, 2 pcs

PART: 20

PART: 5

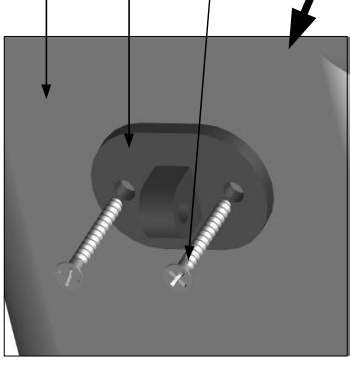

REPEAT STEP 34 AT THE SECOND SIDE OF DOOR