



Georgian Summerhouse

PRODUCT C42203

2x



PART: 1


6 pcs



POST

PART: 2


6 pcs



BOTTOM RING BEAM

PART: 3

6 pcs



TOP RING BEAM

PART: 4

6 pcs



ROOF RAFTER

PART: 5


2 pcs



SASH PANEL

PART: 6

1 pc

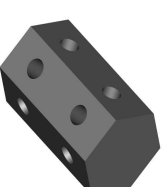

RAFTERS TIE

PART: 7

1 pc



DOOR (RIGHT)


PART: 8

1 pc




DOOR (LEFT)

PART: 9	2 pcs
---------	-------

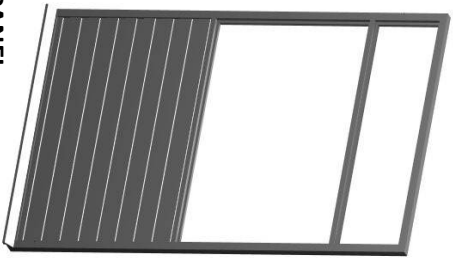

SASH PANEL

PART: 10	3 pcs
----------	-------

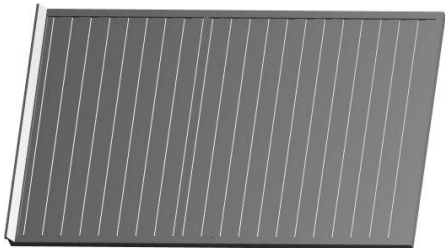

FULLY BOARDED PANEL

PART: 11	1 pc
----------	------




TOP DOOR STOP

PART: 12	1 pc
----------	------




BOTTOM DOOR STOP

PART: 14	6 pcs
----------	-------

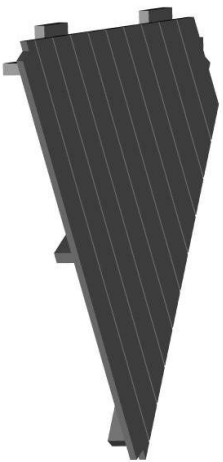


FLOOR PANEL

PART: 13	6 pcs
----------	-------

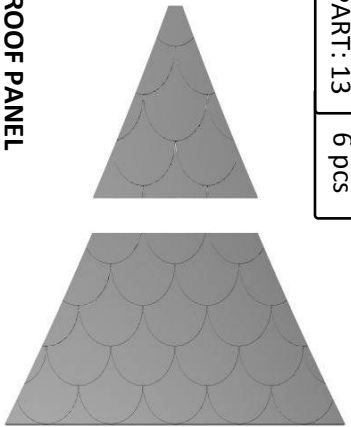

ROOF PANEL

PART: 15	1 pc
----------	------

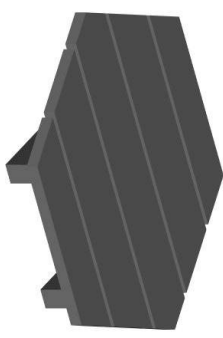


FLOOR BOSS

PART: 16	10 pcs	GLASS
----------	--------	--------------



25 x 95cm	A	2x
36 x 97cm	B	2x
72 x 100cm	C	2x

PART: 17	1 pc
----------	------

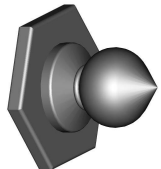

ROOF FINAL

PART: 18	66 pcs
----------	--------



TILE

PART: 19	36 pcs
----------	--------



25 cm	A	4x	97 cm	D	4x
95 cm	B	4x	72 cm	E	4x
36 cm	C	4x	100 cm	F	4x

QUADRANT BEAD

PART: 20	12 pcs	183 cm
----------	--------	--------



QUADRANT BEAD

PART: 21	2 pcs
----------	-------



BOLT KEEP

PART: 22	6 pcs
----------	-------



BELT OF LEAD

PART: 23	1 pc
----------	------



DOOR KNOB

PART: 24	1 pc
----------	------



ESYRUCION

PART: 25	4 pcs
----------	-------



WINDOW PEG

PART: 26	2 pcs
----------	-------



WINDOW STAY

PART: 27	2 pcs
----------	-------





EYE

PART: 28	2 pcs
----------	-------




HOOK

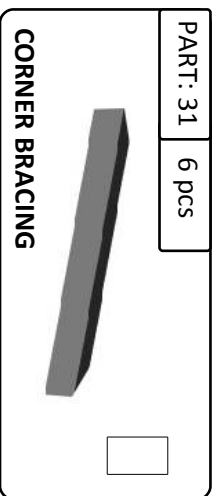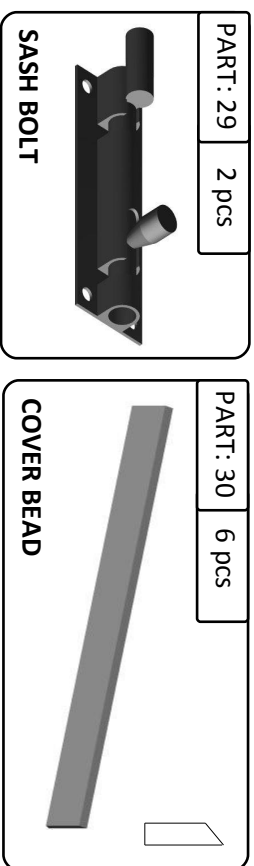

EXPLANATION



PART	FIXING HARDWARE	QUANTITY
A	5,0 x 90 mm 	3 pcs
B	5,0 x 80 mm 	16 pcs
C	5,0 x 60 mm 	60 pcs
D	4,5 x 60 mm 	90 pcs
E	3,5 x 40 mm 	24 pcs
F	4,0 x 25 mm 	30 pcs
G	1,2 x 25 mm 	168 pcs
H	2,5 x 35 mm 	132 pcs
I	2,5 x 50 mm 	72 pcs
SILICONE		1 pc
WOODEN SCRIBER		1 pc

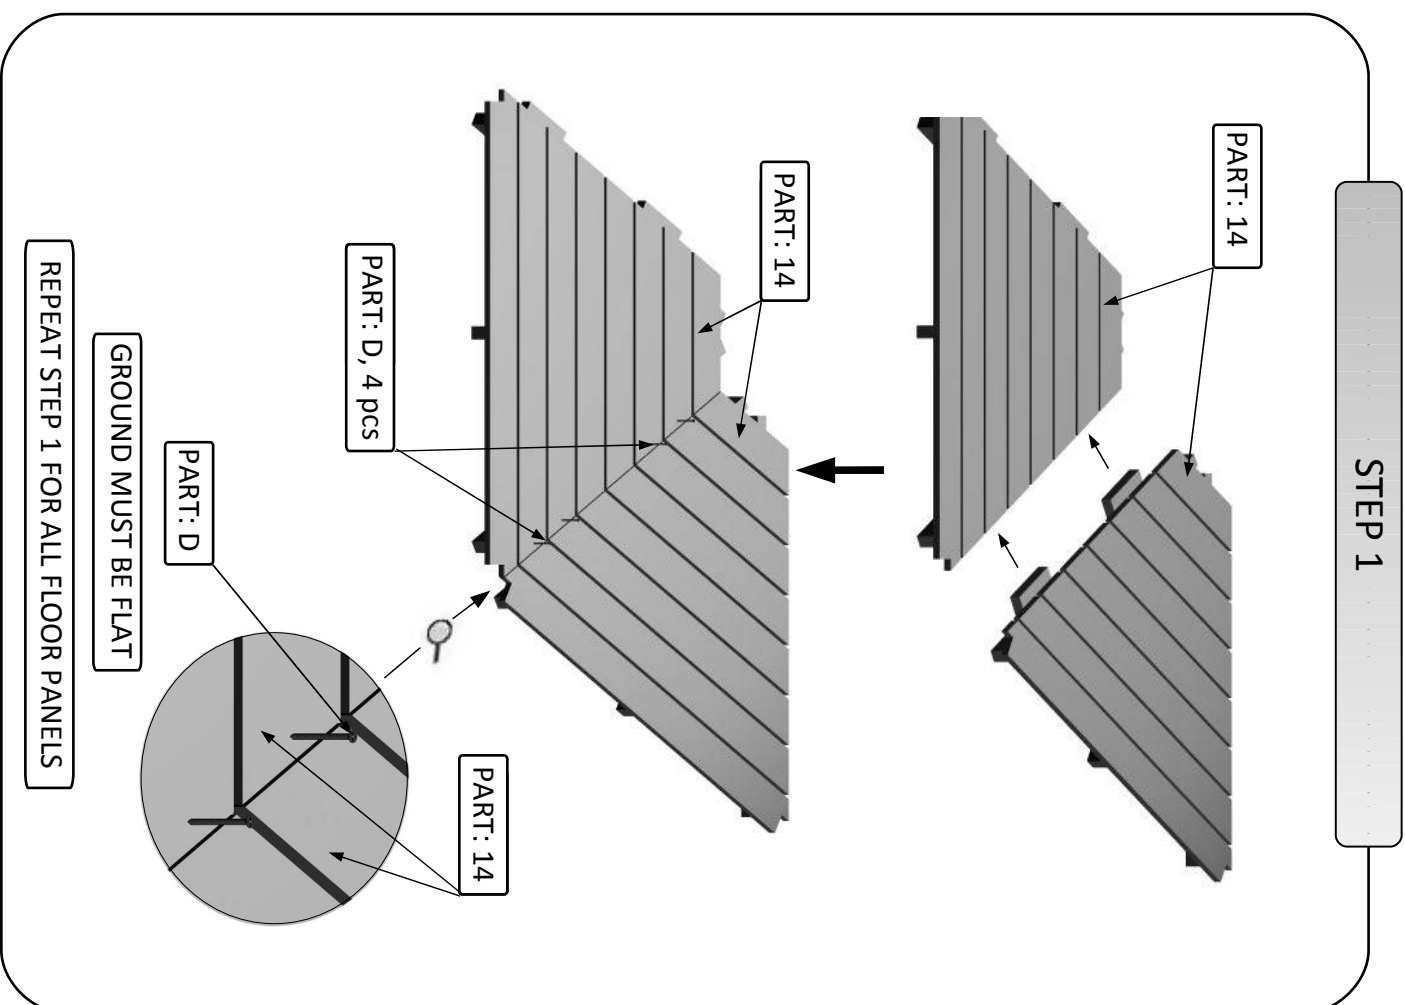

STEP 2

SEGMENT CREATED IN STEP 1

PART: 15

PART: 14

PART: 14

PART: D, 6 pcs

PART: 15

STEP 3

PART: C, 2 pcs

PART: 3

PART: 1

PART: 1

PART: 1


PART: 1

PART: 2


PART: C, 2 pcs

REPEAT STEP 3 – 3 TIMES


STEP 4

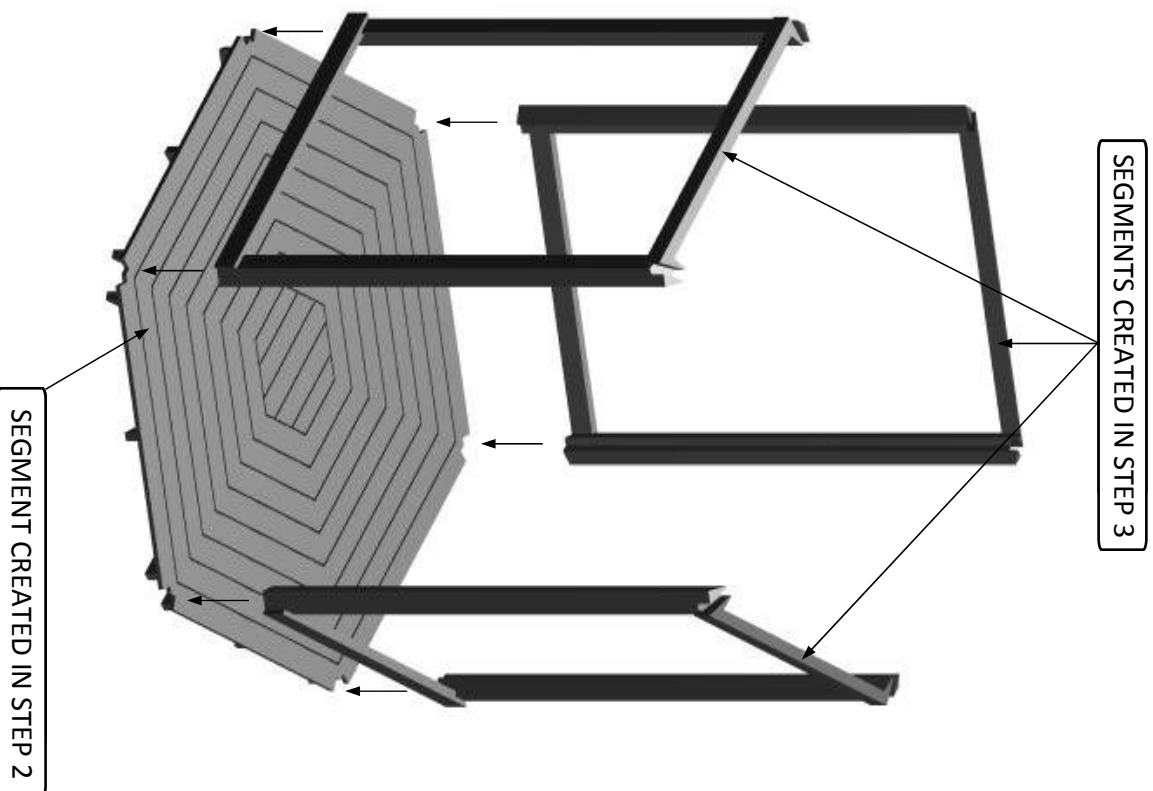


STEP 5

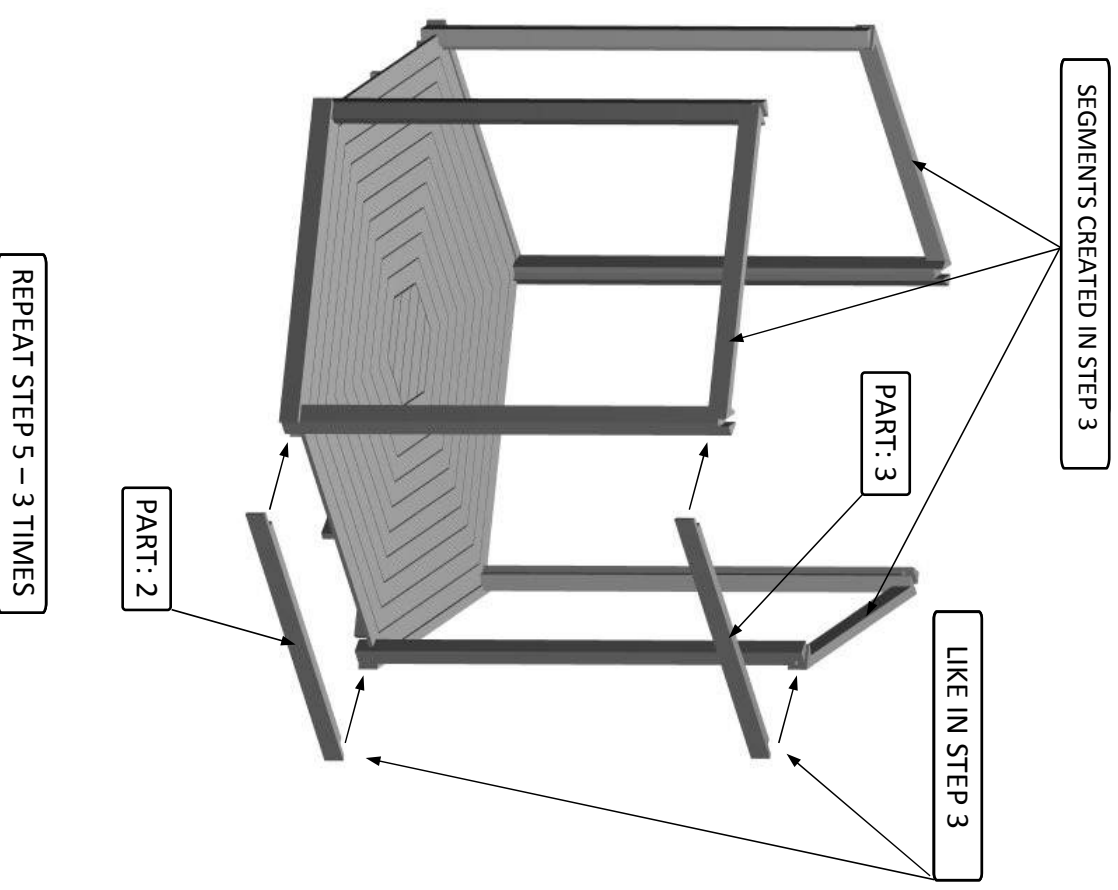


STEP 6

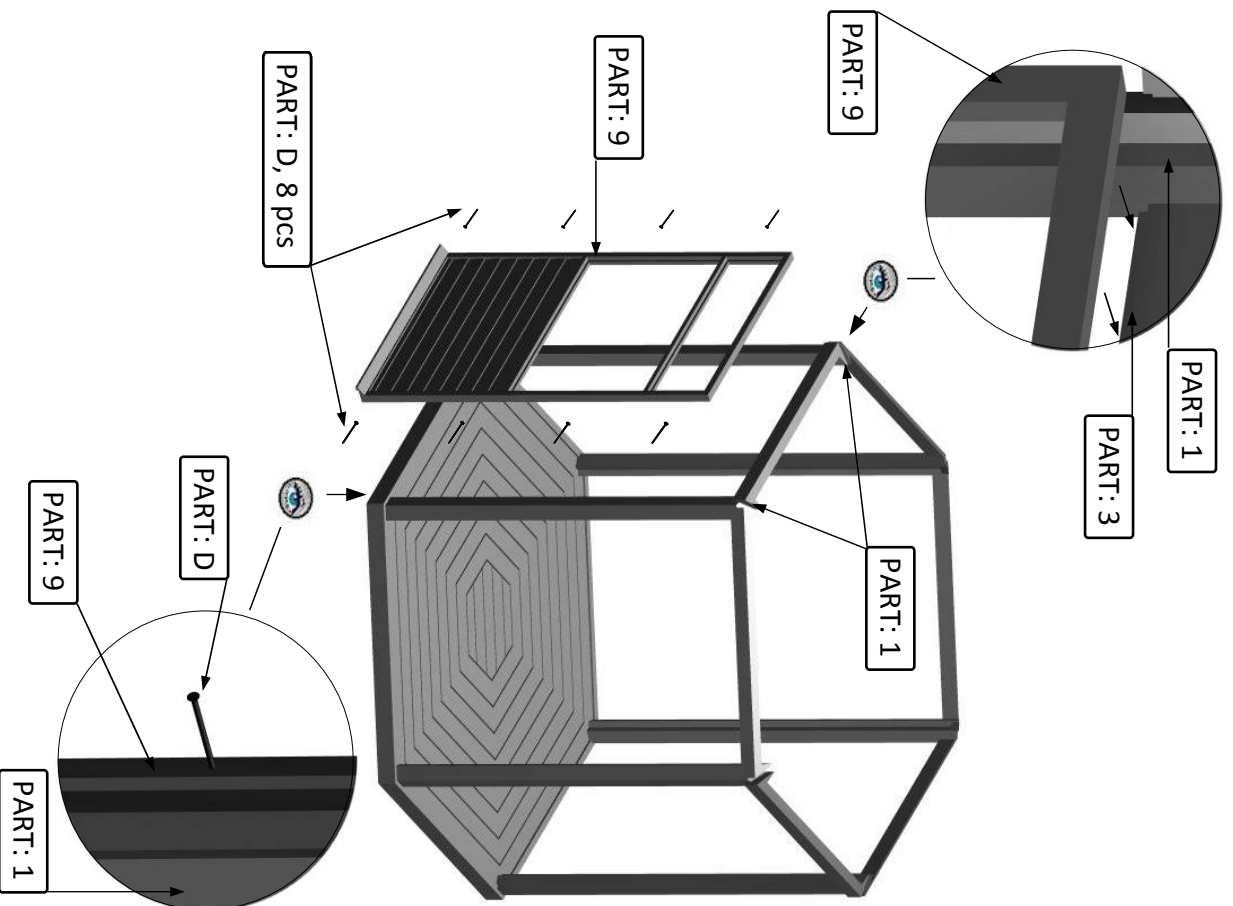


STEP 7

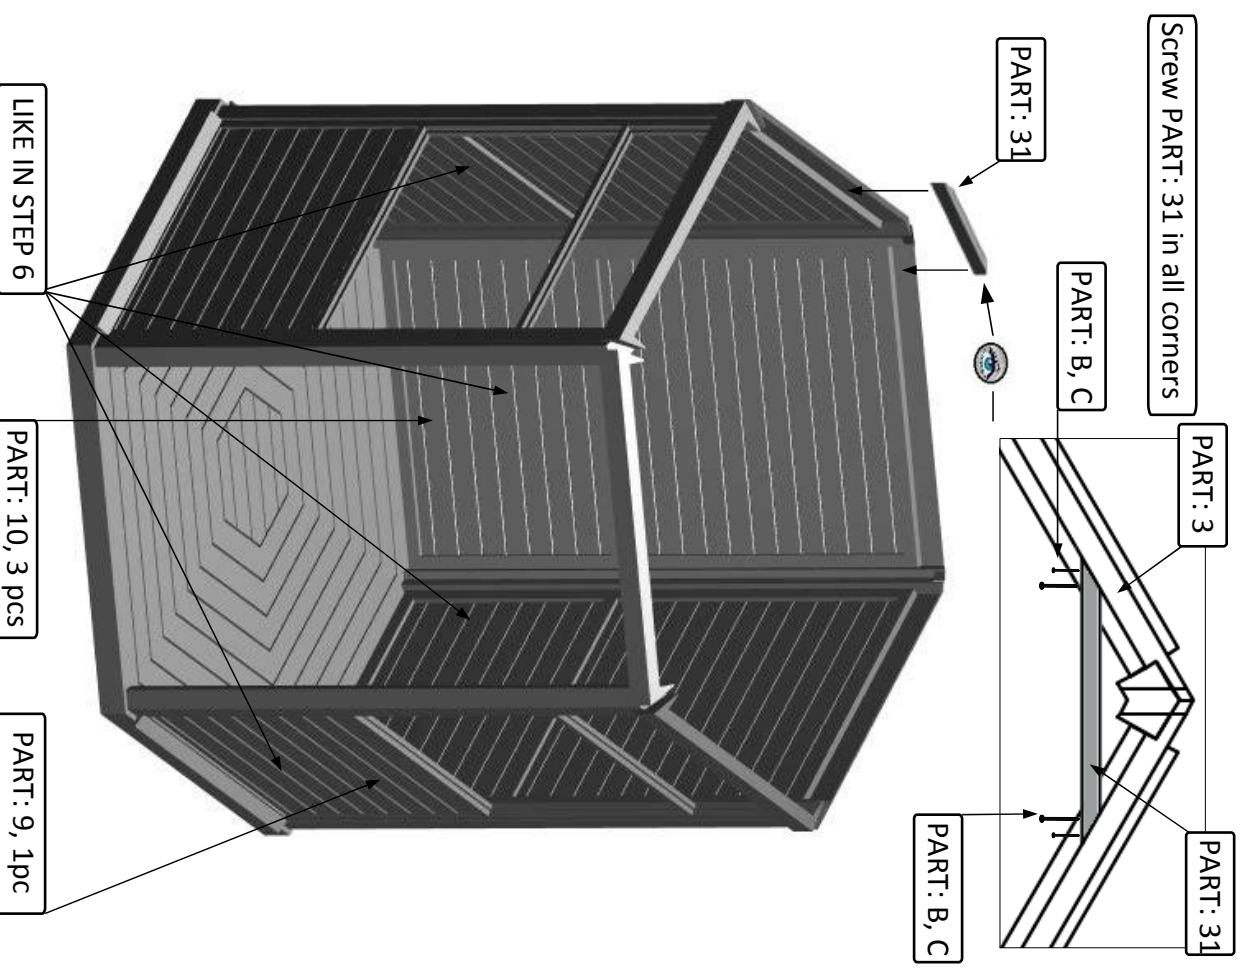


STEP 8

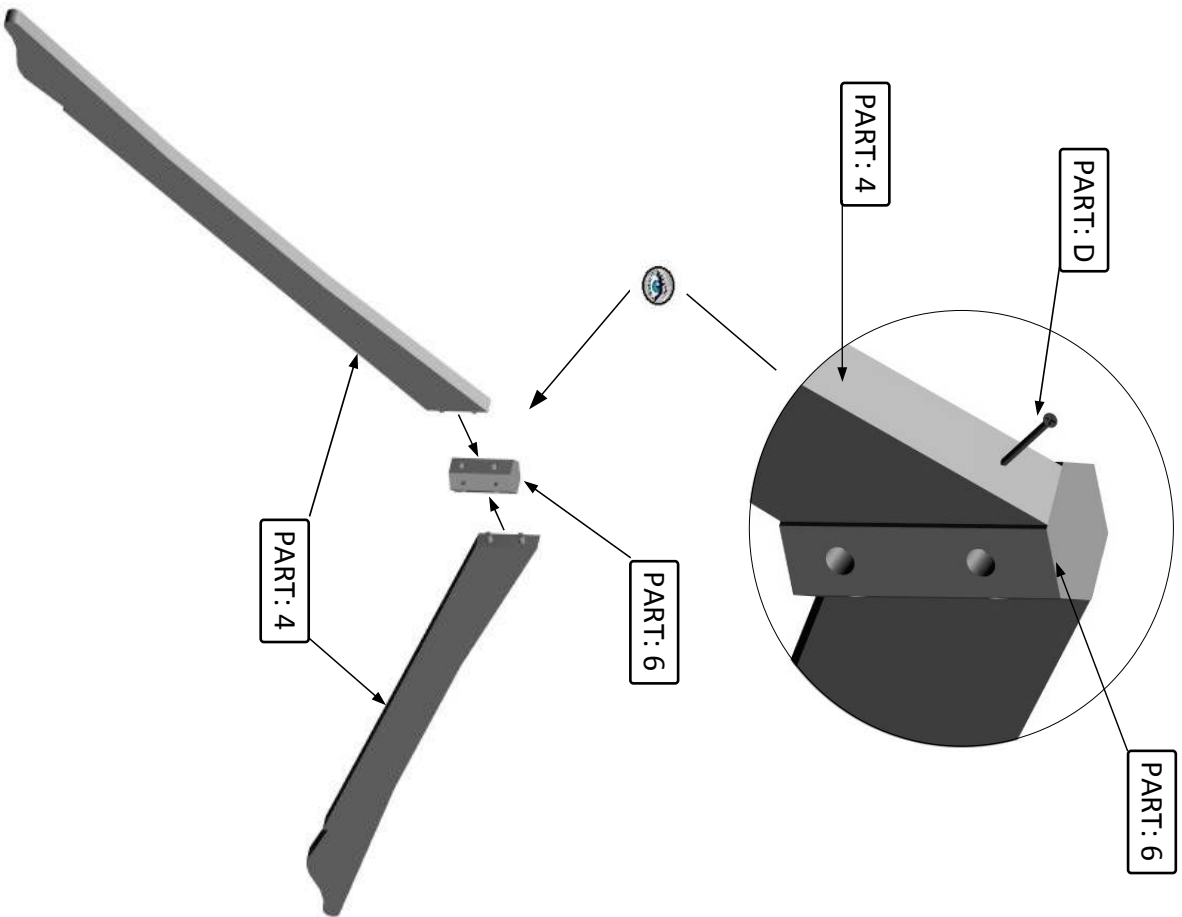


STEP 9

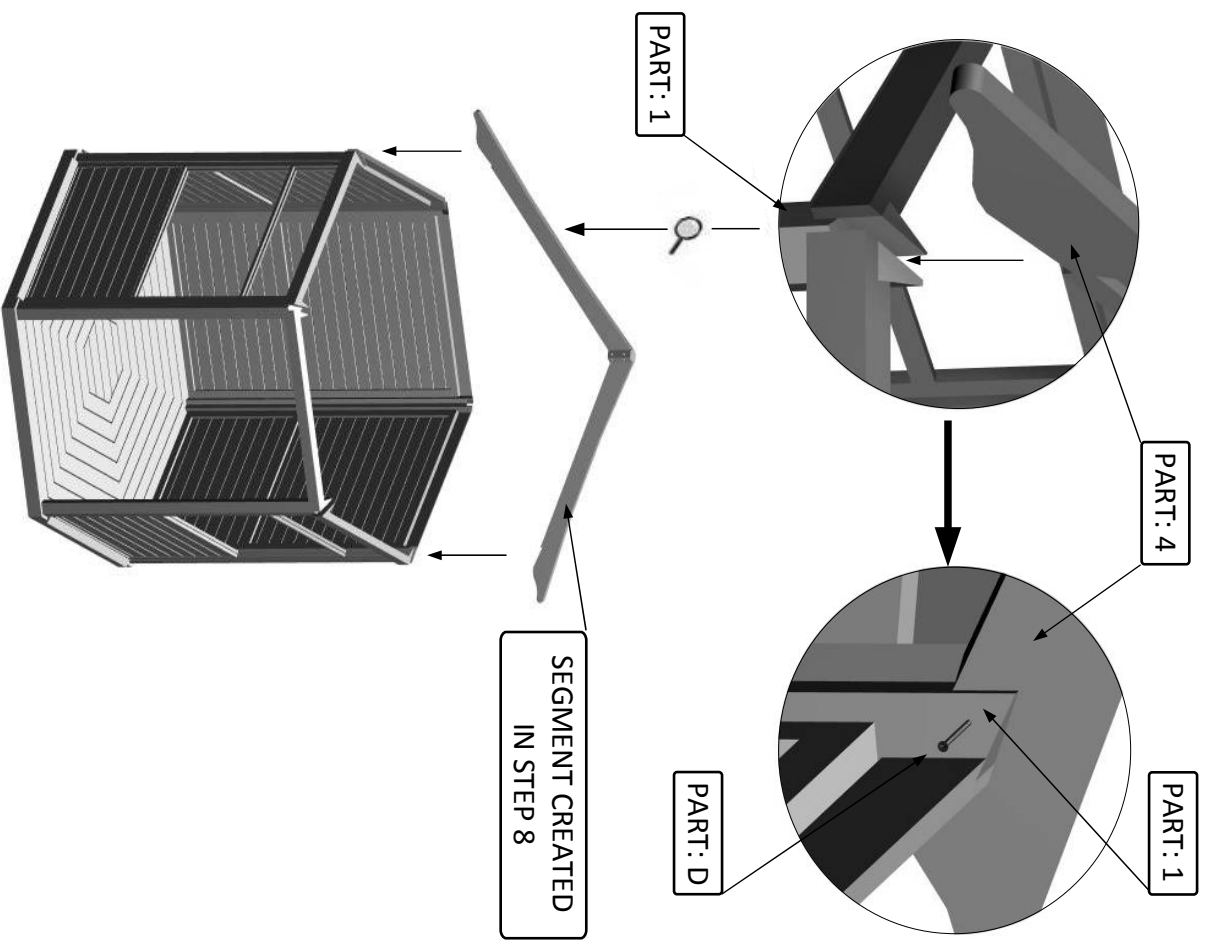


STEP 10

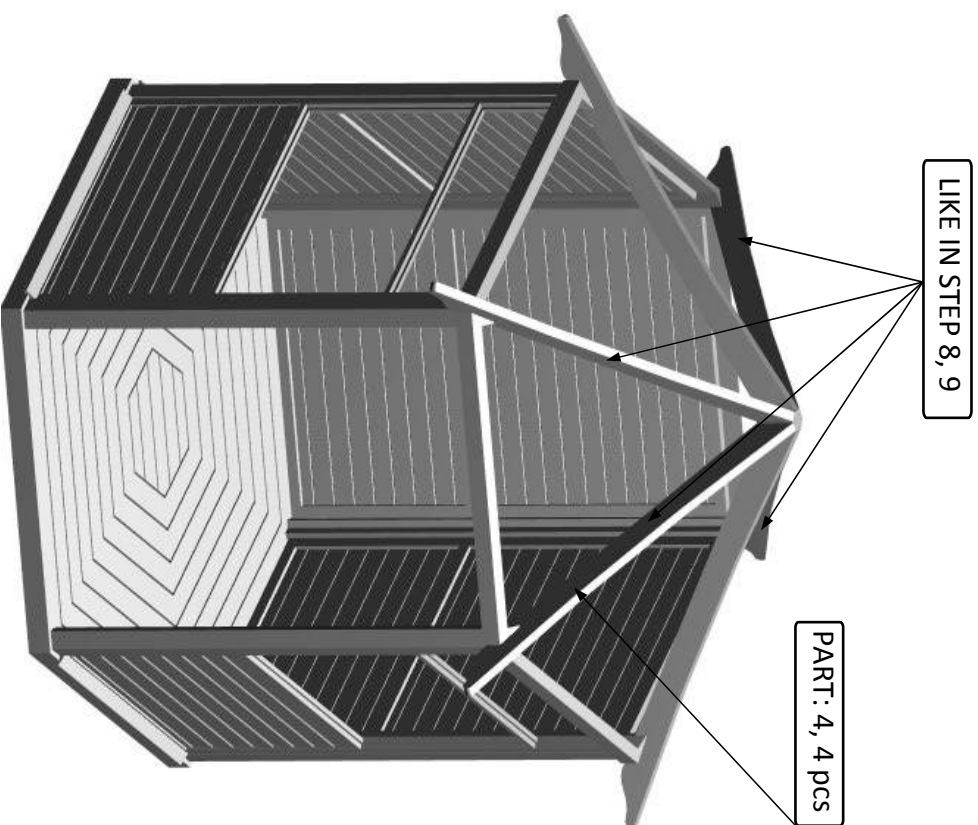


STEP 11

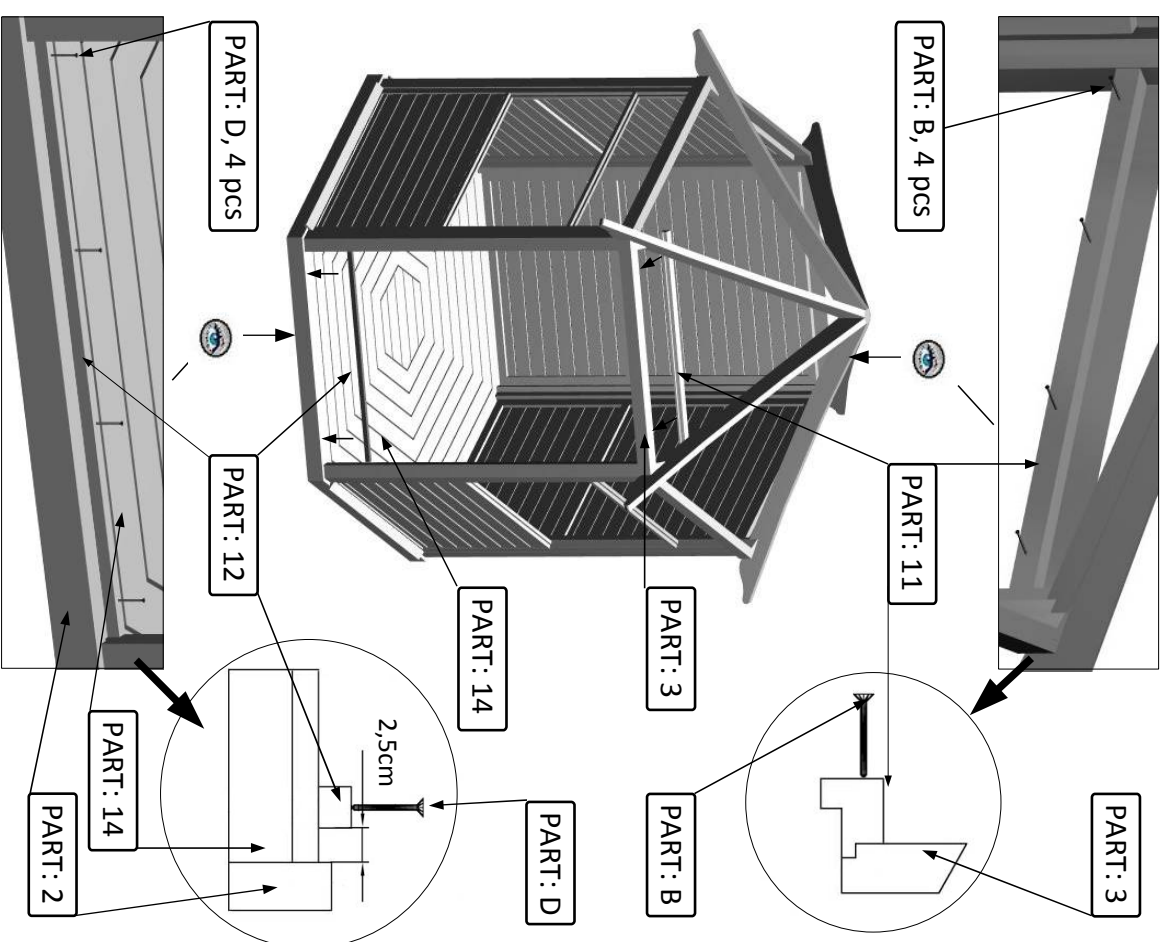

STEP 12

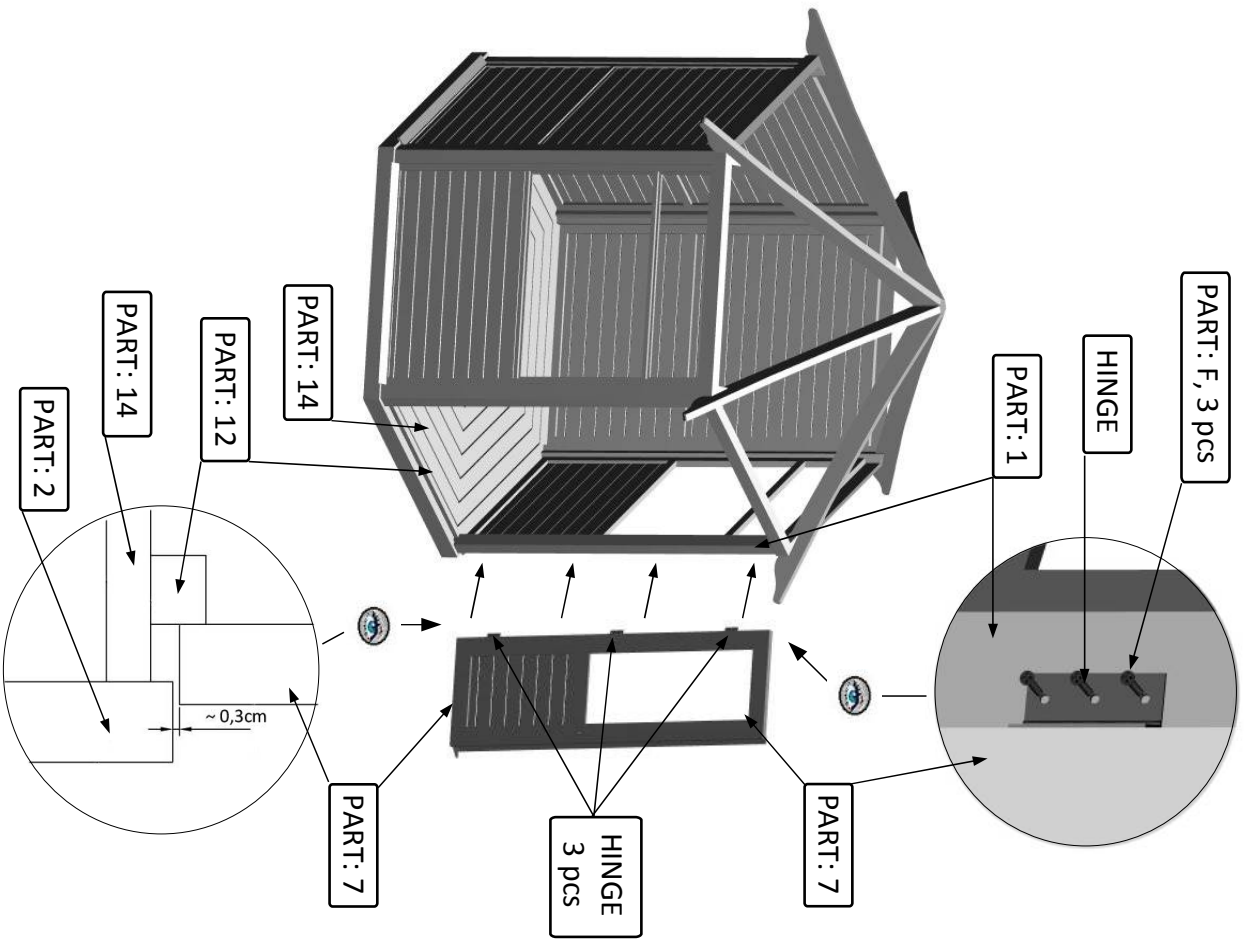


STEP 13

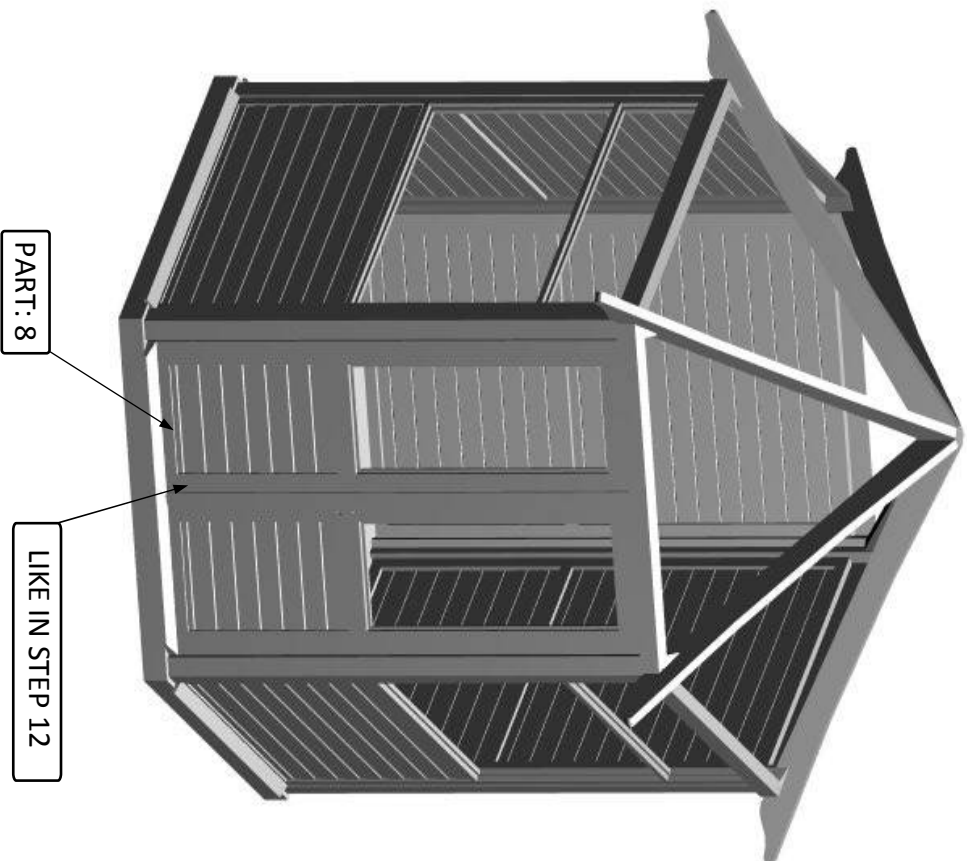


STEP 14

INSTALL WINDOW (PART: 5) LIKE AS DOOR IN STEP 12
HINGES IN WINDOW HAVE TO BE AT THE TOP

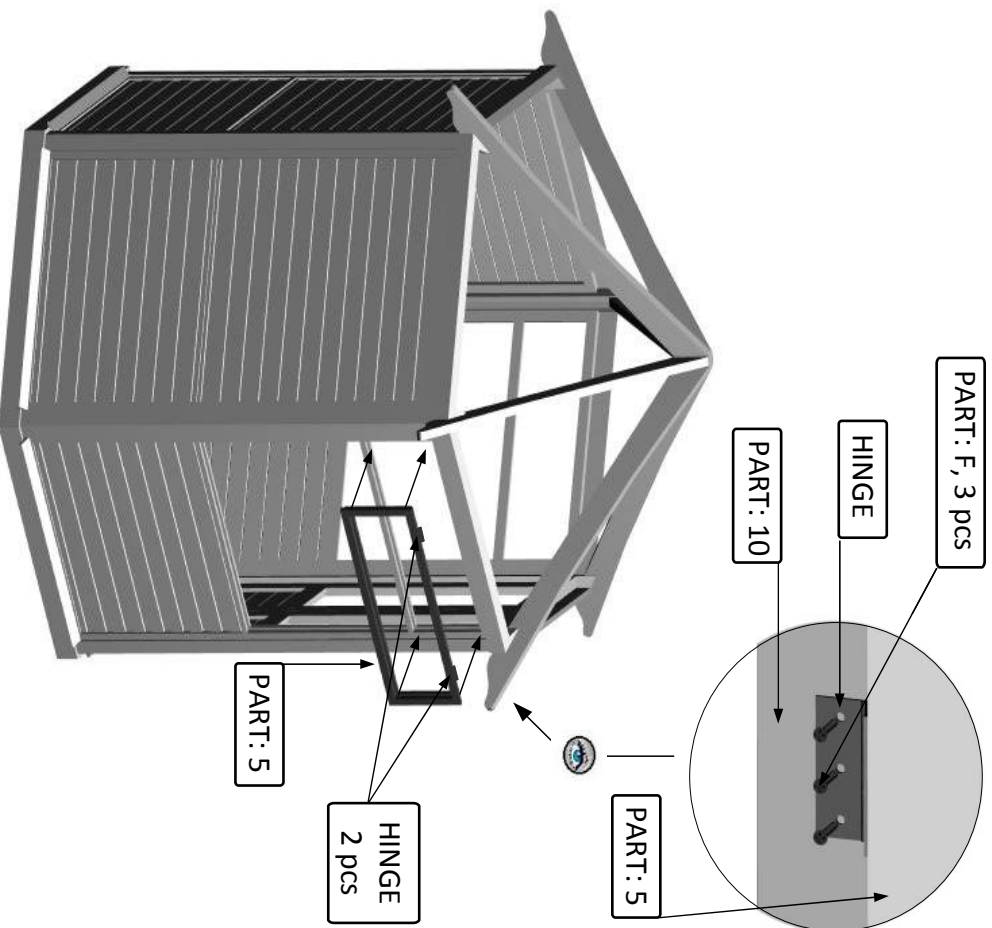


REPEAT STEP 14 – 2 TIMES

STEP 15

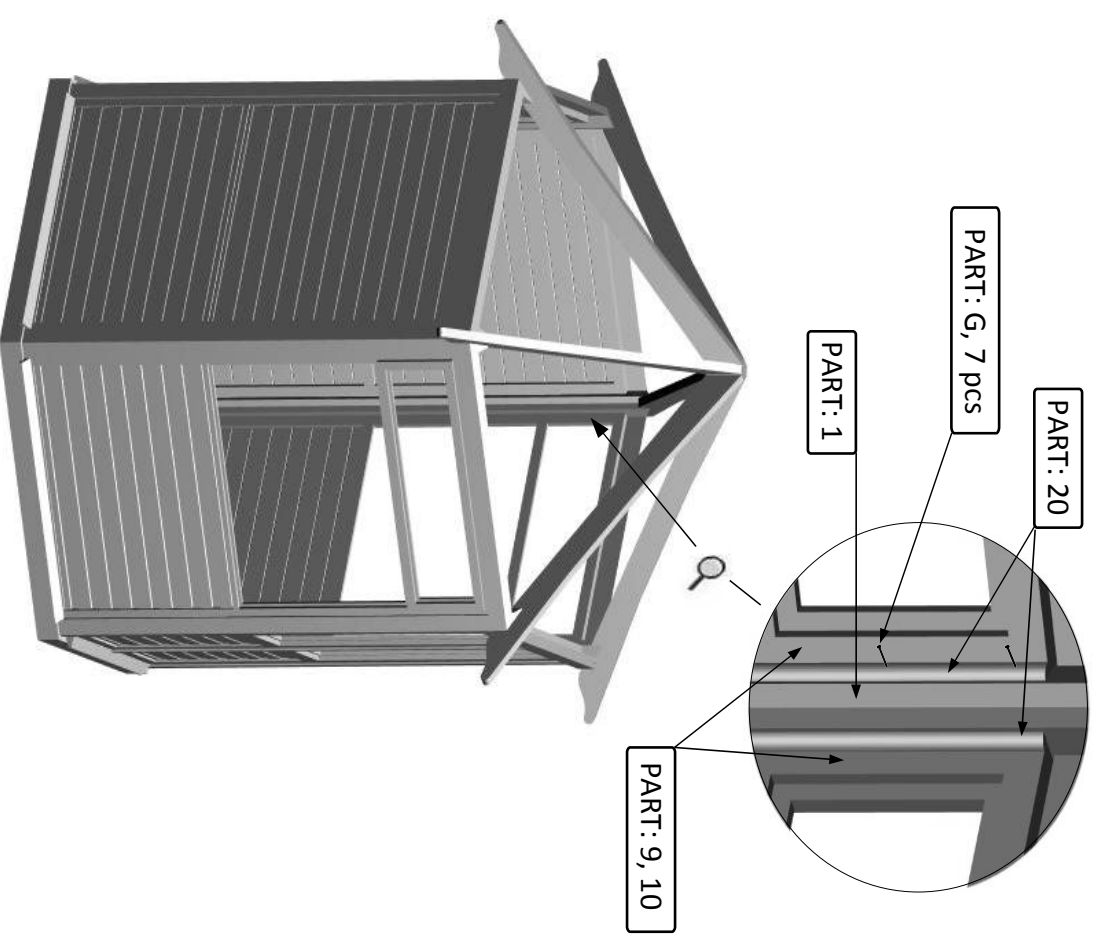

FOR ASSEMBLE PART: 20 IN THE CORNER FROM BOTH SIDES
OF COLUMNS (PART: 1) USE NAILS PART: G (7 pcs TO PART: 20)


STEP 16

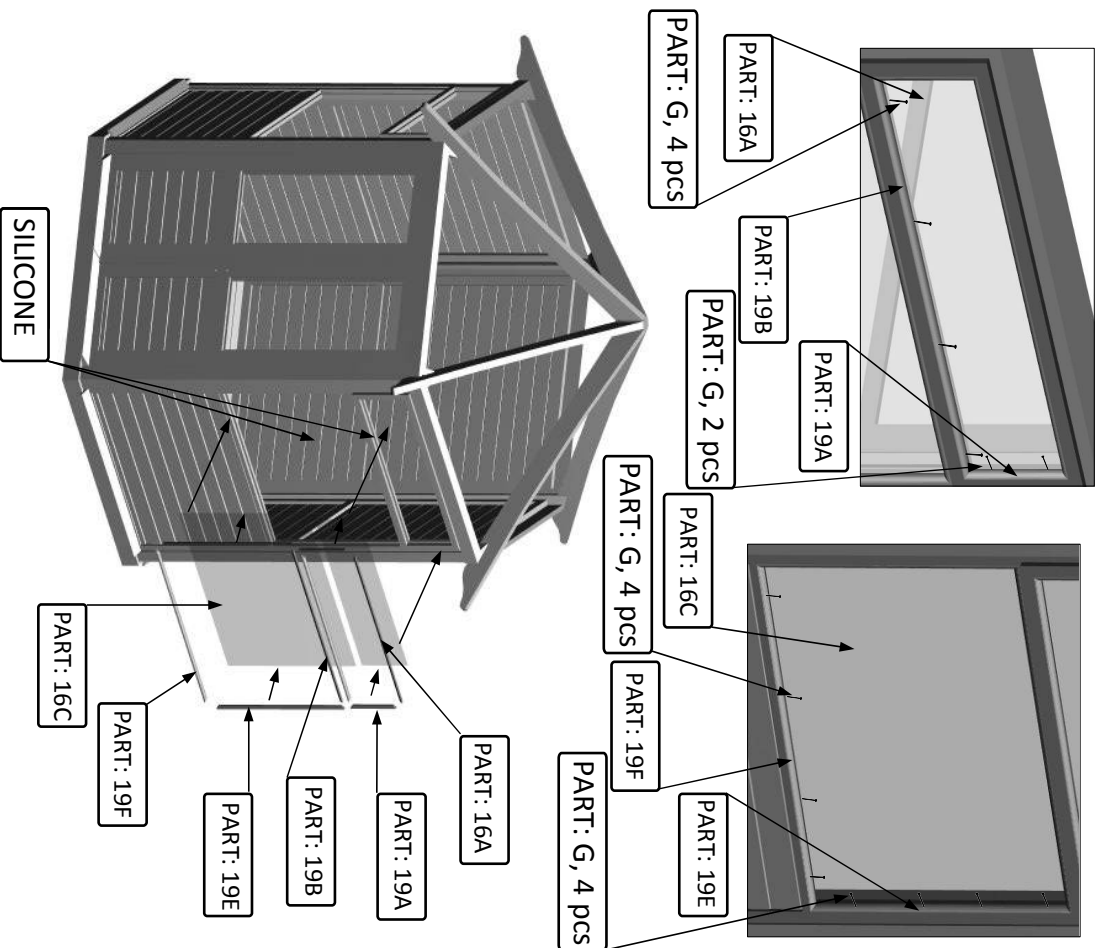


FIRST PUT THE SILICONE ON THE EDGES, THEN ASSEMBLE THE GLASS (PART: 16),
USE NAILS PART: G TO ASSEMBLE QUADRANT BEAD (PART: 19)

REPEAT STEP 16 – 2 TIMES


STEP 17

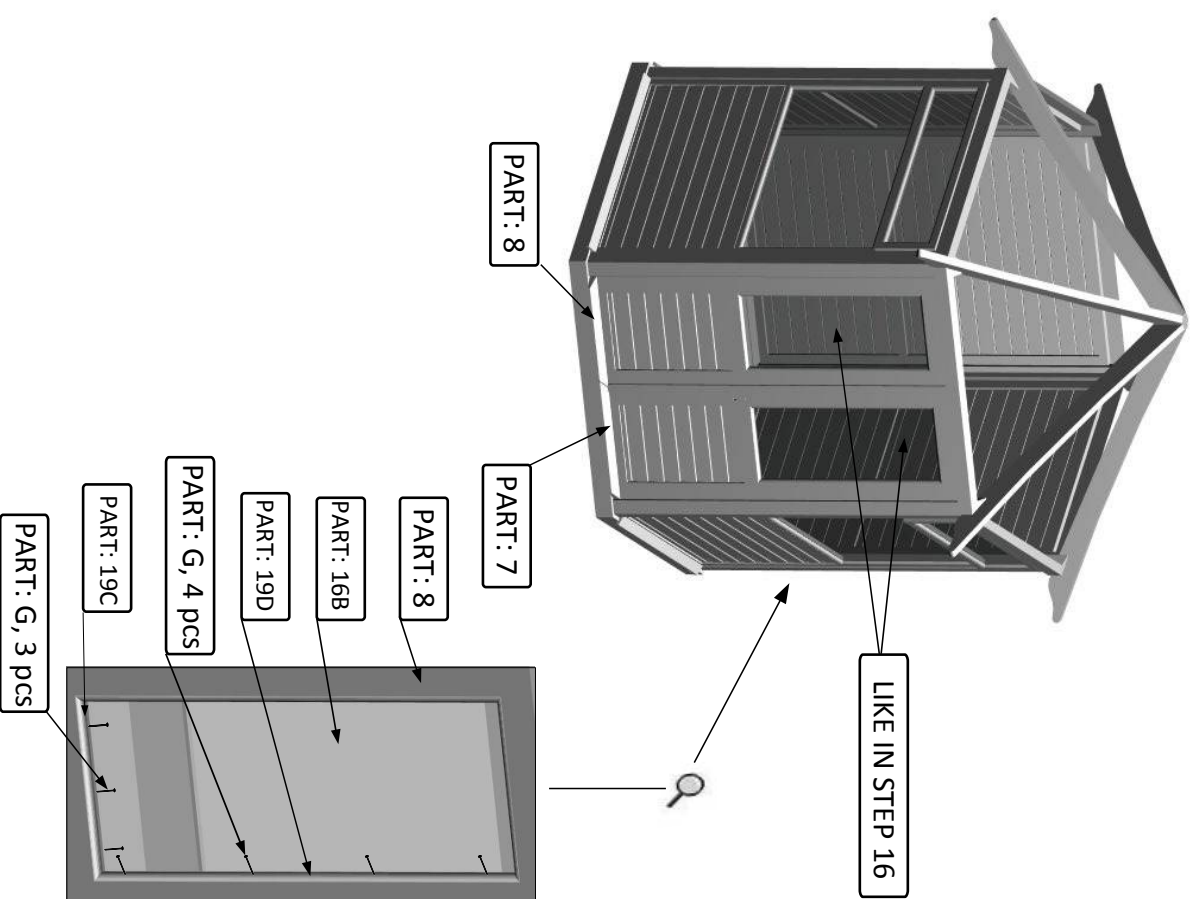


STEP 18

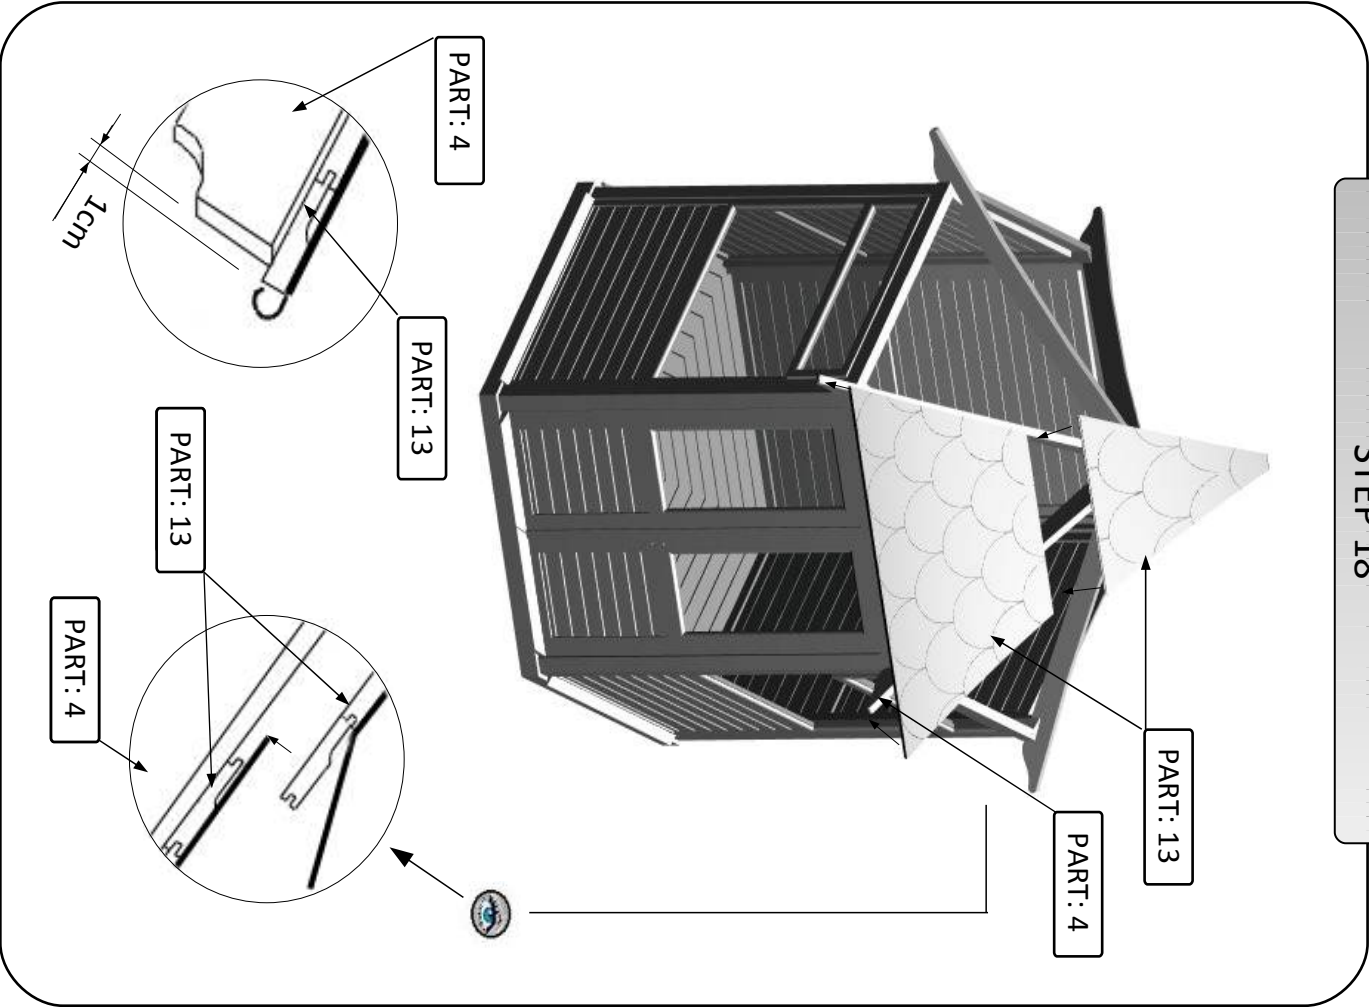

STEP 19

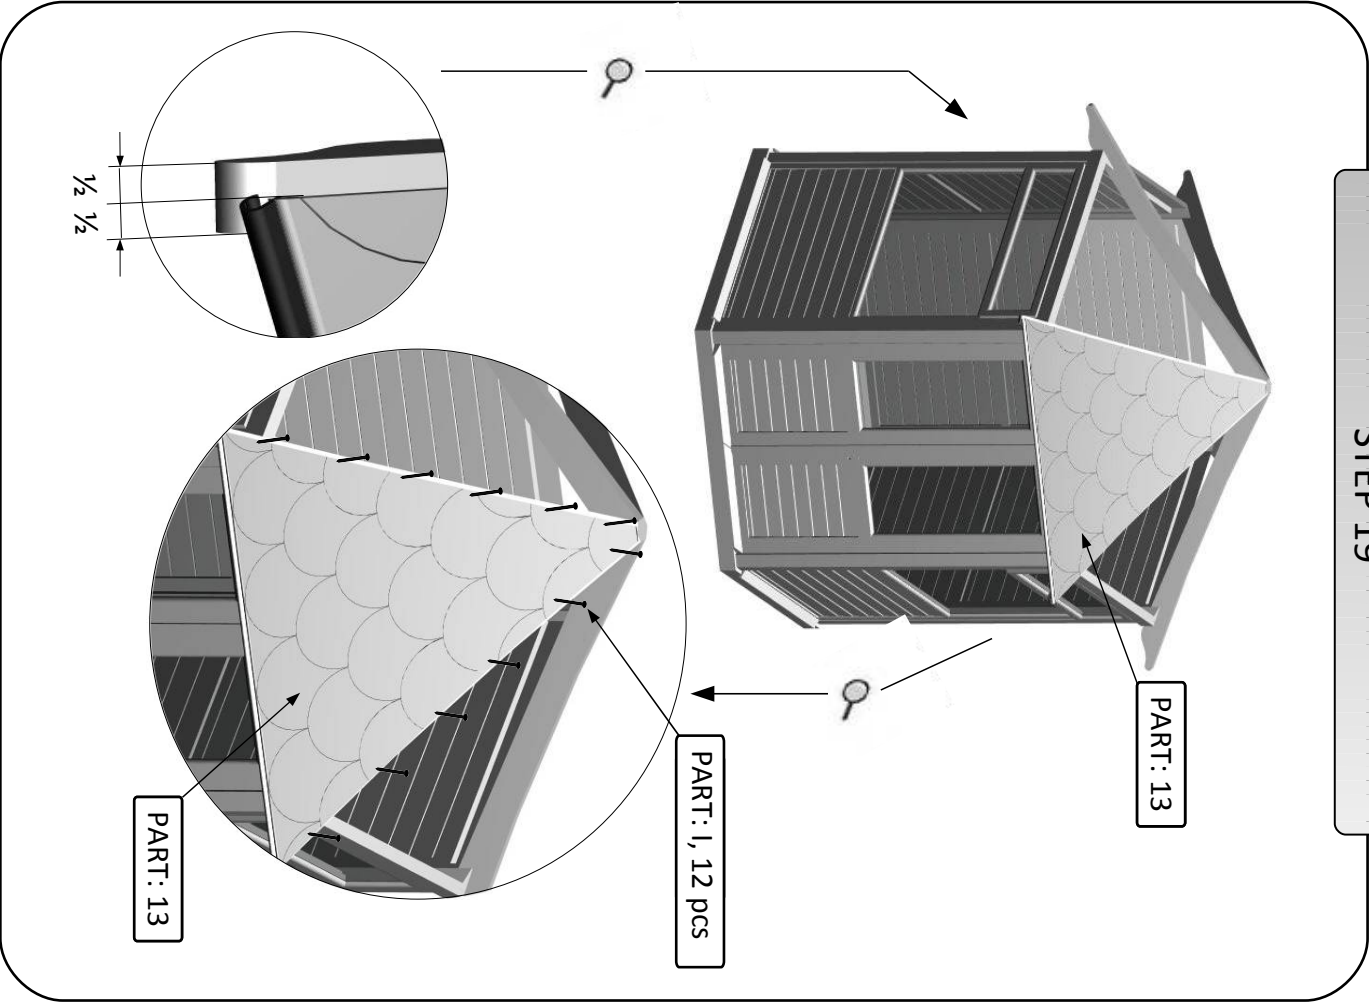


STEP 20

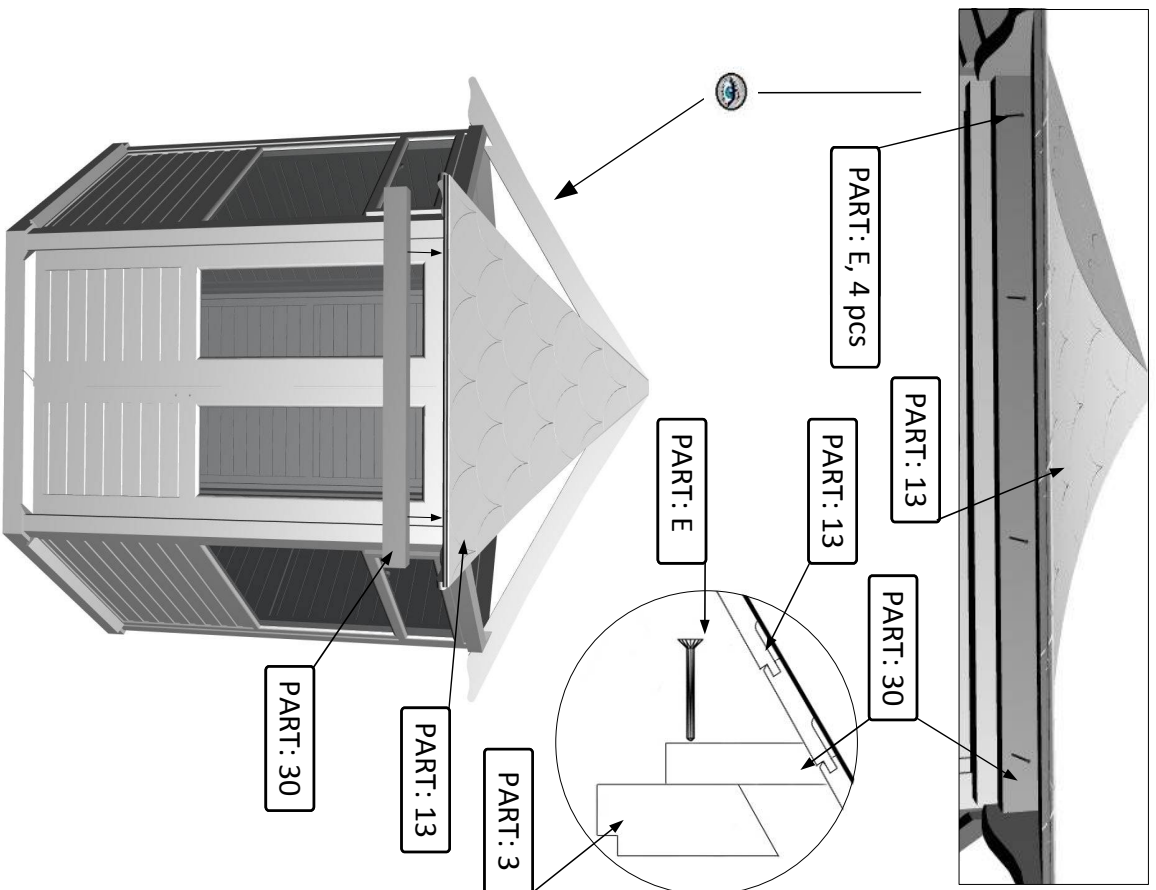


REPEAT STEPS: 18, 19, 20 – 6 TIMES

STEP 21

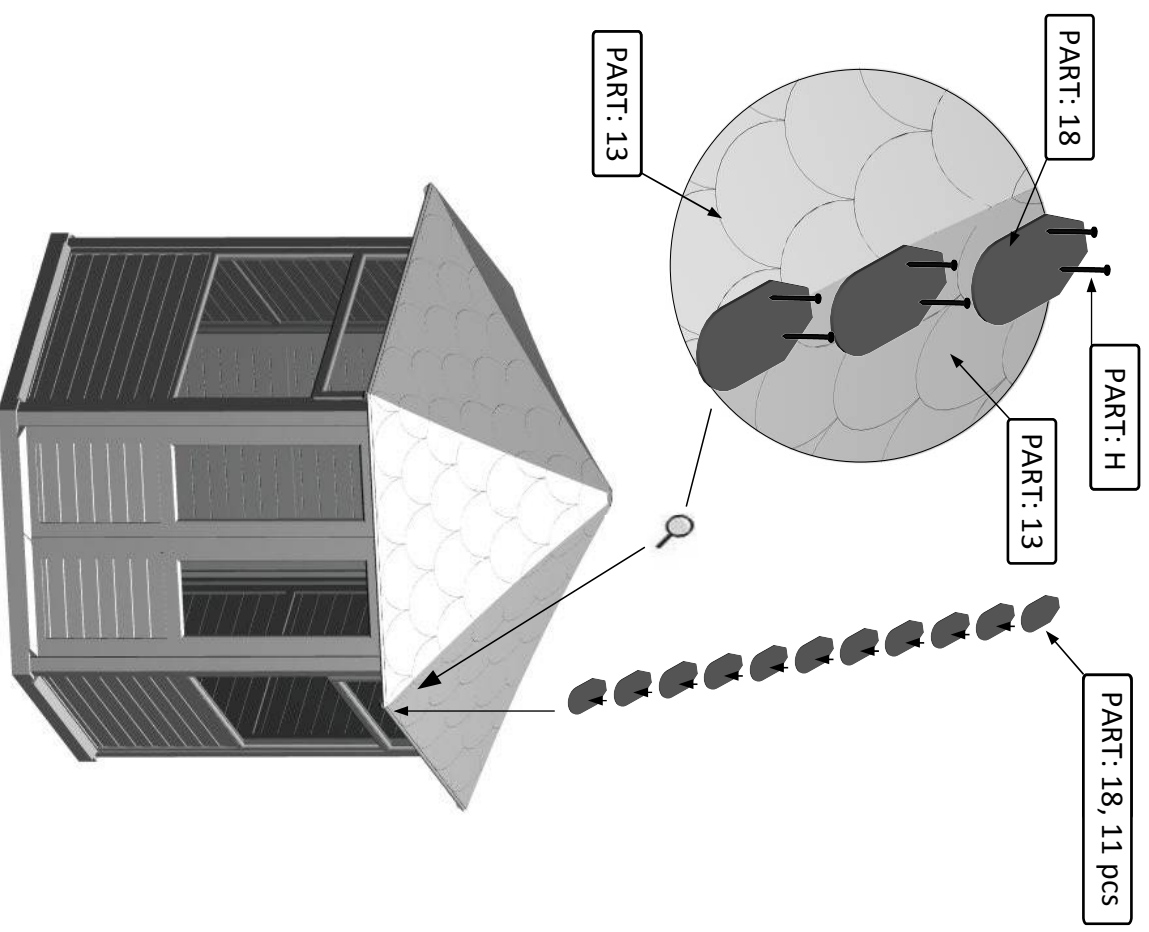


REPEAT STEP 21 AROUND THE ROOF

STEP 22

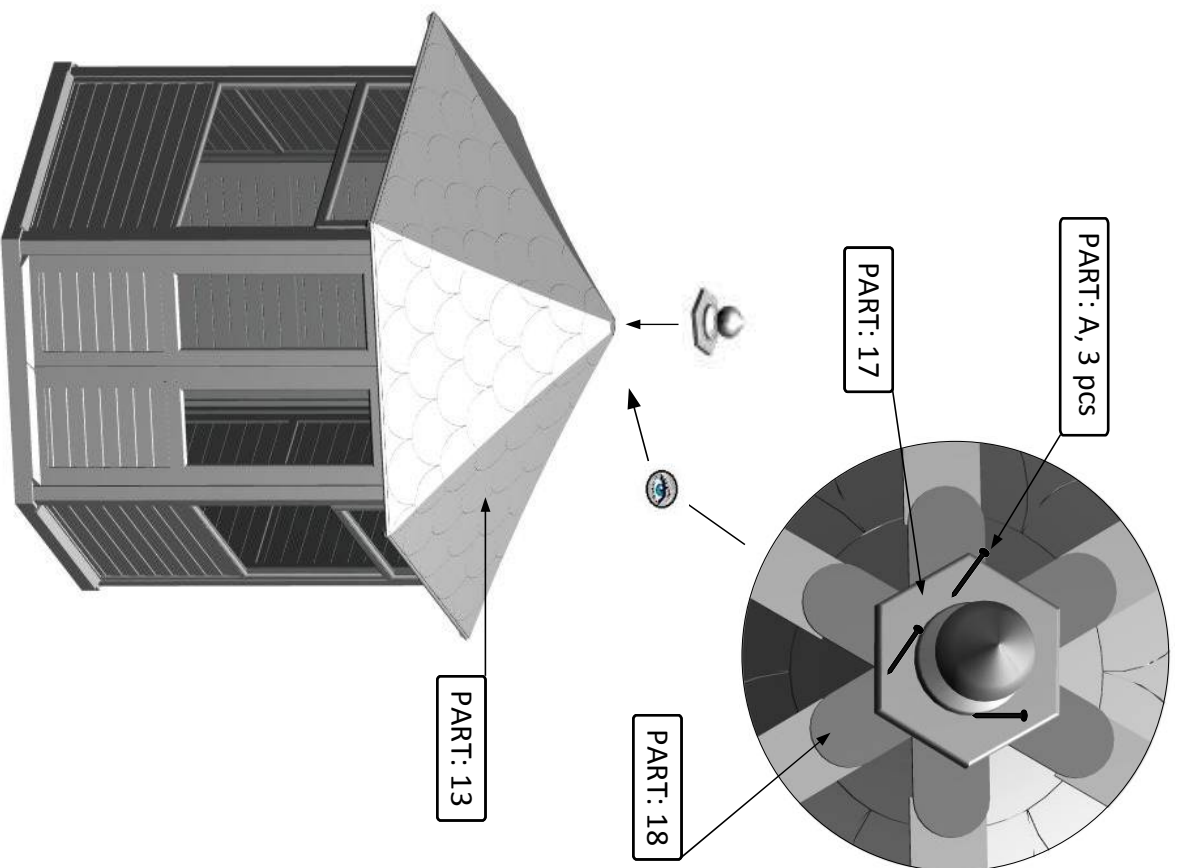


STEP 23

PUT BELT OF LEAD ON ROOF (PART: 13)
THEN USE WOODEN SCRIBER TO COMPENSATE LEAD (PART: 22)

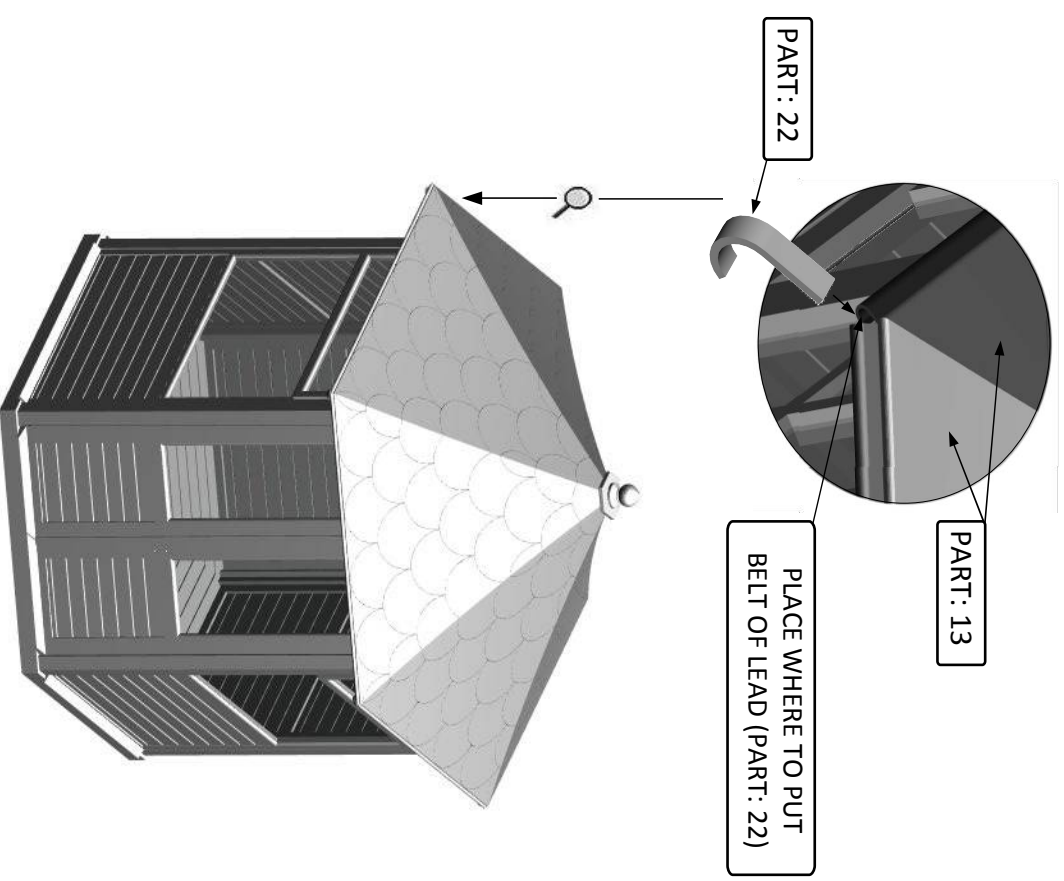


REPEAT STEP 23 AROUND THE ROOF

STEP 24

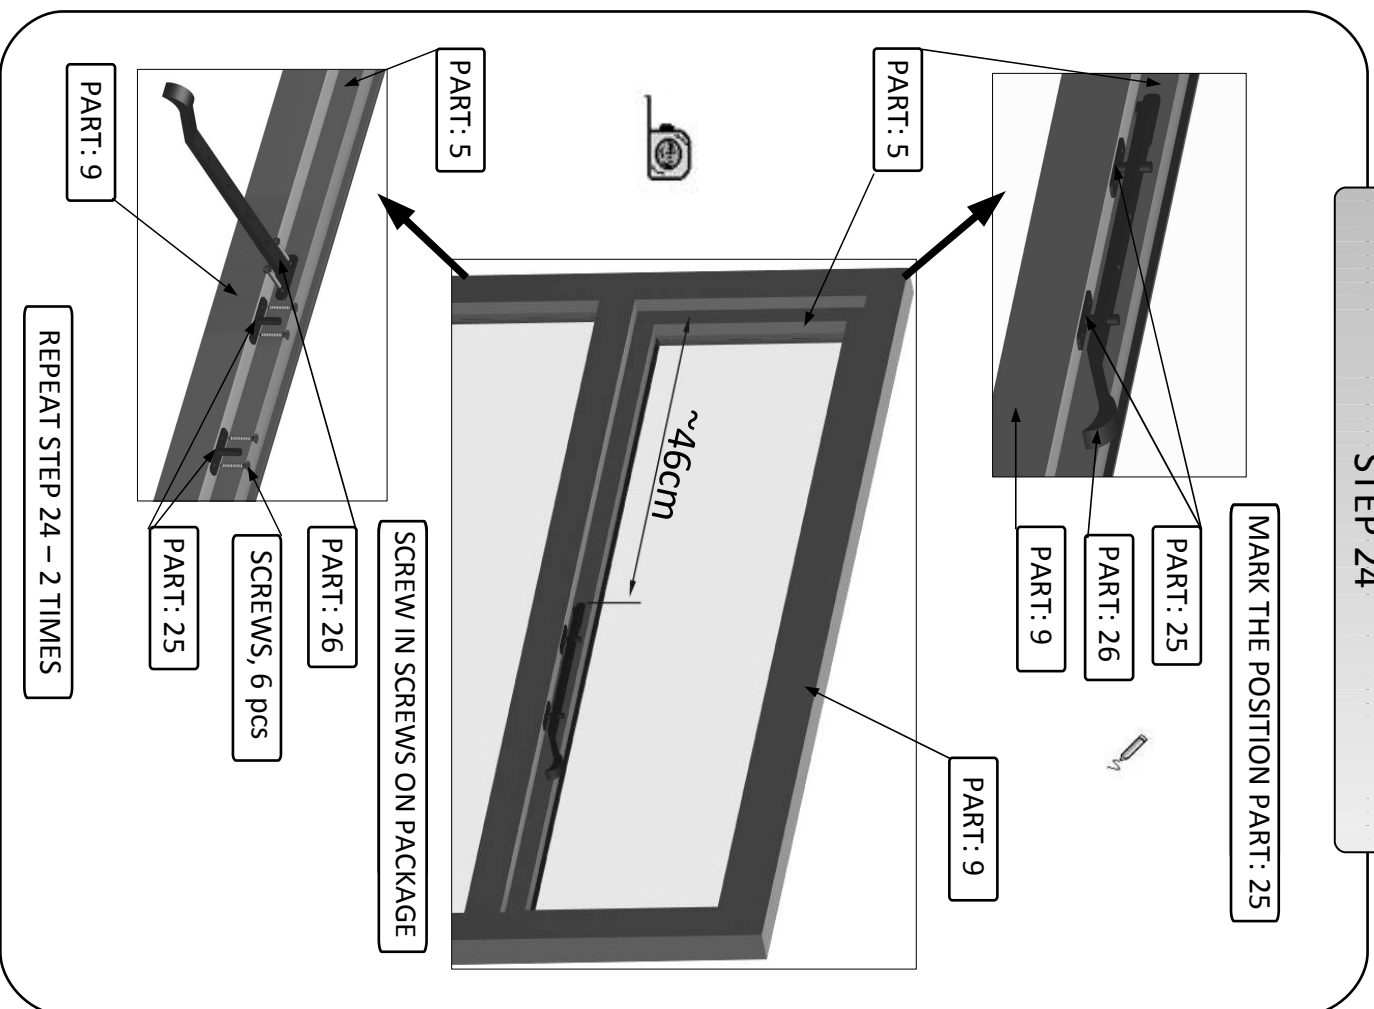


STEP 25

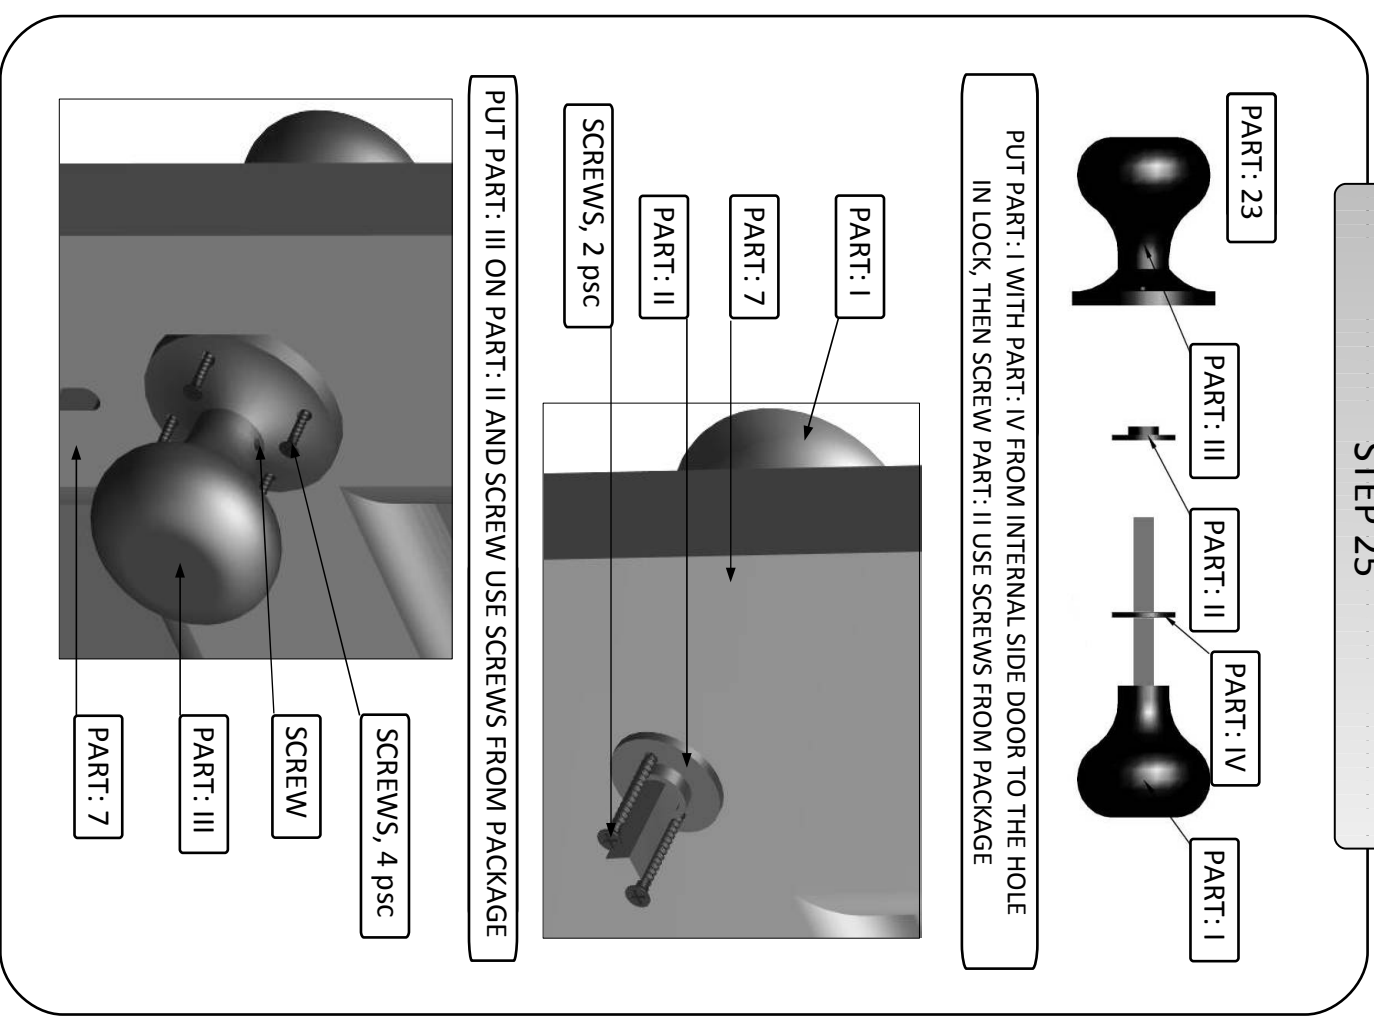


STEP 26

APPLY PART : 24 TO THE HOLE BELOW PART : 23
PUT THE KEY TO THE LOCK
AND PLACE PART : 24 SO THAT THE KEY BE IN THE MIDDLE
THEN SCREW USE SCREWS FROM PACKAGE

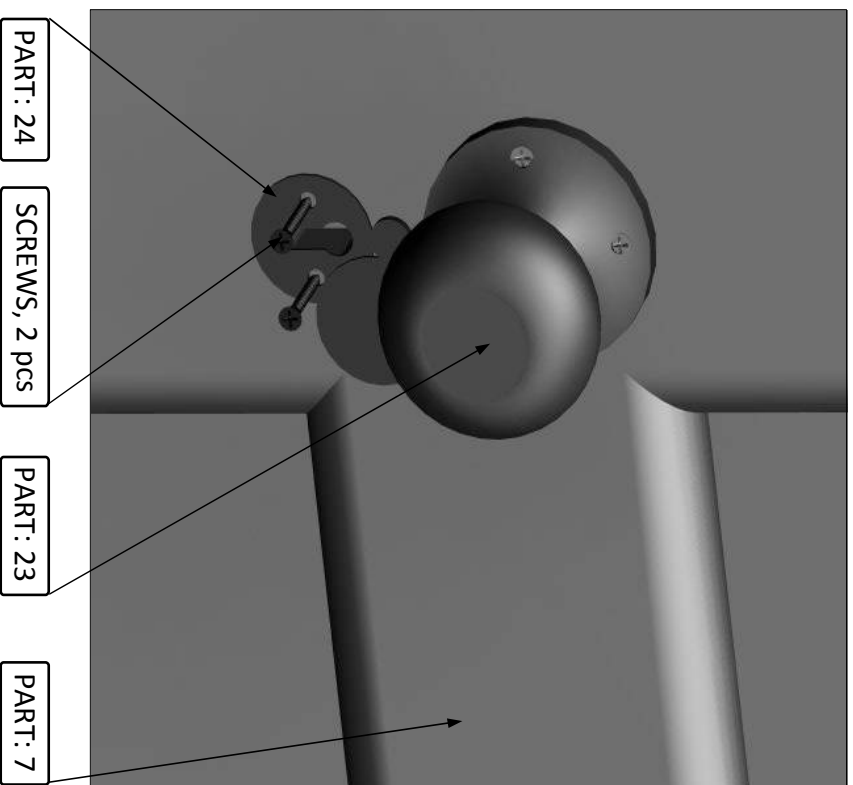

STEP 27

SCREW IN PART: 29 TO DOOR (PART: 8)
USE SCREWS FROM PACKAGE

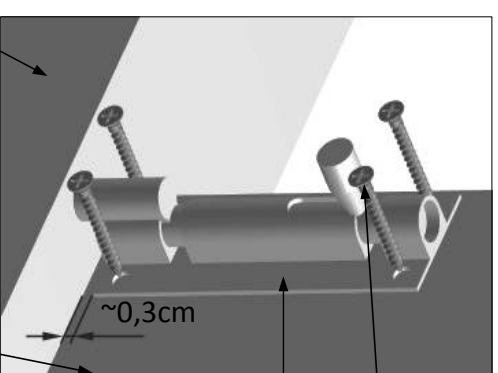

SCREWS, 4 pcs

PART: 29

PUT PART: 21 ON PART: 29 SO THAT THE HOLE
FIT ON THE PIN, THEN MARK POSITION




PART: 12

PART: 8

PART: 29

BORE HOLE USE DRILL DIAMETER 8
ON THE DEPTH 2cm
THEN SCREW USE SCREWS FROM
PACKAGE

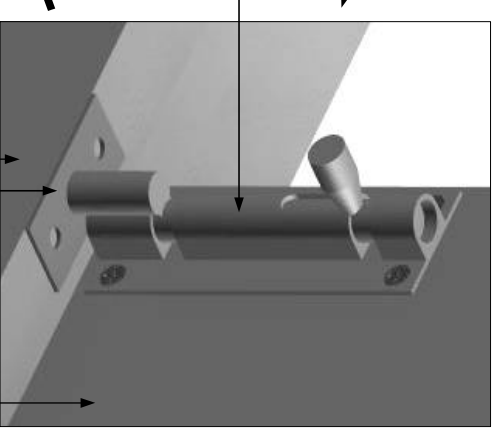

SCREWS, 2 pcs


DRILL

PART: 12

PART: 8

PART: 21

PART: 12

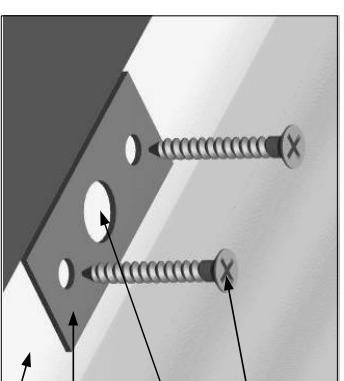

REPEAT STEP 27 AT THE TOP OF DOOR (PART: 8)

STEP 28

SCREW PART: 28 TO COLUMN (PART: 1)
USE SCREWS FROM PACKAGE

SCREWS, 2 pcs

PART: 28

PART: 1

OPEN DOOR TO THE MOMENT WHERE
YOU WANT TO BLOCK IT
THEN APPLY PART: 27 AND MARK POSITION

PART: 8



PART: 8

PART: 27

SCREW IN PART: 27 USE
SCREWS FROM PACKAGE

PART: 1

PART: 28

SCREWS, 2 pcs

PART: 27

PART: 8

REPEAT STEP 28 AT THE SECOND SIDE OF DOOR

