

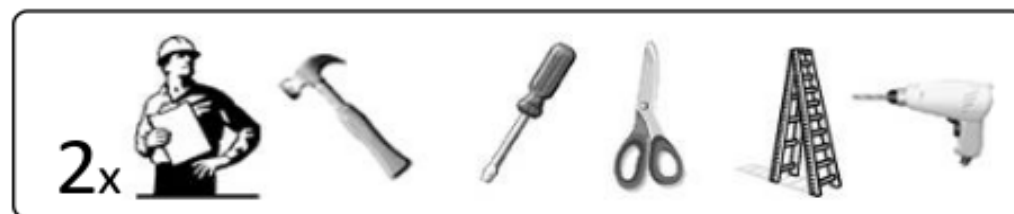
































Harrogate Pavilion

NR. ART. C42245

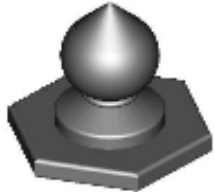

SIGN: 1 4 pcs  FRONT POST	SIGN: 2 2 pcs  RIGHT POST	SIGN: 3 2 pcs  LEFT POST	SIGN: 4 1 pcs  DOOR (RIGHT)
SIGN: 6 2 pcs  ROOF FINAL	SIGN: 7 2 pcs  RAFTERS TIE	SIGN: 5 1 pcs  DOOR (LEFT)	

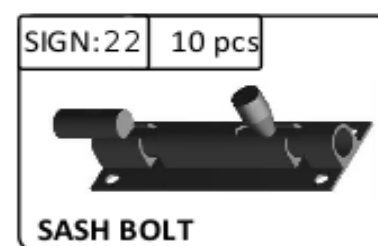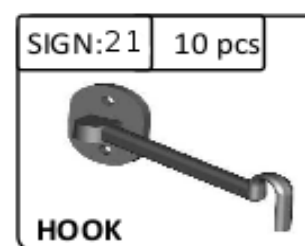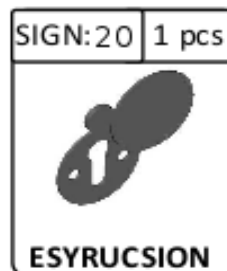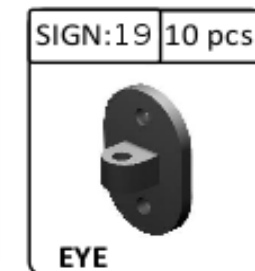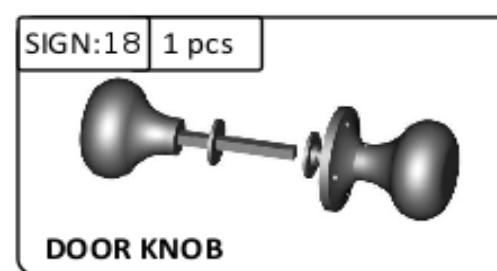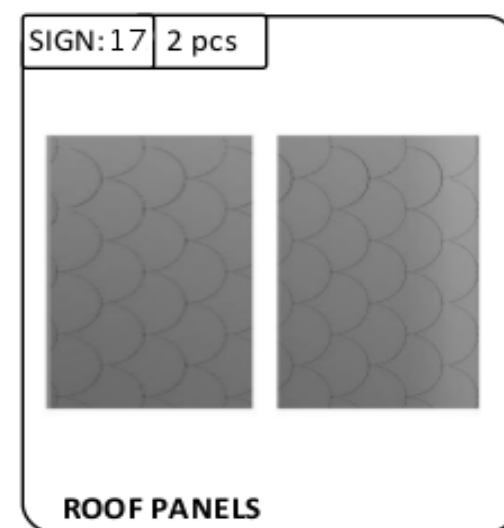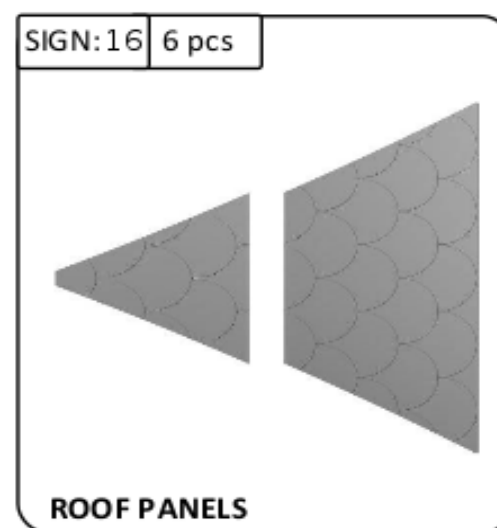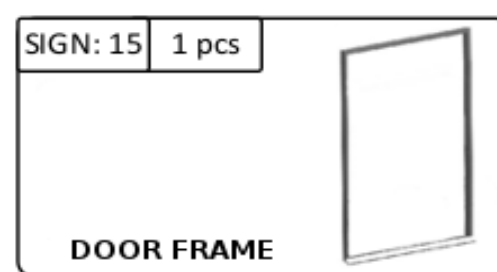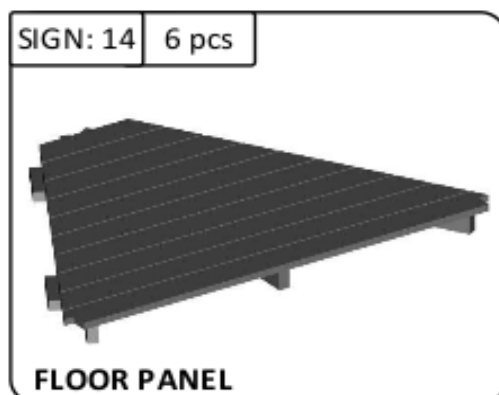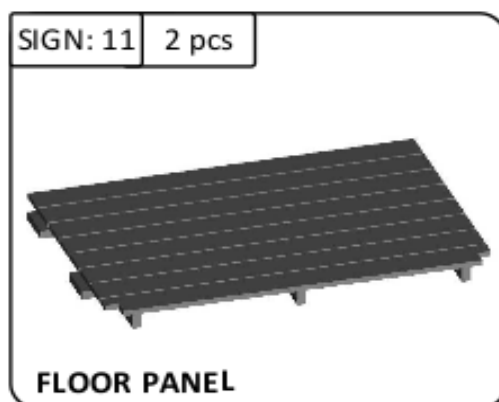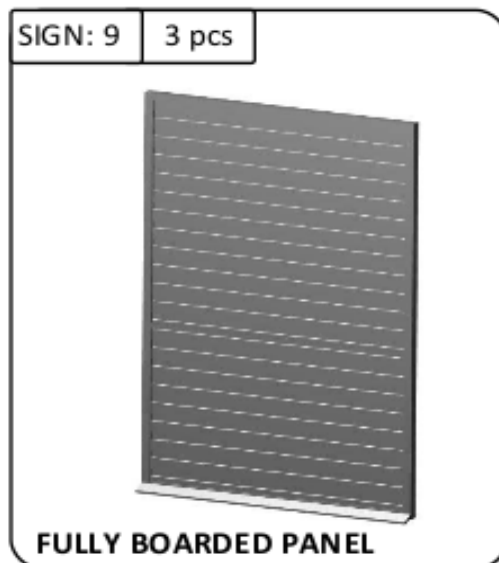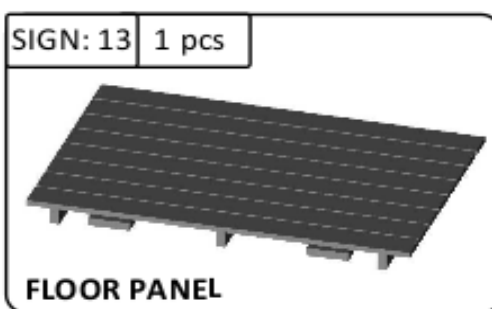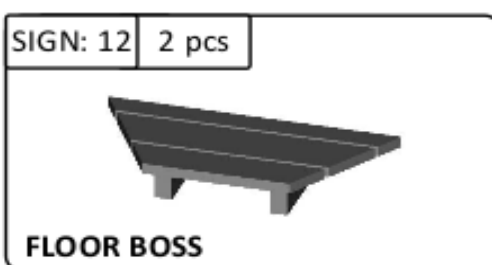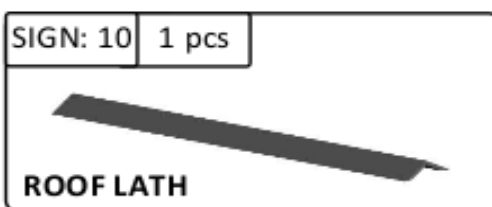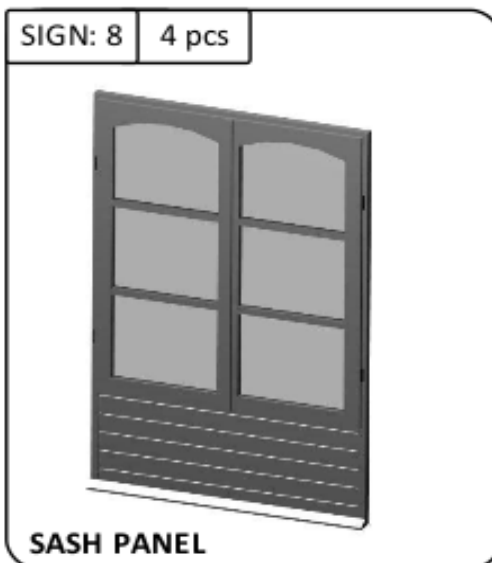

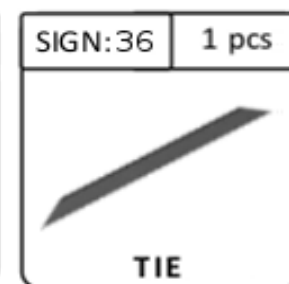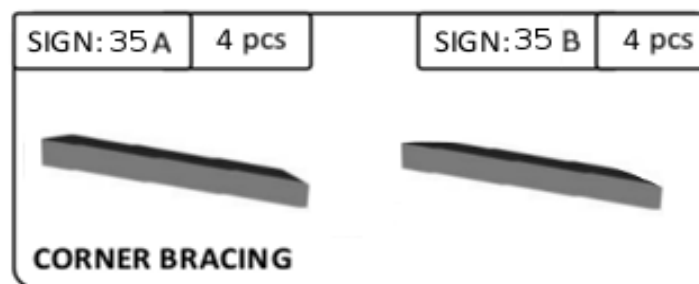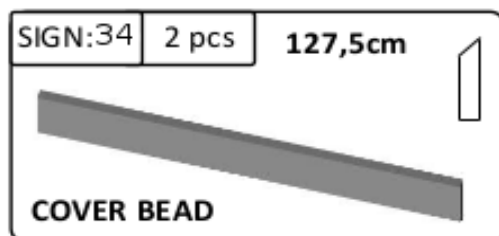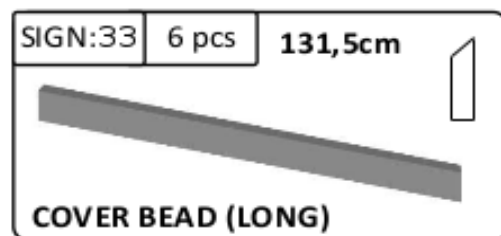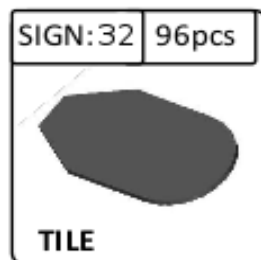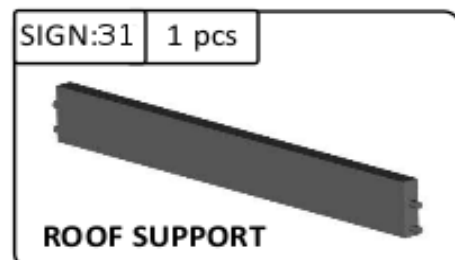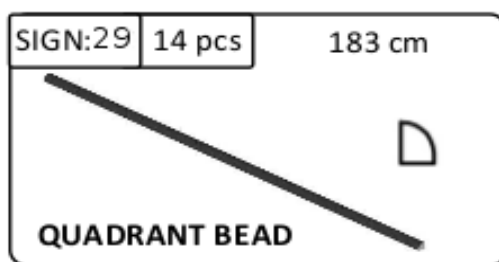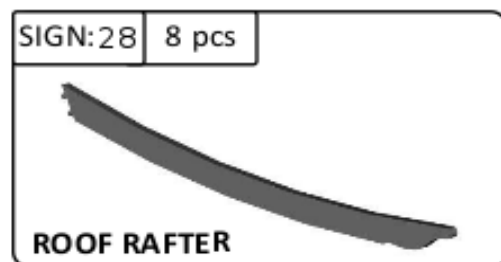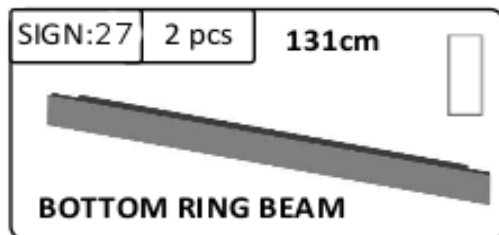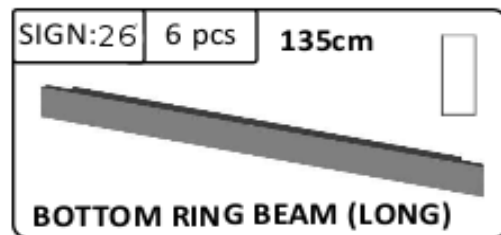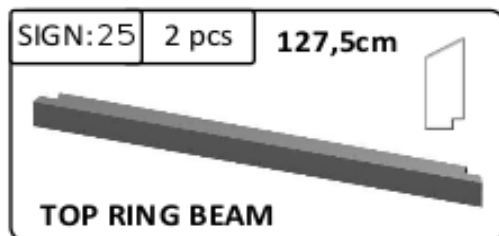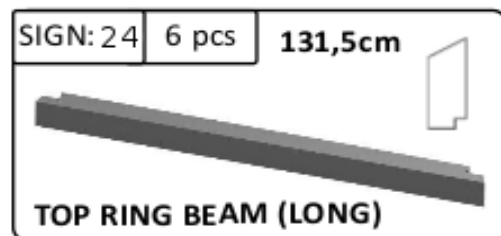

EXPLANATION



VIEW



MEASURE




ZOOM




DRAW

SIGN	JOIN COMPONENTS	PIECE
A	5,0 x 90 mm	20 pcs
B	5,0 x 60 mm	80 pcs
C	4,0 x 60 mm	160 pcs
D	4,5 x 60 mm	14 pcs
E	1,2 x 25 mm	98 pcs
F	2,5 x 25 mm	192 pcs
G	2,2 x 50 mm	96 pcs
	WOODEN SCRIBER	1 pcs


STEP 1

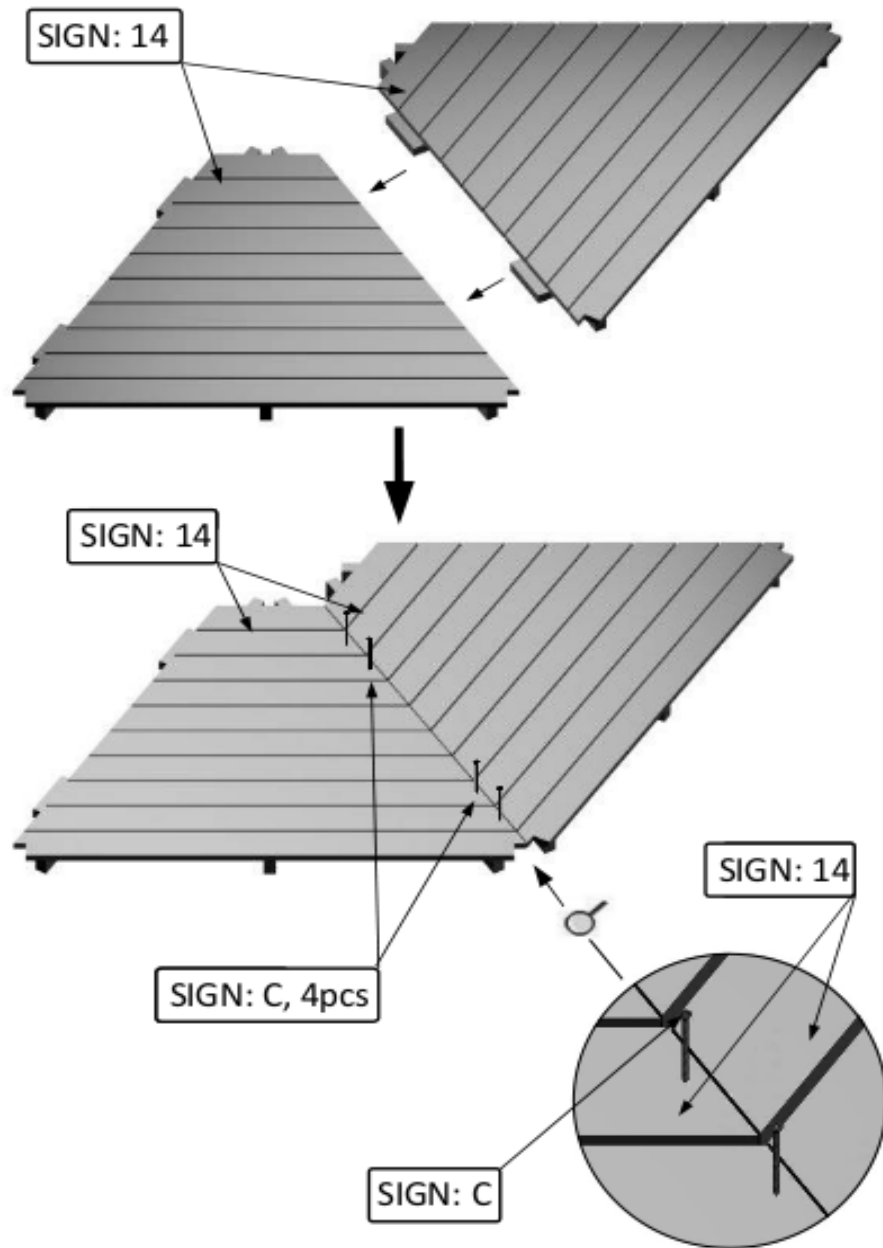


STEP 2

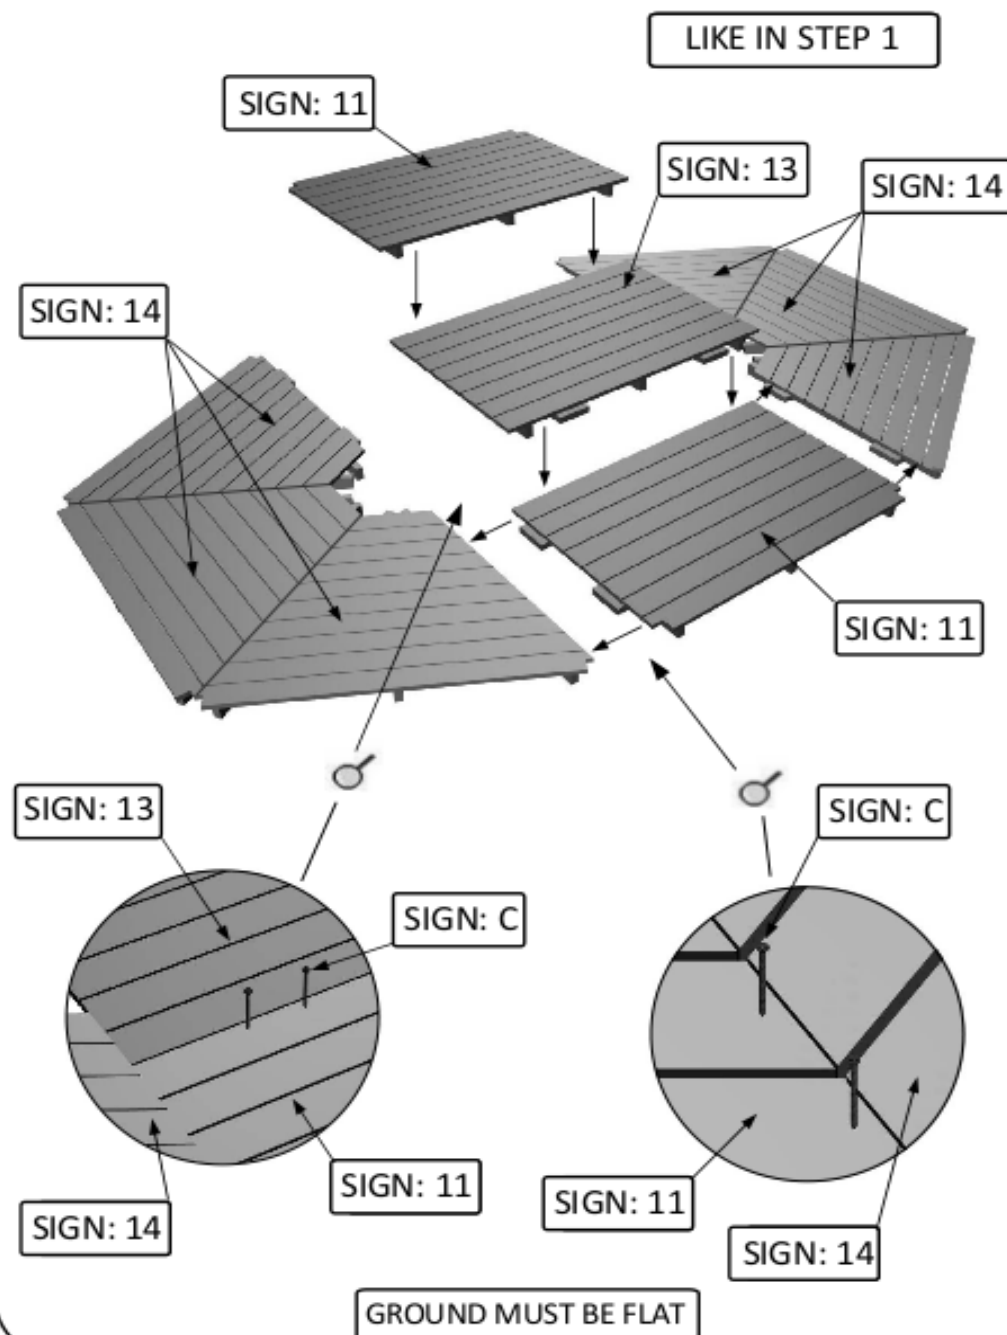


STEP 3

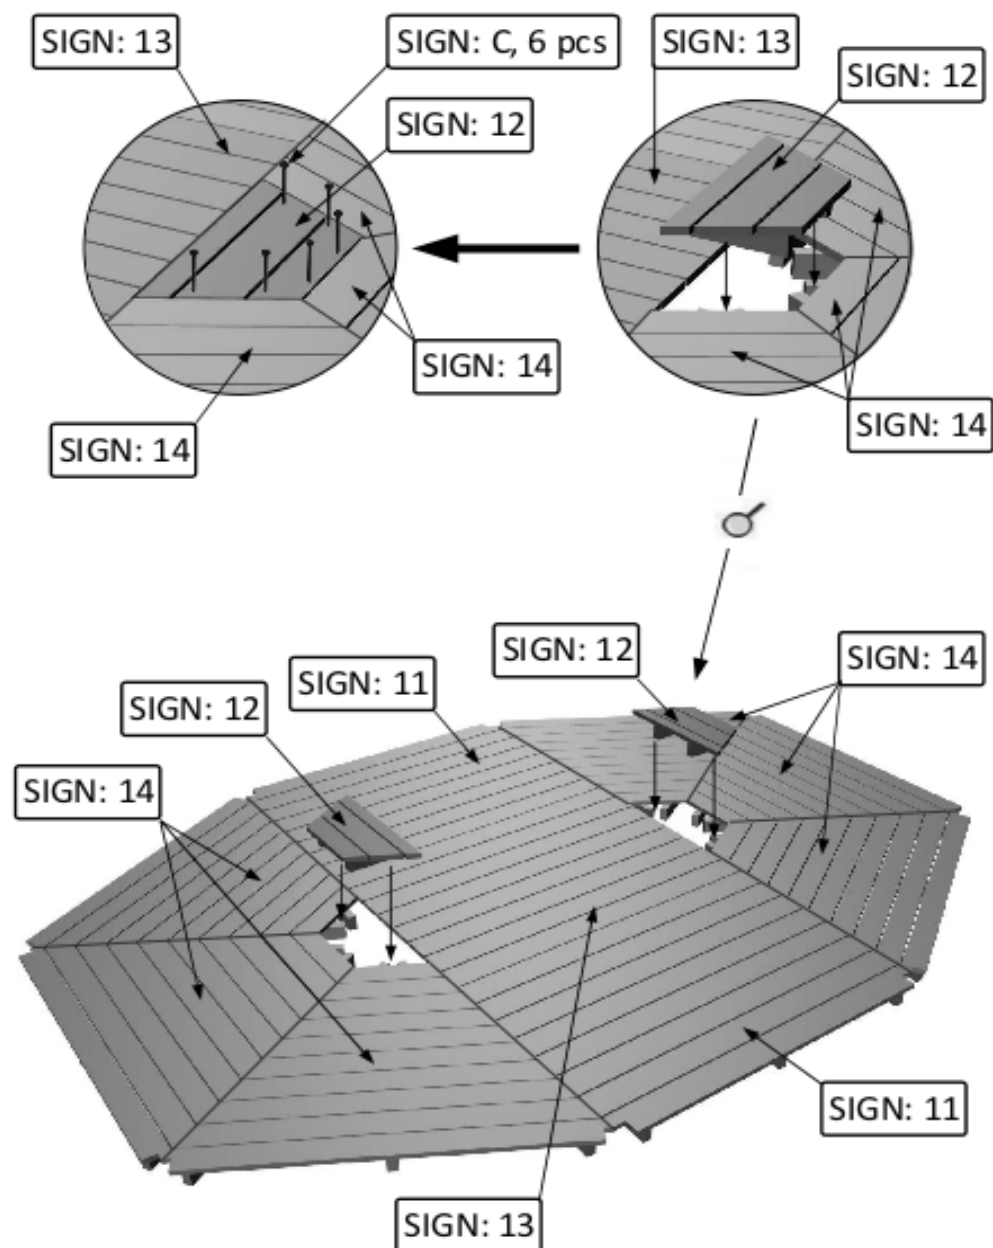


STEP 4

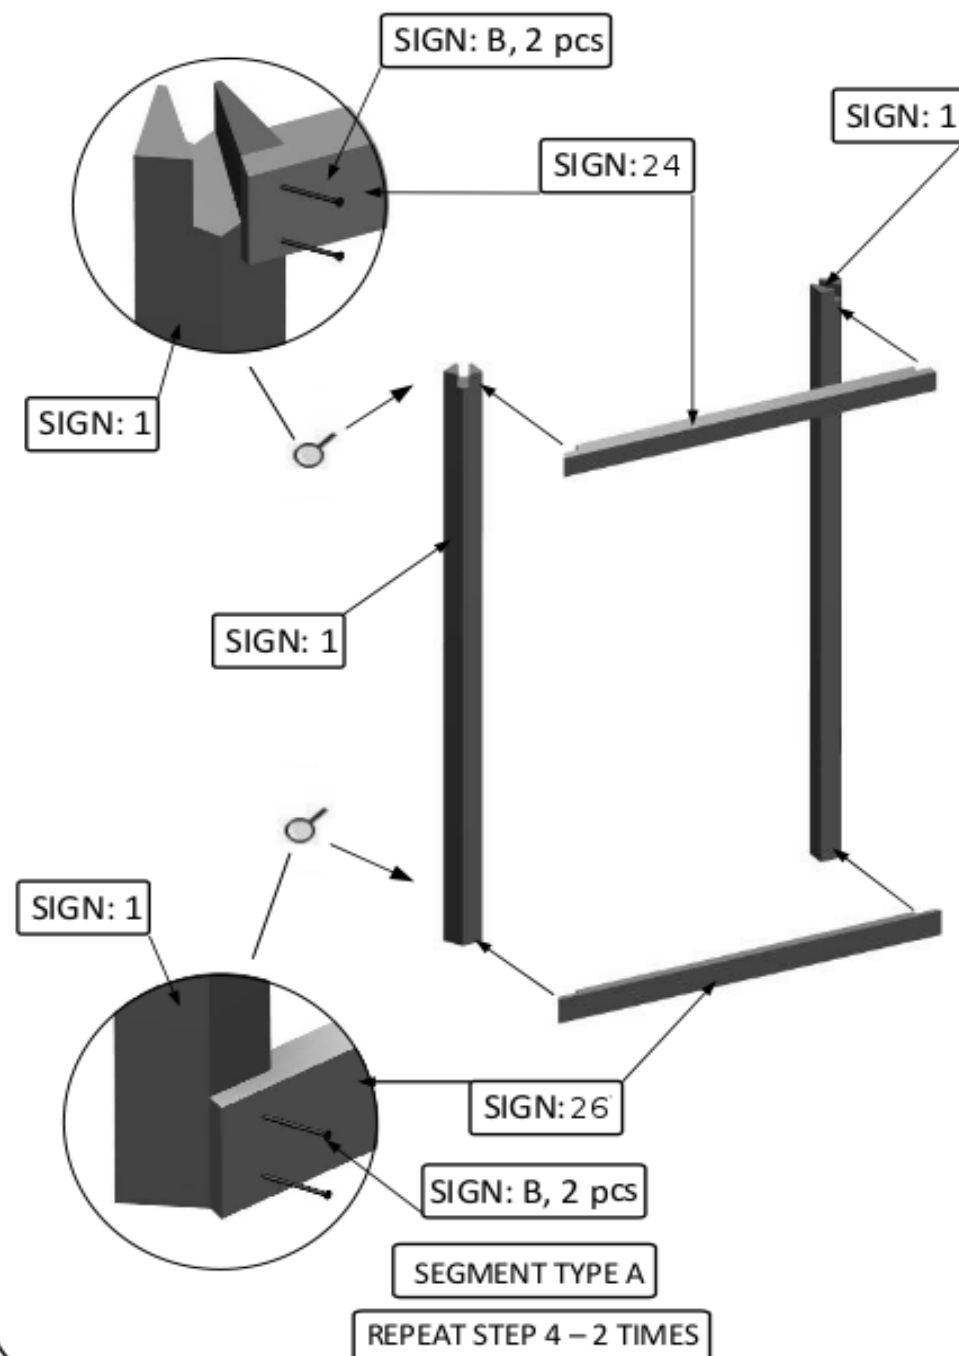

STEP 5

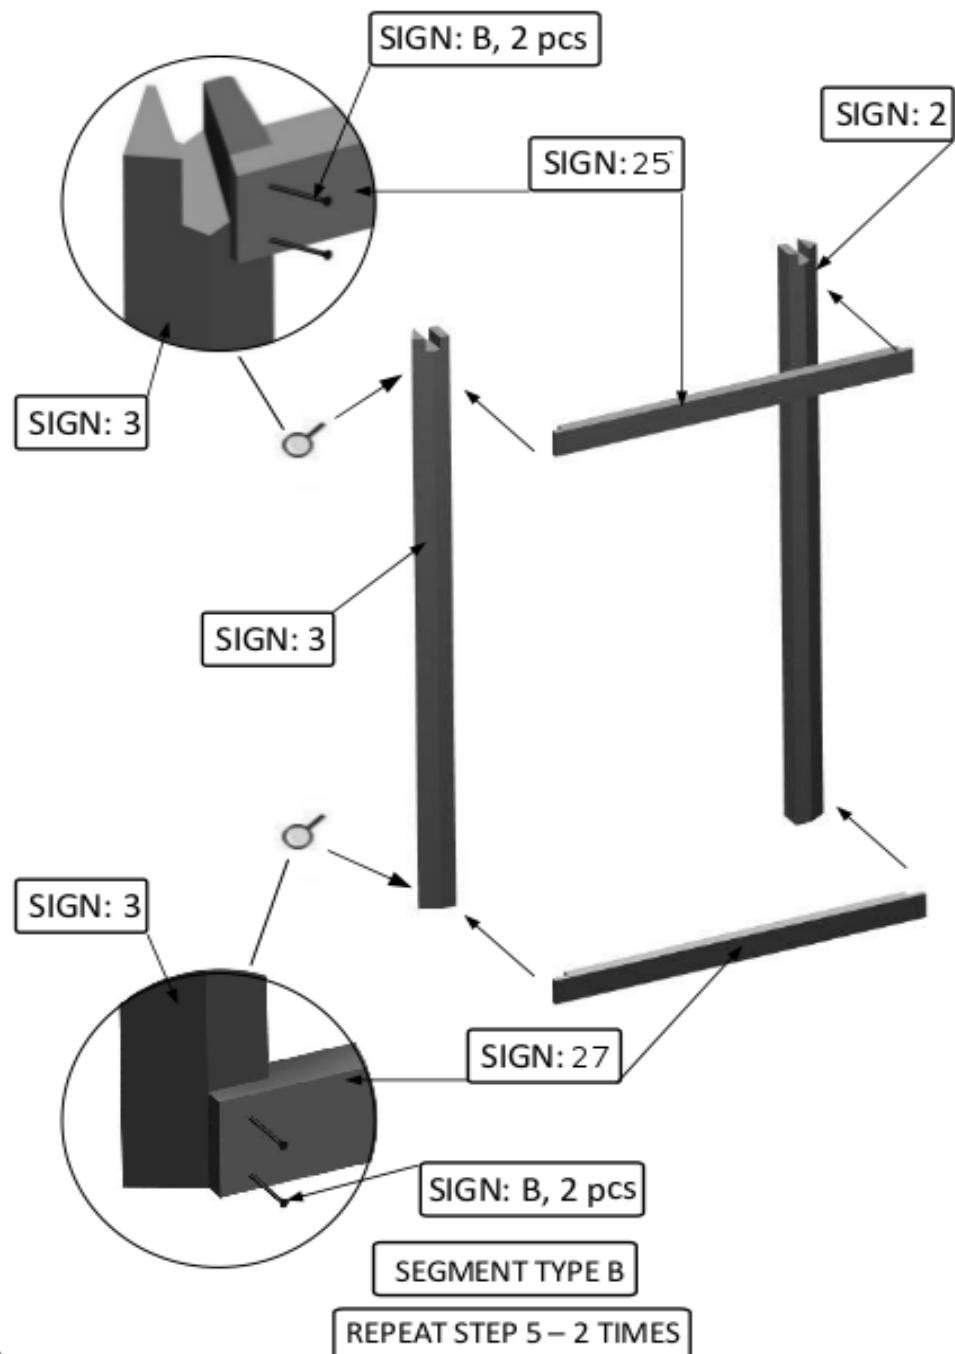


STEP 6

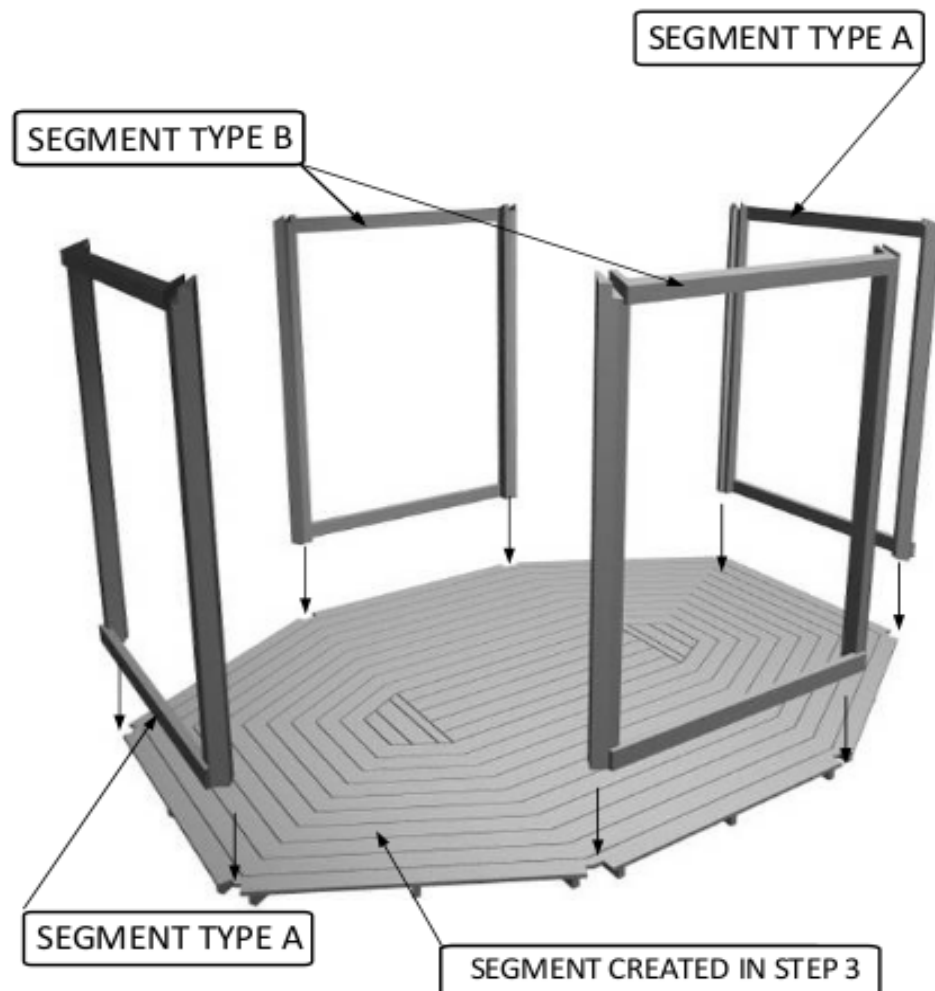


STEP 7

LIKE IN STEP 4


SEGMENT TYPE A

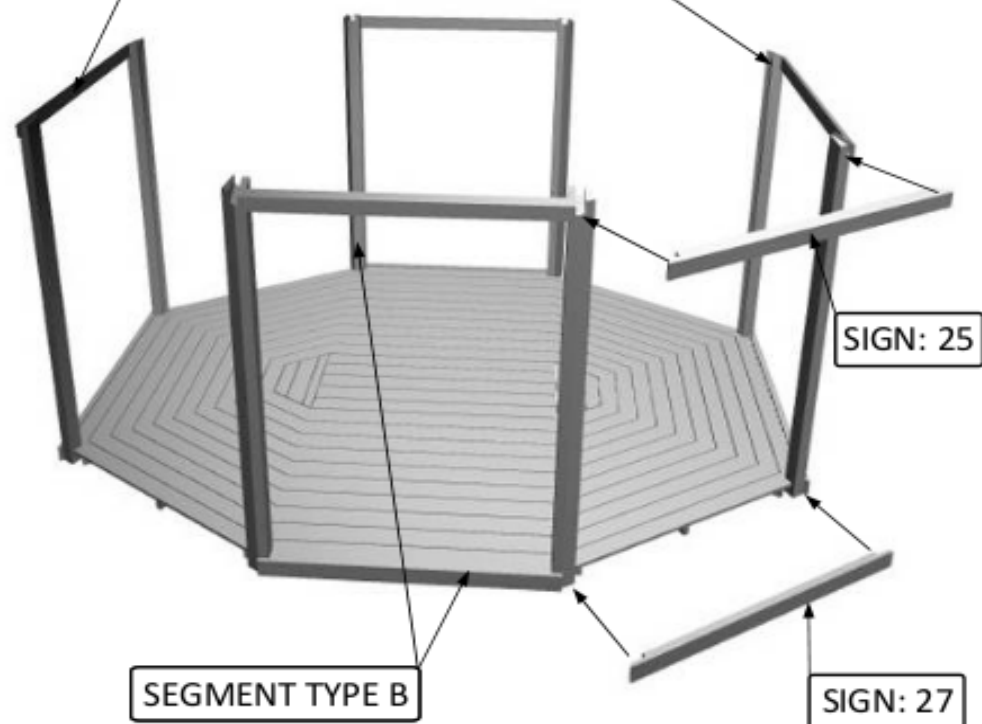


STEP 8

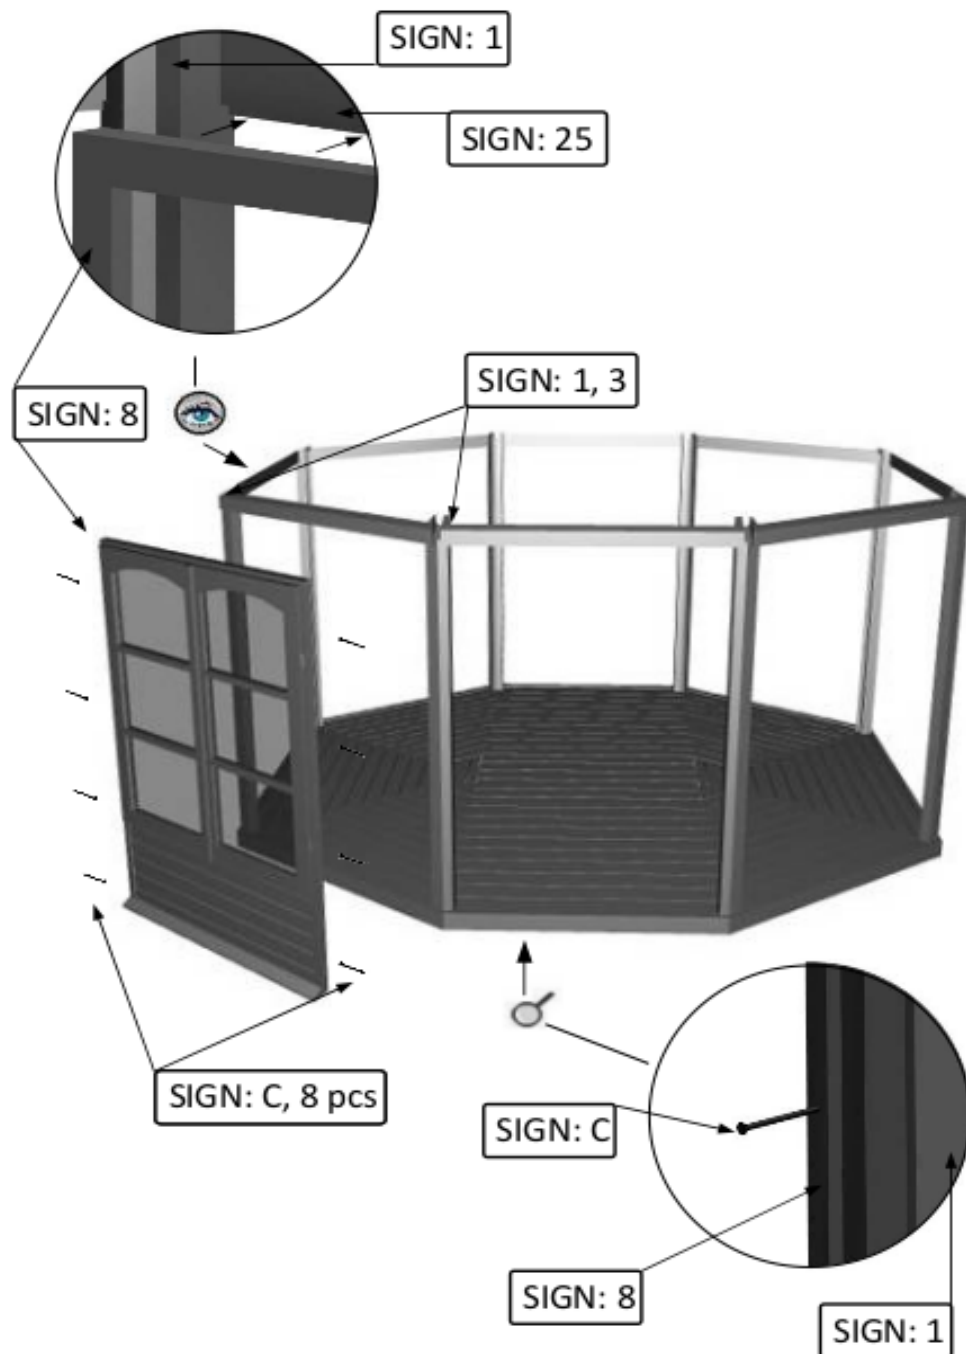

STEP 9

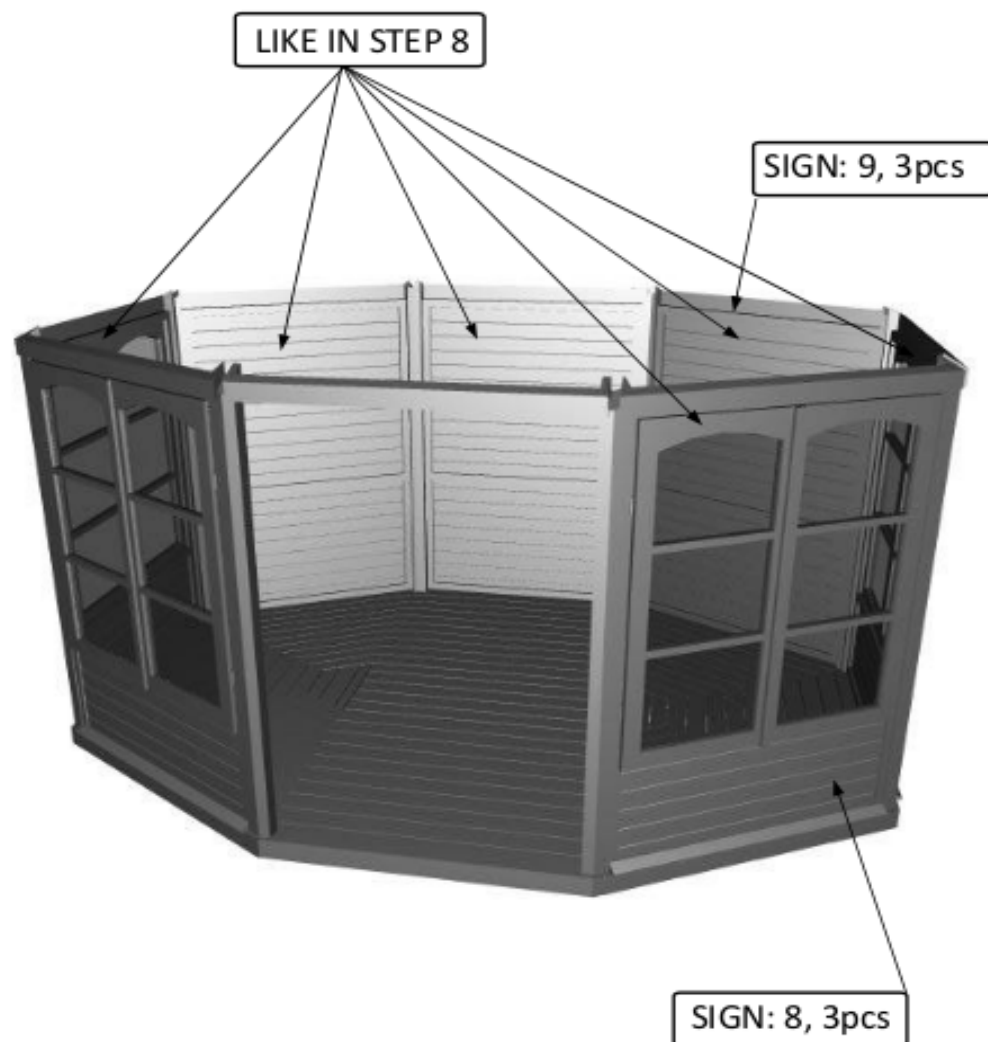


STEP 10

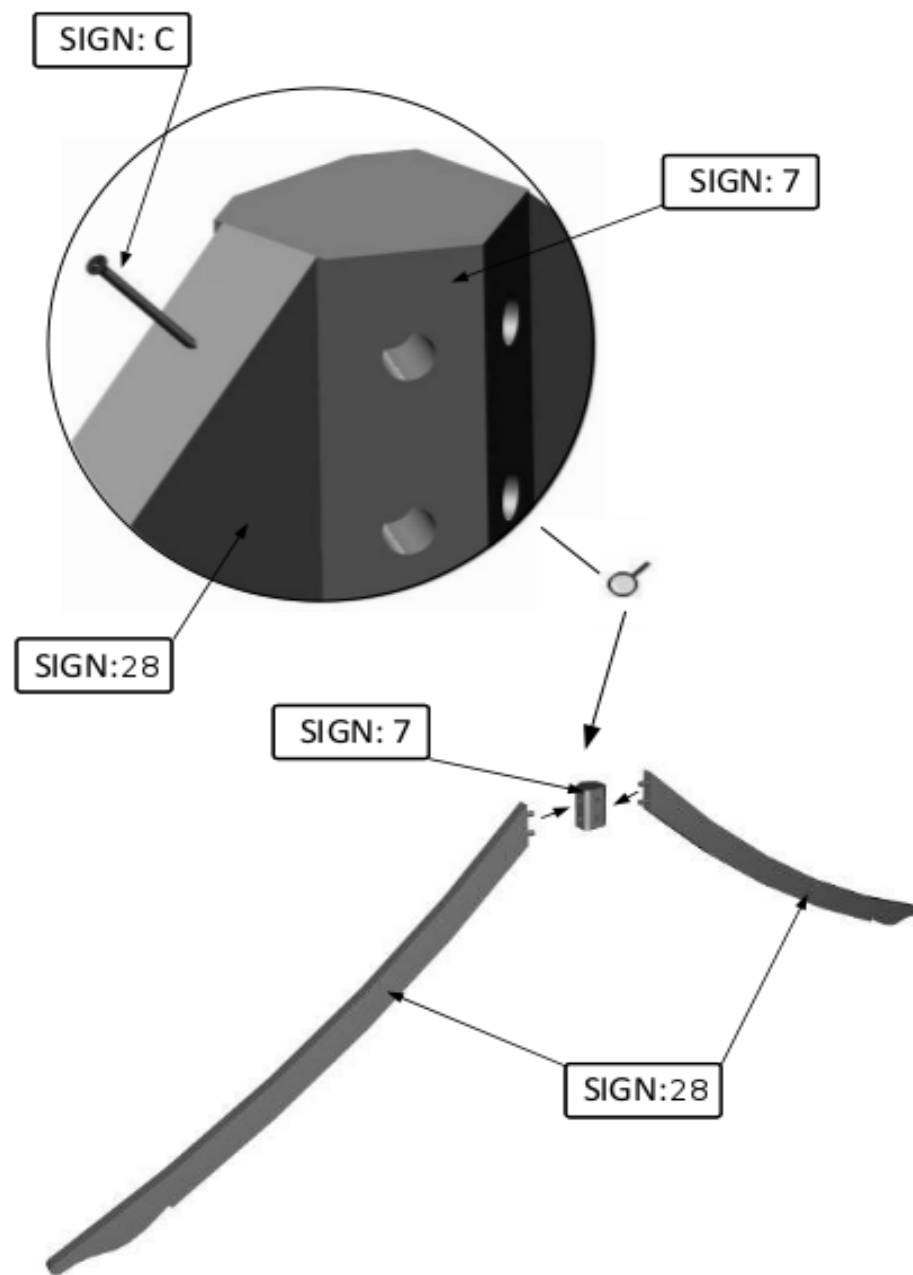


REPEAT STEP 10 – 2 TIMES

STEP 11

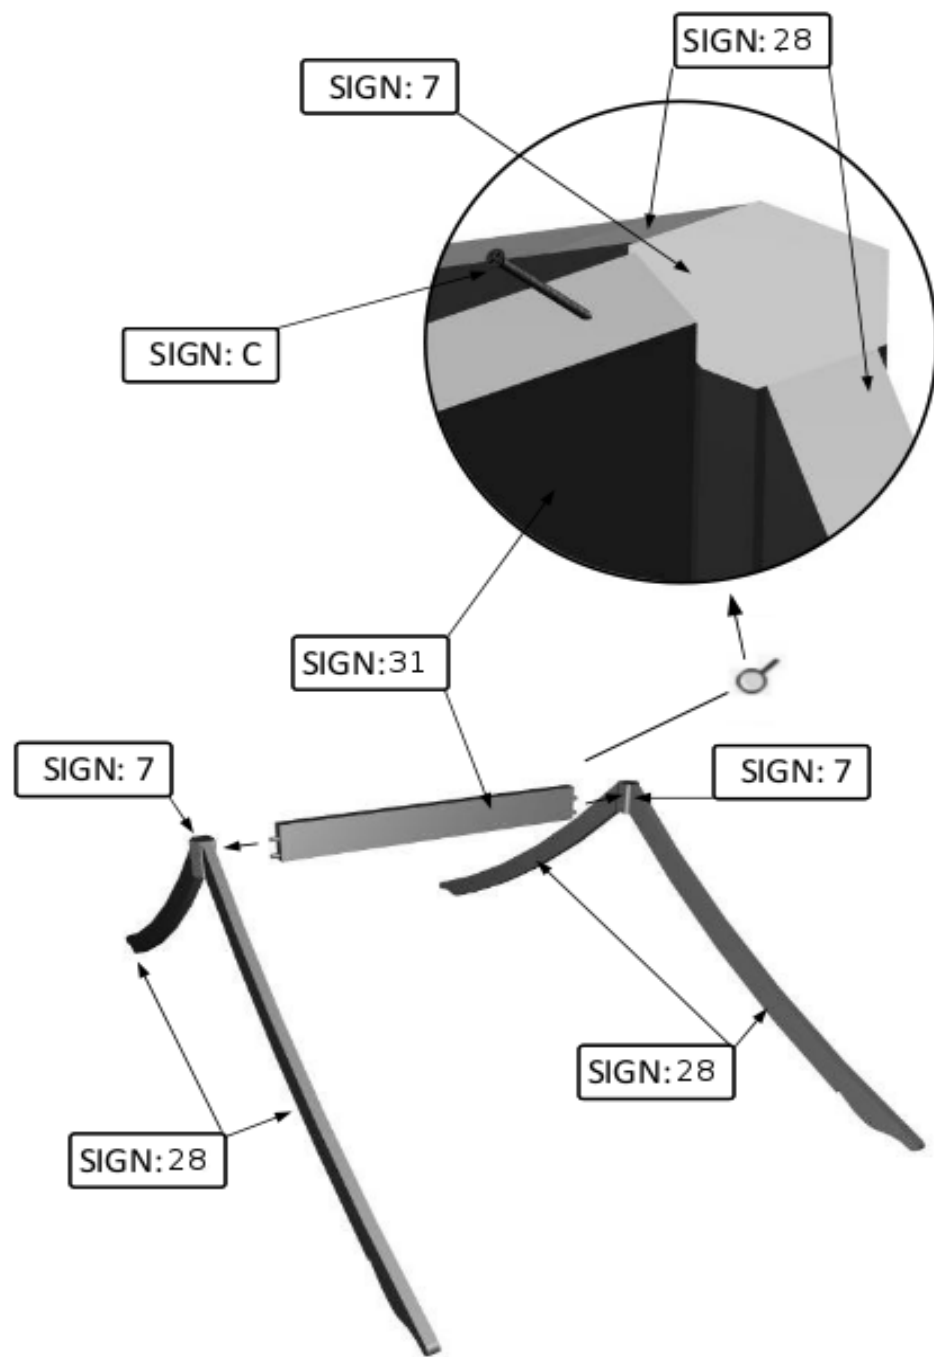


STEP 12

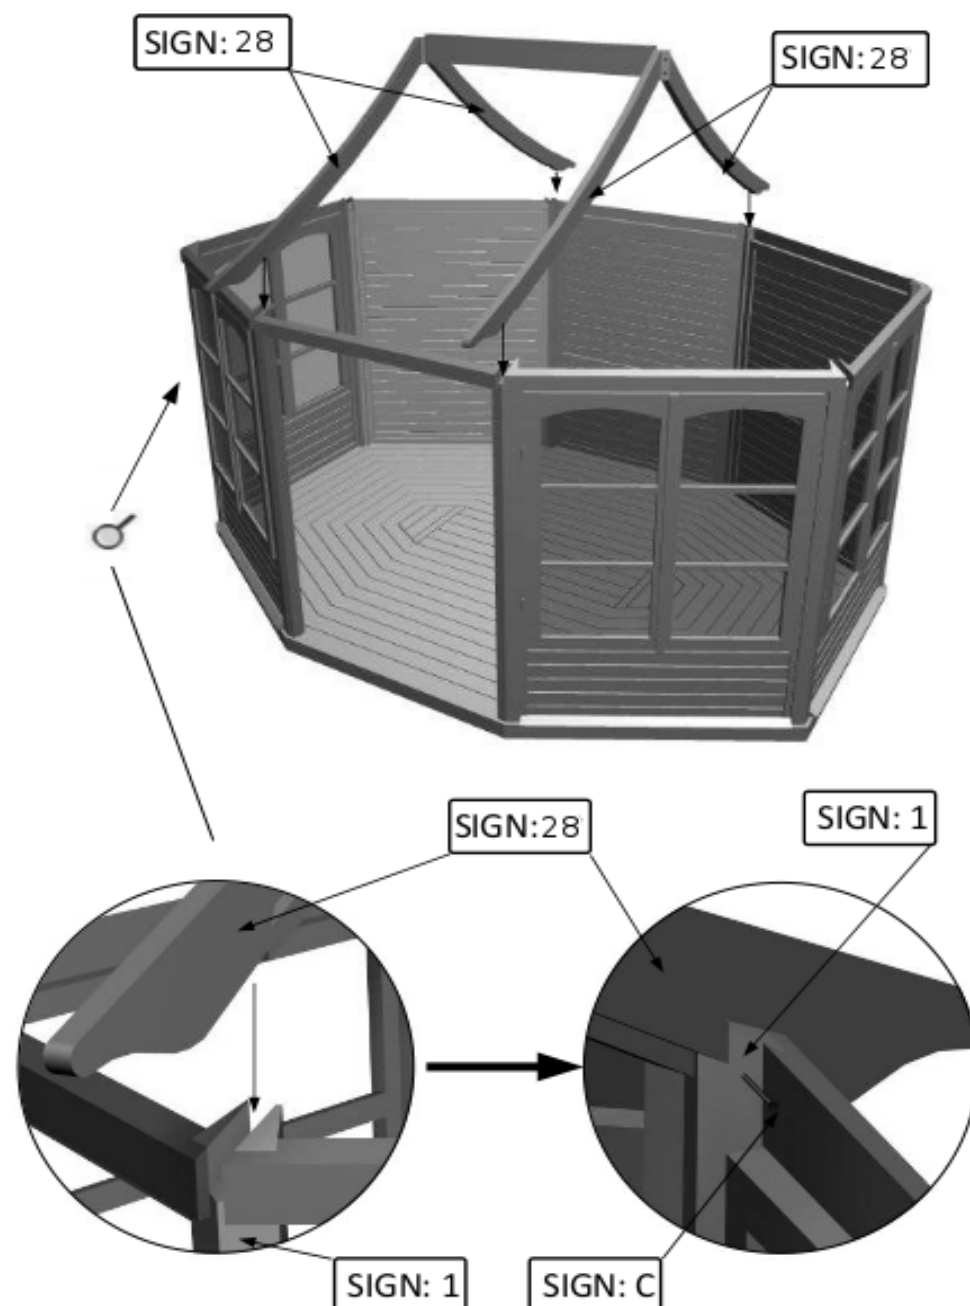

STEP 13


LIKE IN STEP 10, 12

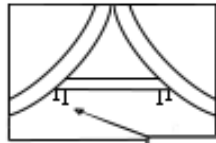

SIGN: A,B

SIGN:35A

SIGN: 36

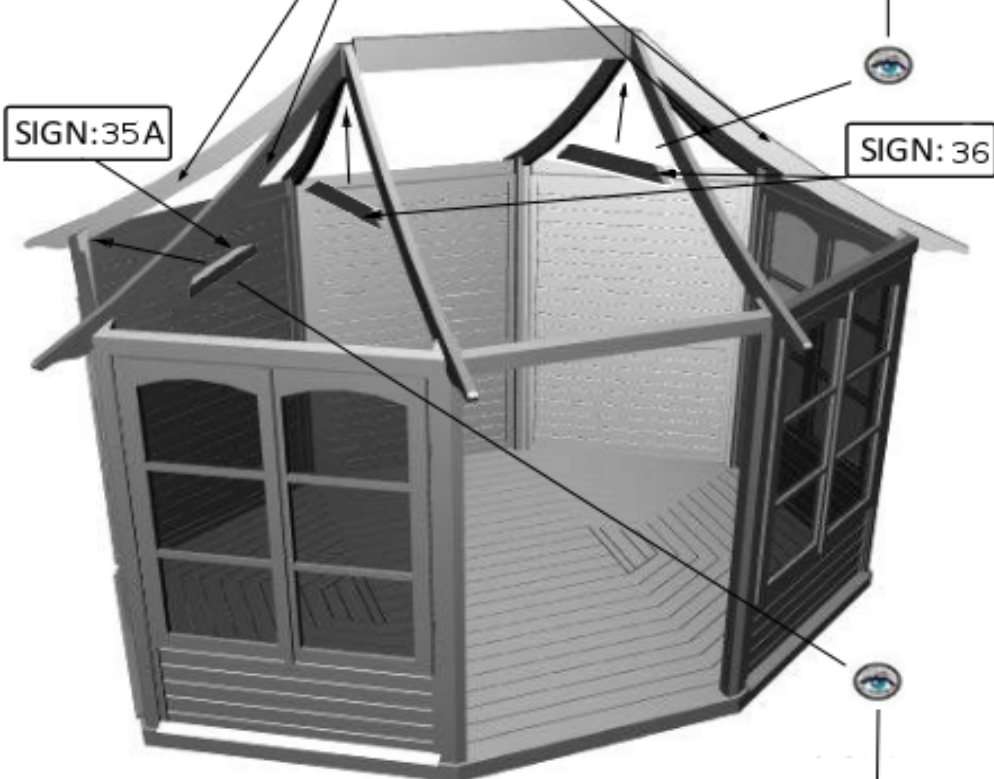


SIGN:24

SIGN:35A

SIGN: A,B


SIGN: A,B

Screw SIGN 35A and SIGN 35B in all corners !

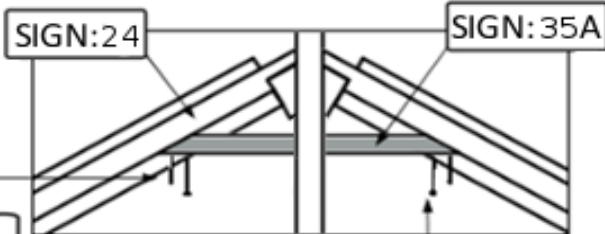

STEP 14

BEFORE ATTACHING THE DOOR FRAME (SIGN 15) TO THE POSTS, PLEASE TAKE OFF DOOR WINGS (SIGN 4; SIGN 5) FROM THE HINGES.

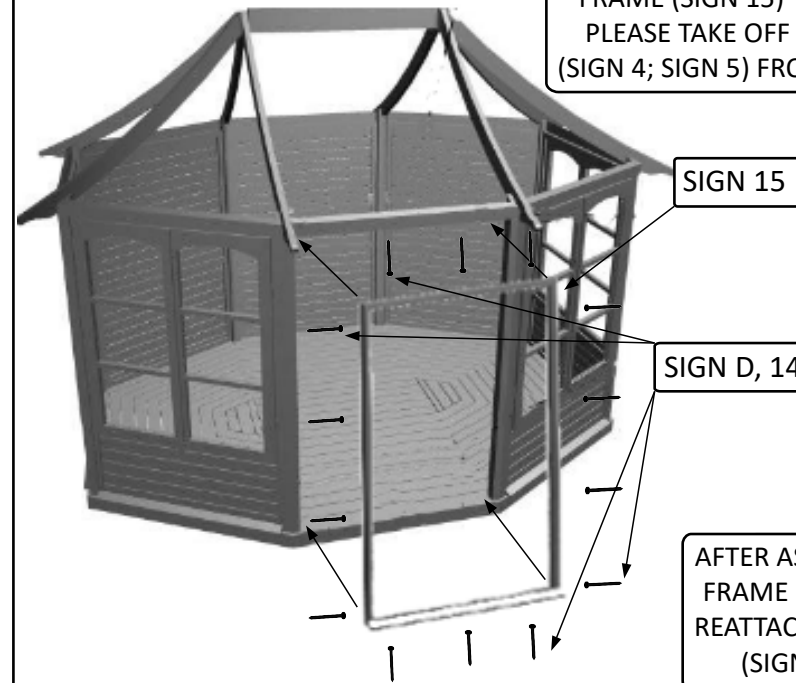



SIGN 15

SIGN D, 14 pcs

AFTER ASSEMBLY OF THE FRAME IS COMPLETED, REATTACH DOOR WINGS (SIGN 4; SIGN 5).


TO ADJUST THE POSITION OF DOOR WINGS (GAP BETWEEN THEM) TURN THE HINGES RIGHT OR LEFT

SIGN 4 OR 5

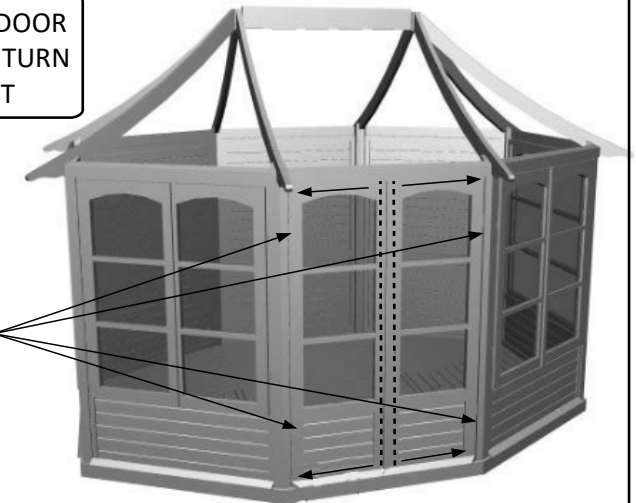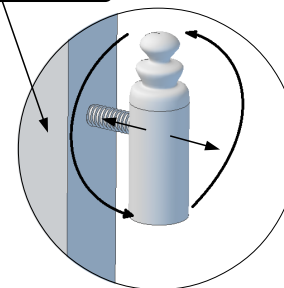


PLEASE BE AWARE THAT PERIODIC DOOR ADJUSTMENT MAY BE NEEDED AS A PART OF GOOD MAINTENANCE PRACTICE.

STEP 15

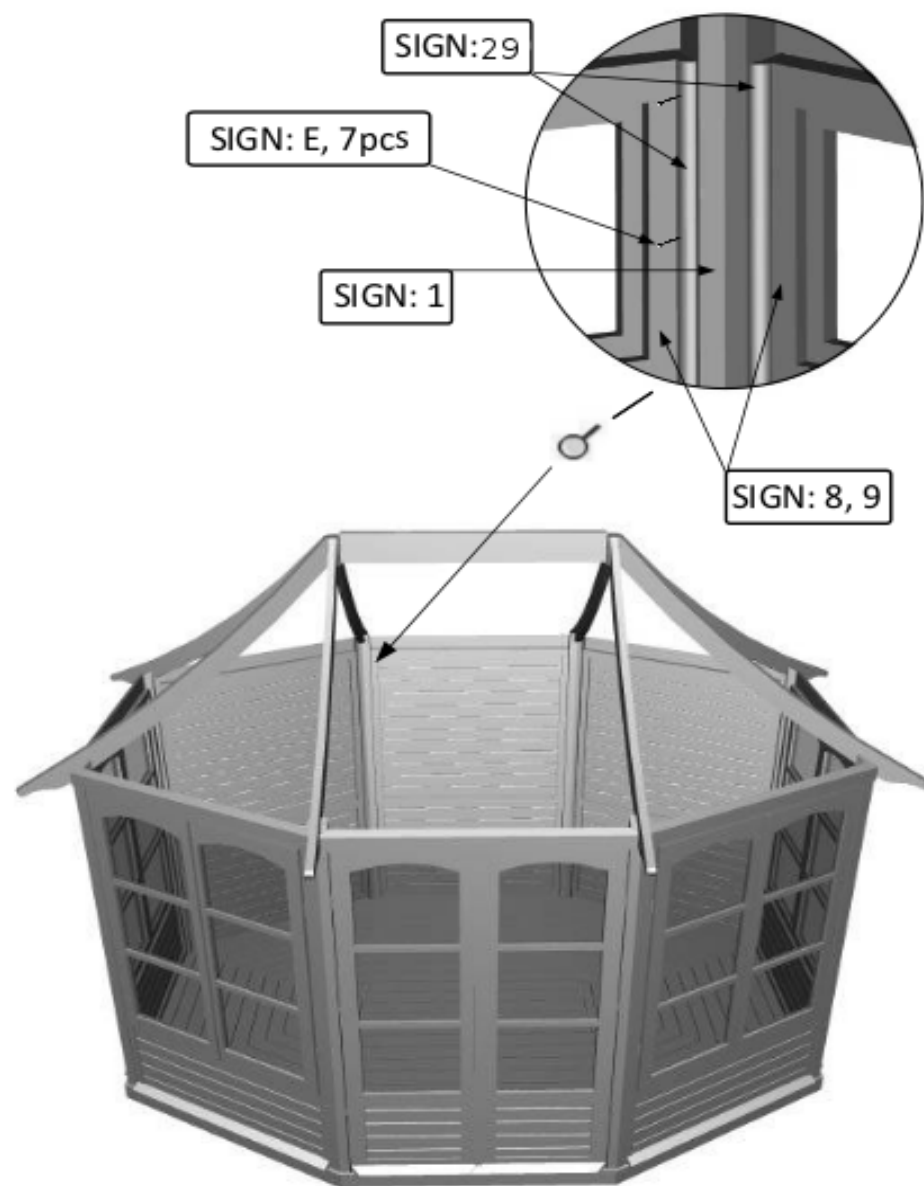


FOR ASSEMBLE SIGN:29 IN THE CORNER FROM BOTH SIDES OF COLUMNS (SIGN: 1,2,3) USE NAILS SIGN: E (7 pcs TO SIGN: 29)


STEP 16

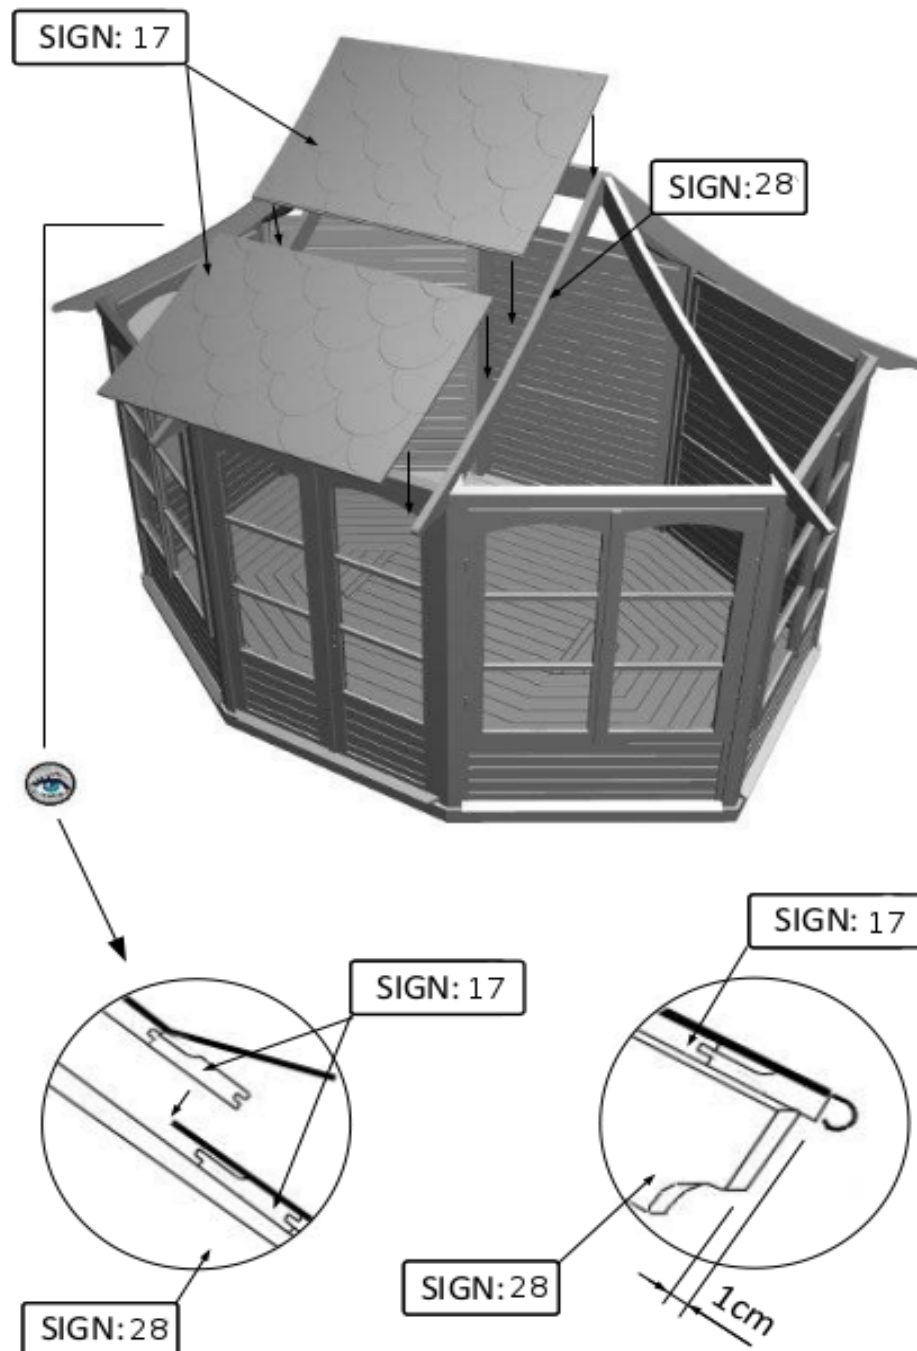

STEP 17

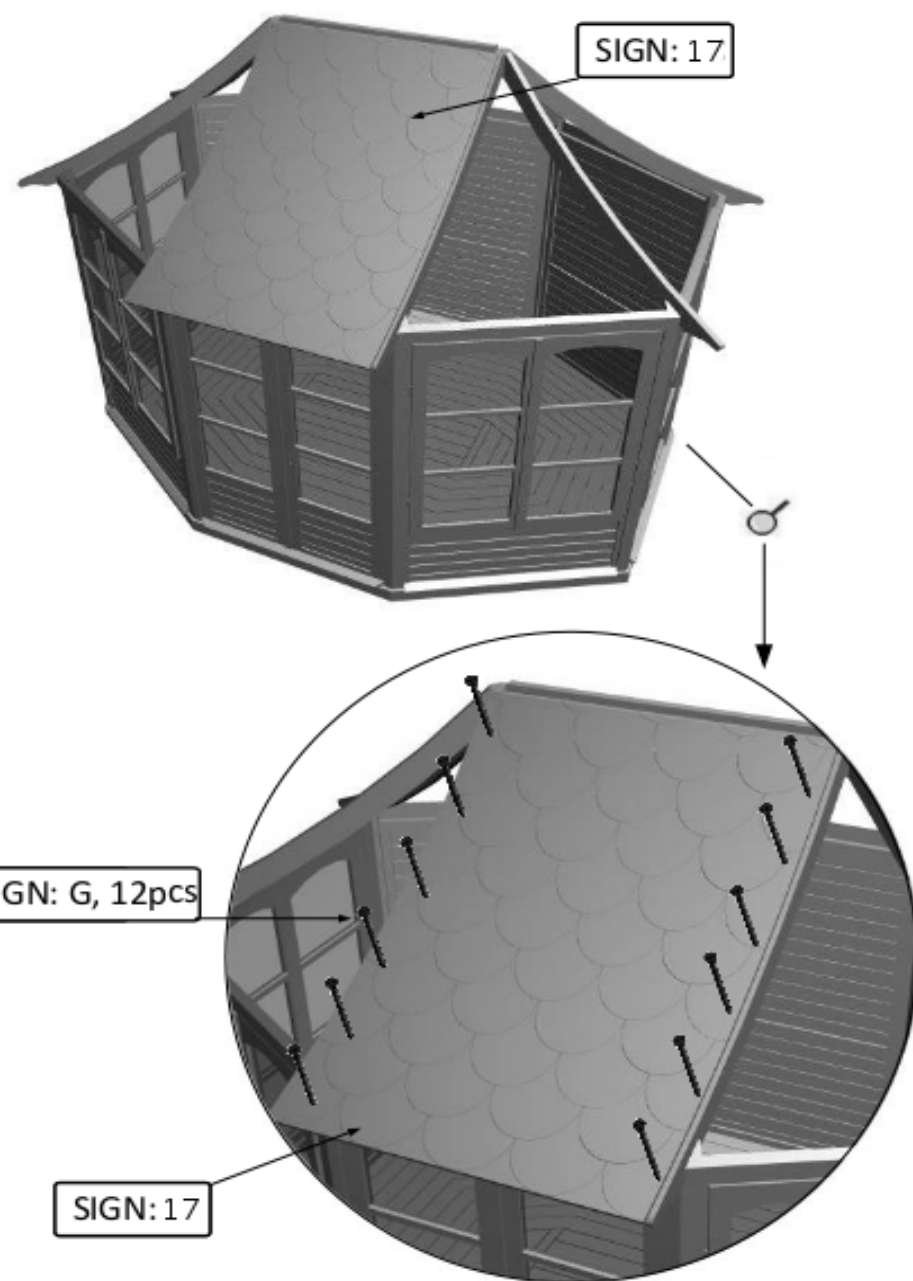


STEP 18

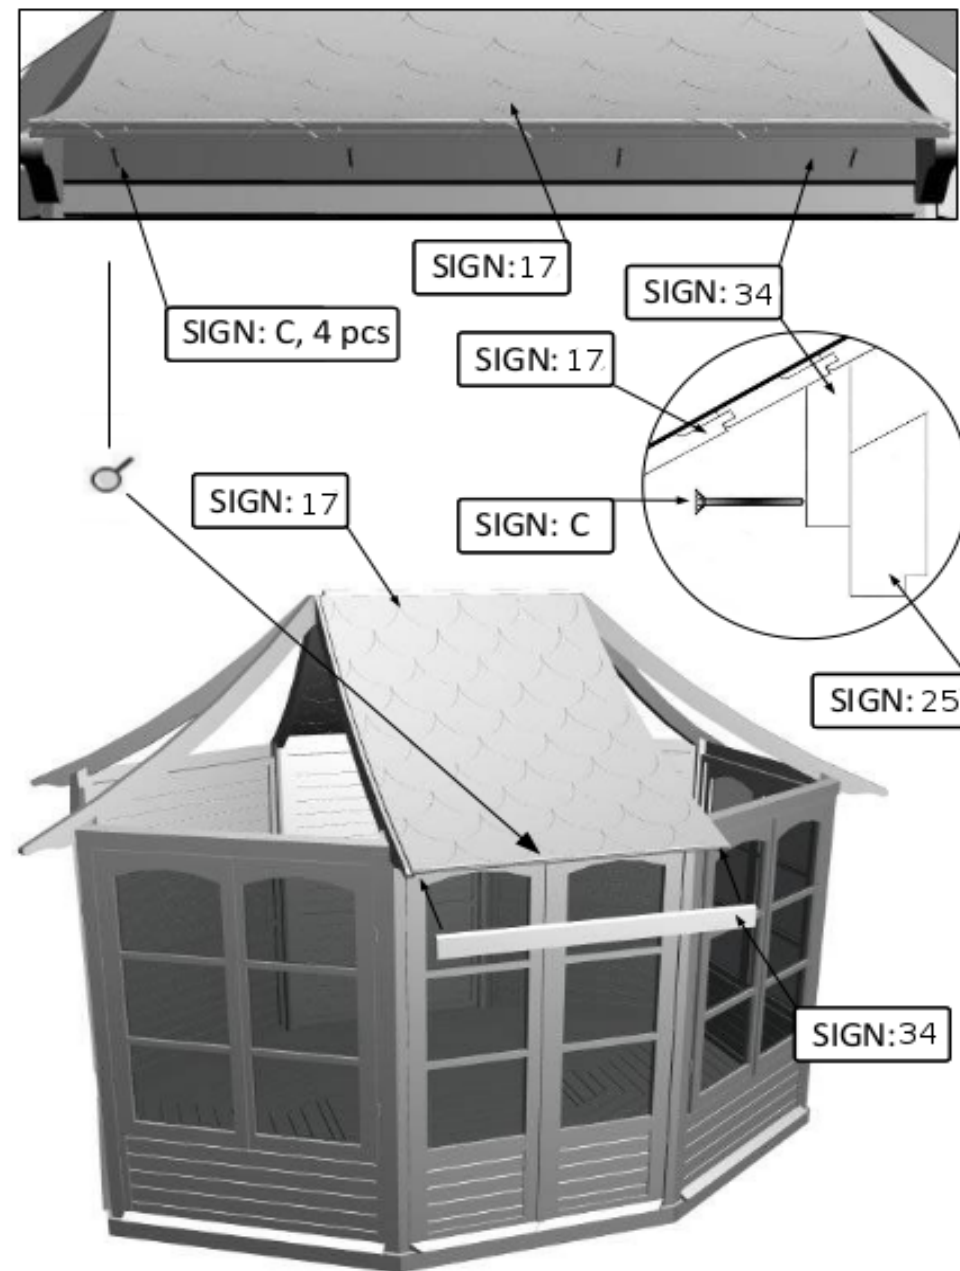


REPEAT STEP: 16, 17, 18– 2 TIMES

STEP 19

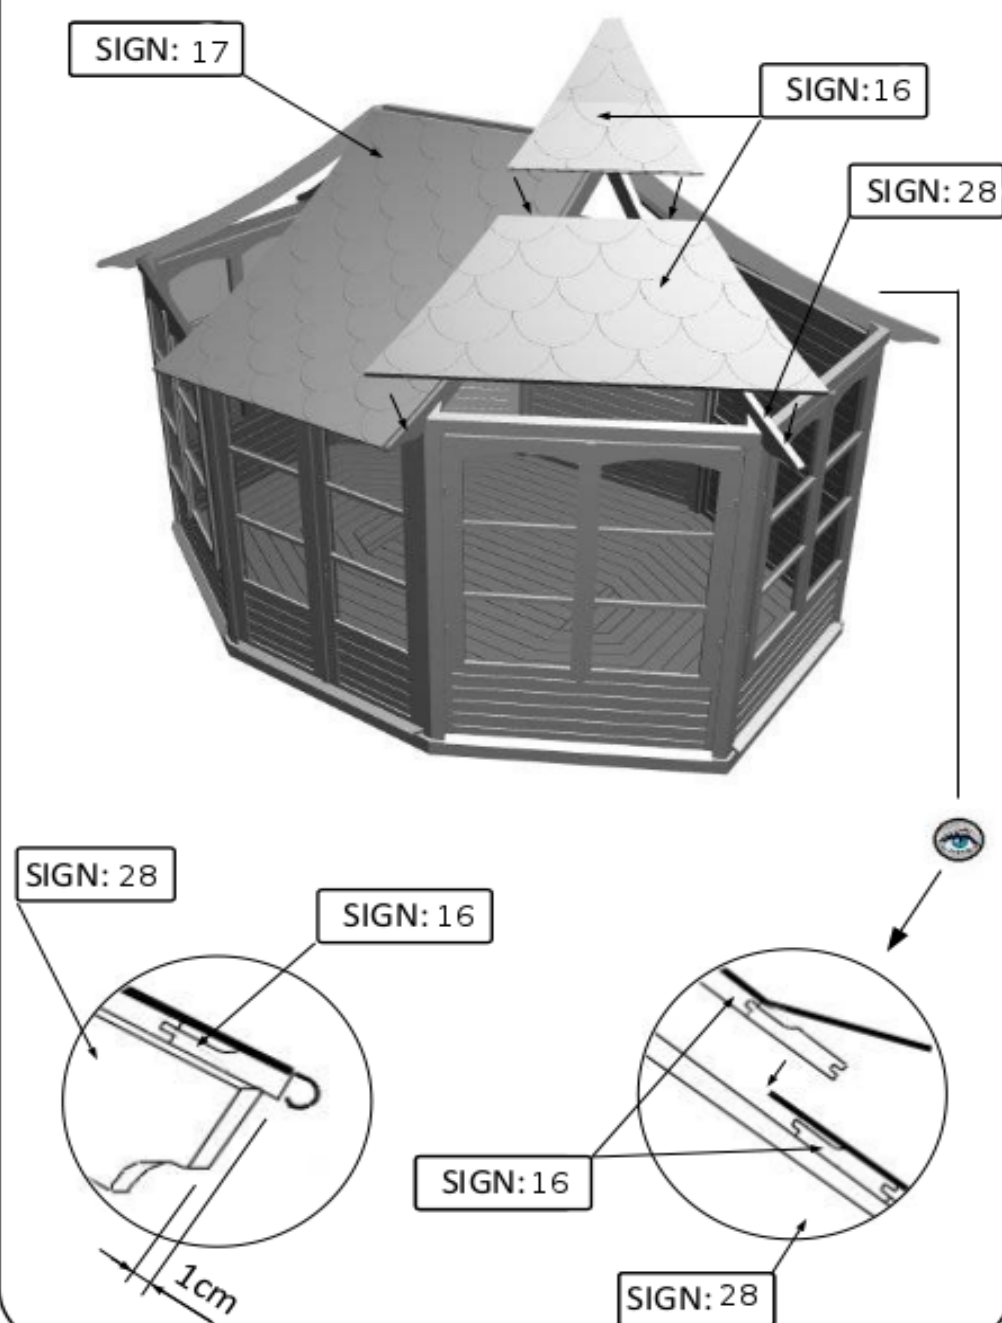

STEP 20

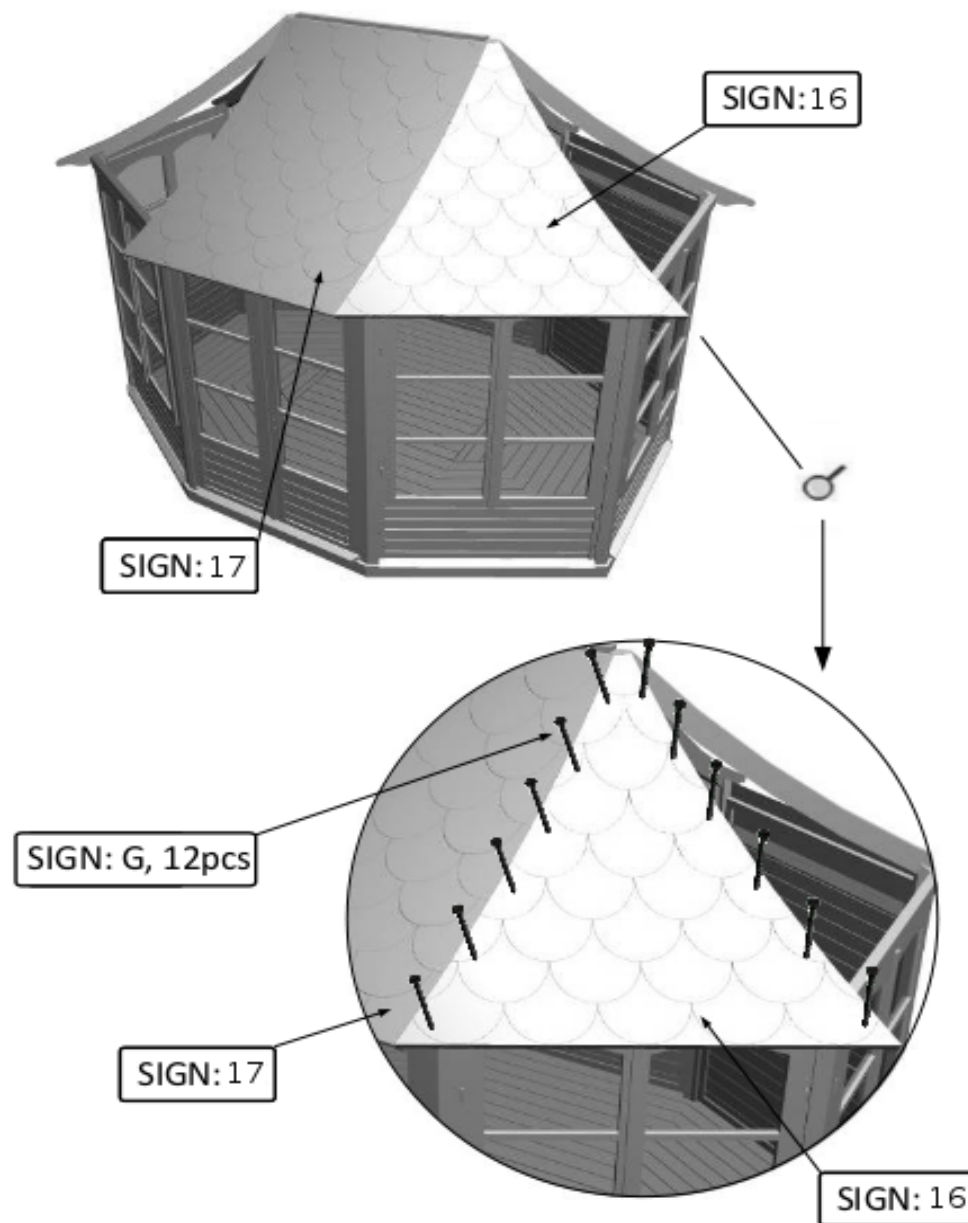

STEP 21



SIGN: C, 4 pcs

SIGN: 16

SIGN: 33

SIGN: 16

SIGN: C


SIGN: 24

SIGN: 16

SIGN: 33

REPEAT STEP: 19, 20, 21- 6 TIMES

STEP 22

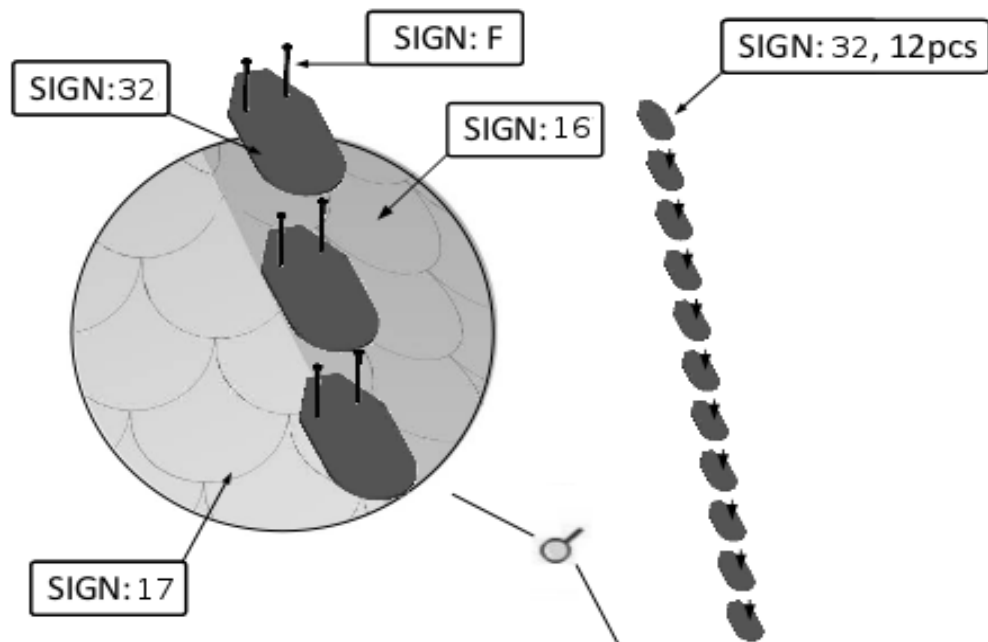


SIGN: 32, 12 pcs

SIGN: 32

SIGN: F


SIGN: 16

SIGN: 17

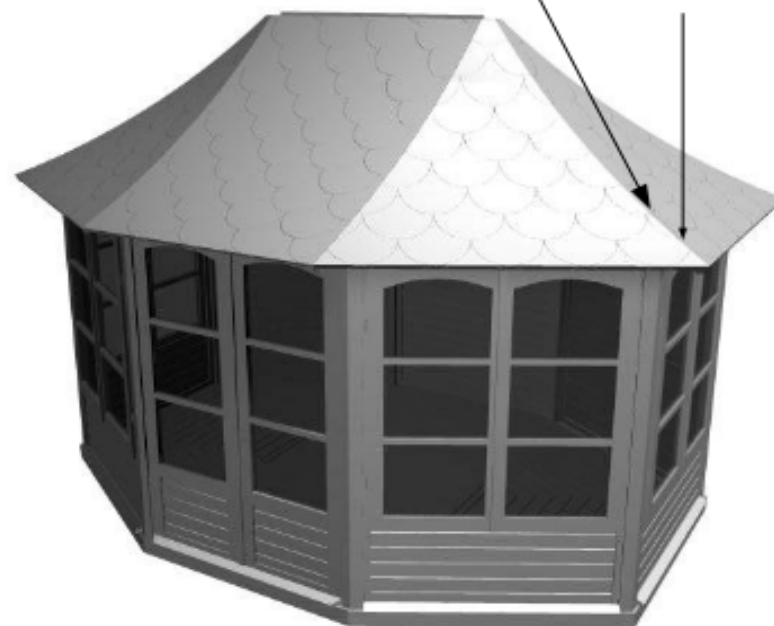


REPEAT STEP: 22 AROUND THE ROOF

STEP 23

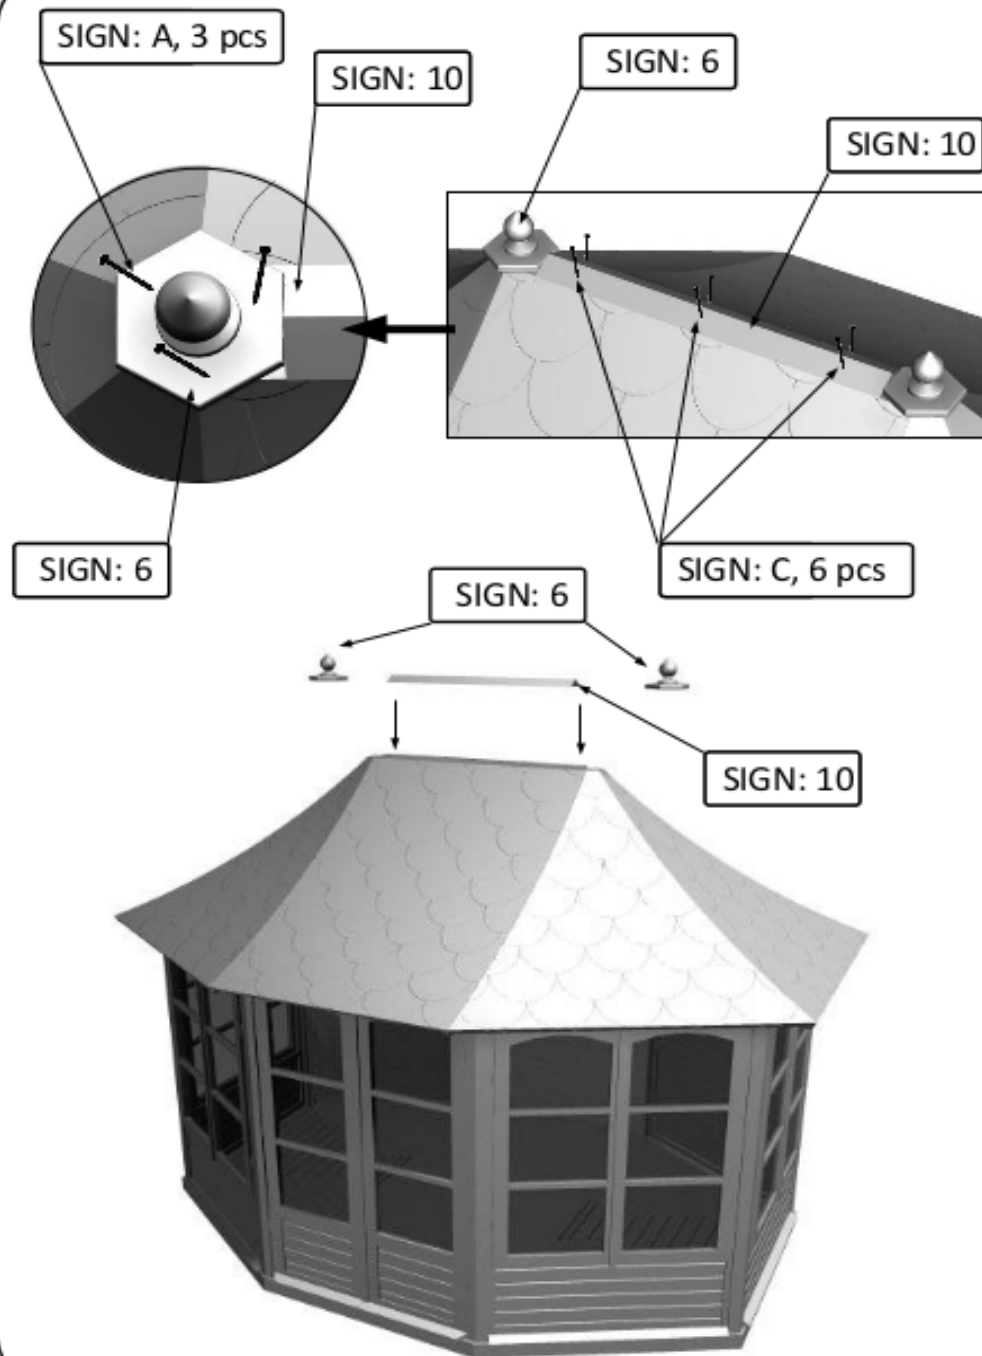

STEP 24

PUT BELT OF LEAD ON ROOF (SIGN:17,16)
THEN USE WOODEN SCRIBER TO COMPENSATE LEAD (SIGN:30)

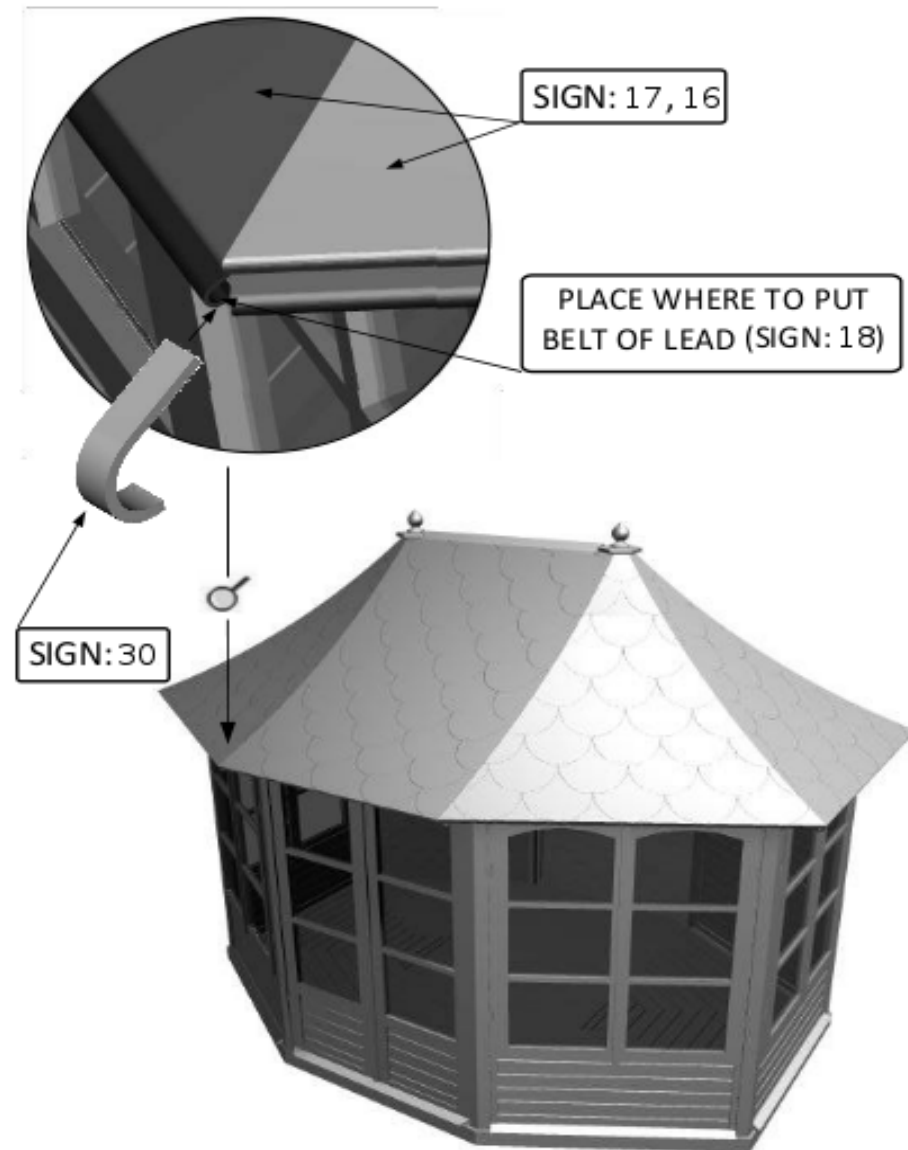

REPEAT STEP: 24 AROUND THE ROOF

STEP 25


SIGN: 18

SIGN: III

SIGN: II

SIGN: IV

SIGN: I

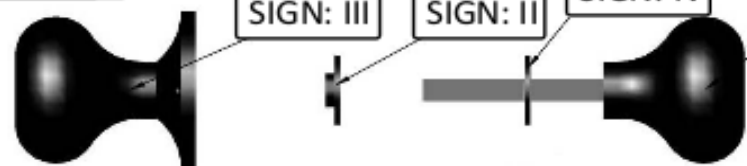


PUT SIGN: I FROM INTERNAL SIDE DOOR TO THE HOLE IN LOCK
THEN SCREW SIGN: II USE SCREWS FROM PACKAGE

SIGN: I


SIGN: 4

SIGN: II

SCREWS, 2psc

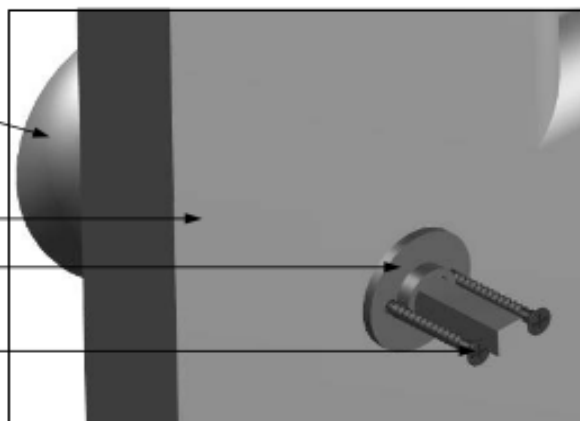

PUT SIGN: III ON SIGN: II AND SCREW USE SCREWS FROM PACKAGE

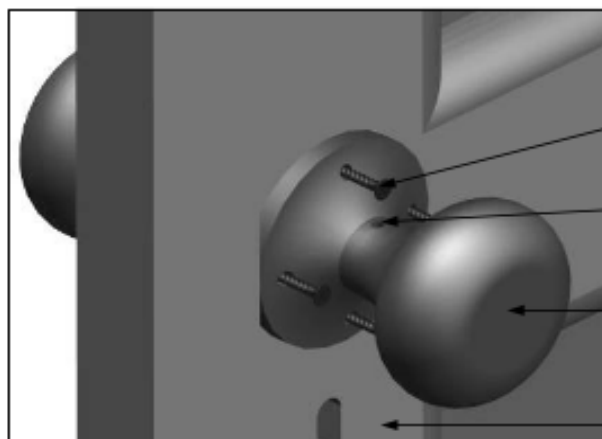

SCREWS, 4psc


SCREW

SIGN: III

SIGN: 4

STEP 26

APPLY SIGN: 20 TO THE HOLE BELOW SIGN: 18
PUT THE KEY TO THE LOCK
AND PLACE SIGN: 20 SO THAT THE KEY BE IN THE MIDDLE
THEN SCREW USE SCREWS FROM PACKAGE

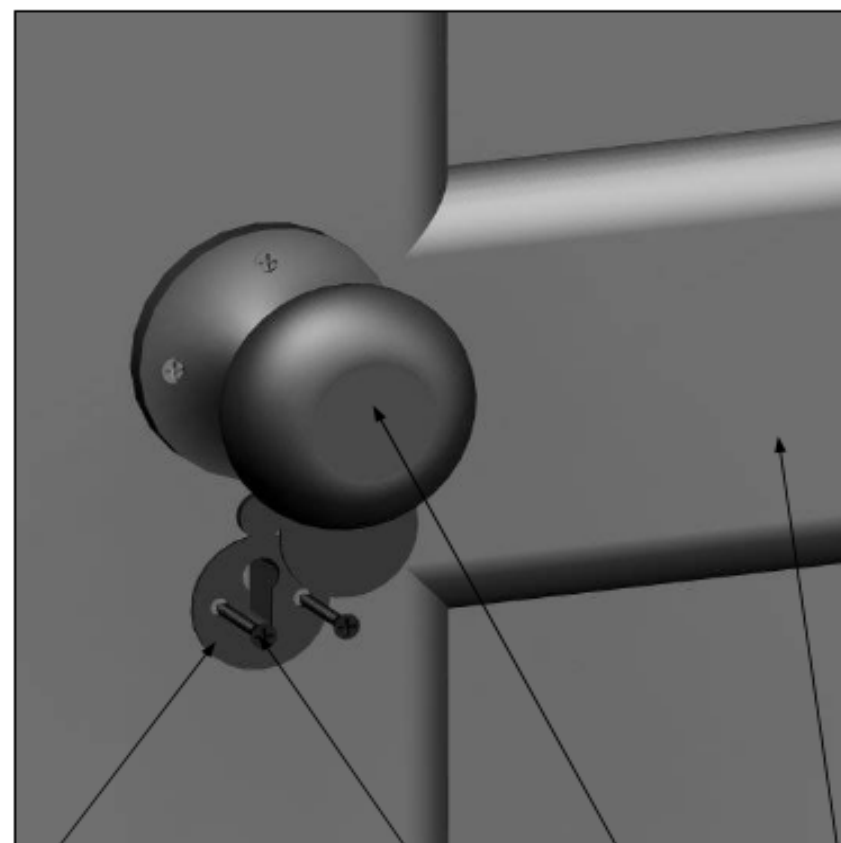

SIGN: 20

SCREWS, 2psc

SIGN: 18

SIGN: 4

INSTALL WINDOW HANDLES - SIGN 37

STEP 27

SCREW IN SIGN: 22 TO DOOR (SIGN: 5)
USE SCREWS FROM PACKAGE

SCREWS, 4pcs

SIGN: 22

PUT SIGN: 23 ON SIGN: 22 SO THAT THE HOLE
FIT ON THE PIN, THEN MARK POSITION

~0,3cm

SIGN: 15

SIGN: 5

SIGN: 22

BORE HOLE USE DRILL DIAMETER 8
ON THE DEPTH 2cm
THEN SCREW USE SCREWS FROM
PACKAGE

SCREWS, 2pcs

SIGN: 23

DRILL

SIGN: 15

SIGN: 5

SIGN: 23

SIGN: 15

REPEAT STEP 27 AT THE TOP OF DOOR (SIGN: 5) AND ON ALL WINDOWS

STEP 28

SCREW SIGN: 21 TO COLUMN (SIGN: 1)
USE SCREWS FROM PACKAGE

SCREWS, 2pcs

SIGN: 21

SIGN: 1, 2, 3

OPEN DOOR TO THE MOMENT WHERE
YOU WANT TO BLOCK IT
THEN APPLY SIGN: 19 AND MARK POSITION

SIGN: 8

SIGN: 4

SIGN: 19

SCREW IN SIGN: 20 USE SCREWS
FROM PACKAGE

SIGN: 1, 2, 3

SIGN: 21

SCREWS, 2pcs

SIGN: 19

SIGN: 5

REPEAT STEP 28 AT THE SECOND SIDE OF DOOR AND ON ALL WINDOWS