



Harrogate Summerhouse


PRODUCT C42236

*FLOOR


EQUIPMENT



PARTS

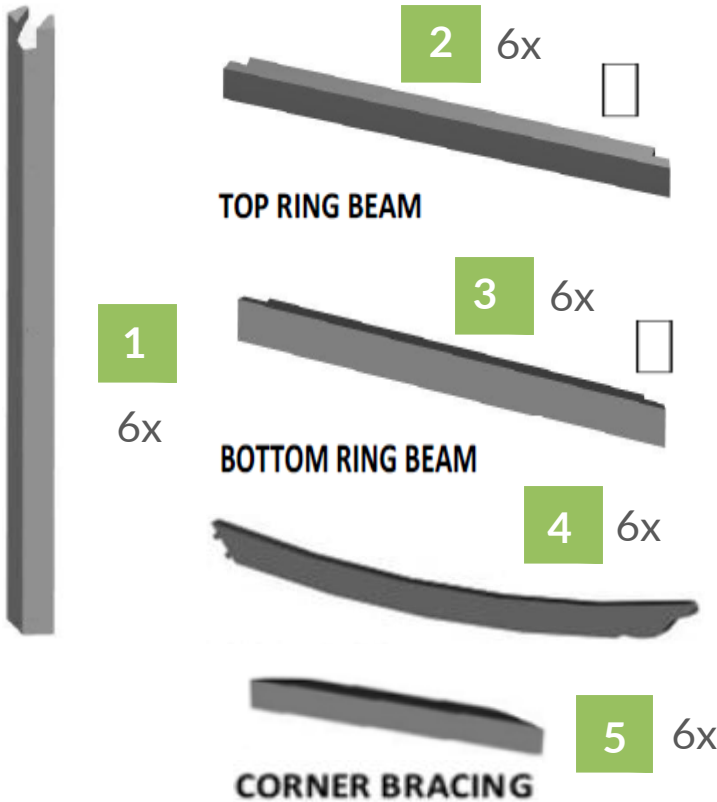

PARTS

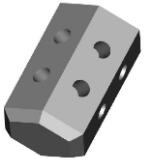

6

1x




7

1x




8

1x

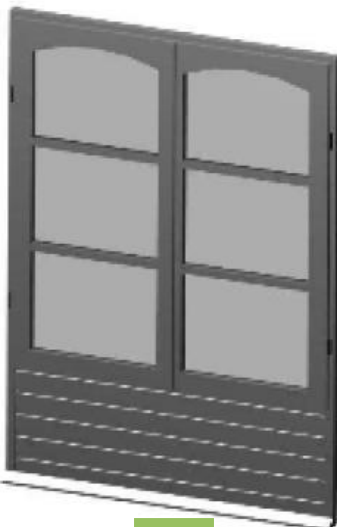

9

2x

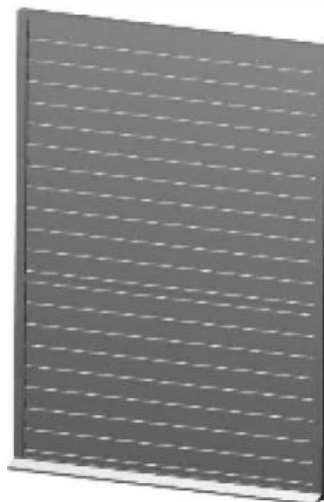

10

1x

PARTS




11

1x

12*

6x

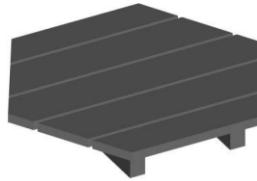

13

6x



DOOR FRAME

14*

6x



15


6x



COVER BEAD

6

1x

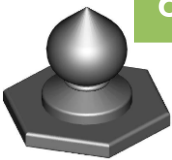


8

78x



18

12x

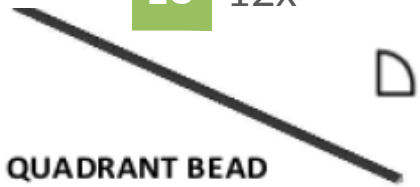

QUADRANT BEAD

19

2x




20

6x



PARTS

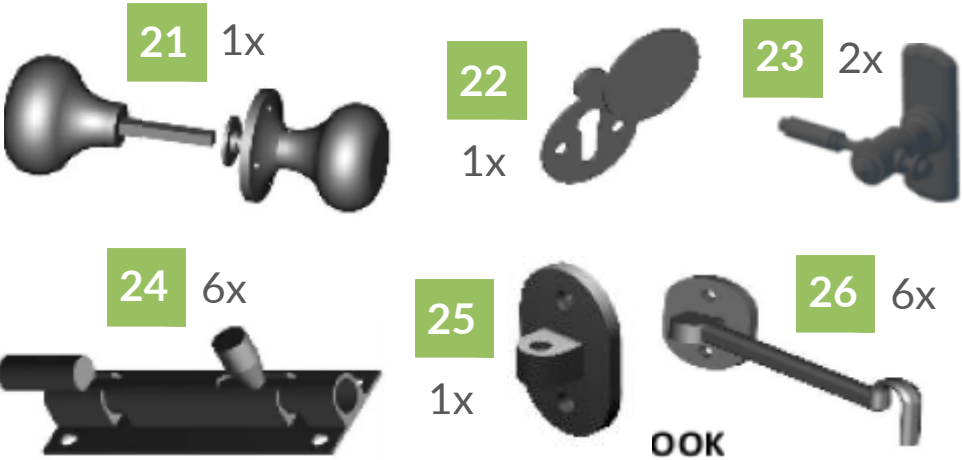


PACKAGE OF TILLED ELEMENTS

58x






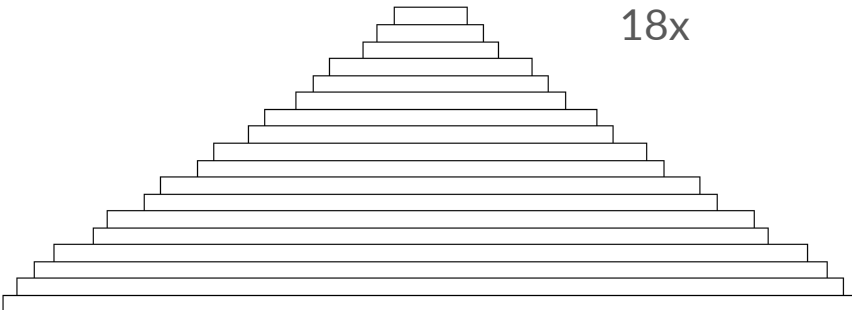


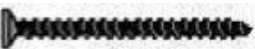



PACKAGE OF EACH ROOF ELEMENT


18x

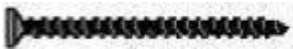

FITTINGS



A	3x		5x90 mm
B	12x		5x80 mm
C	72x		5x60 mm
D	66x		4,5x60 mm
	96x*	With floor elements	
E	366x		2,8x15 mm
F	156x		3x25 mm
G	216x		2x40 mm
H	30x		2,5x12 mm
I	24x		3,5x40 mm
J	70x		1,2x20 mm

STEP 1*

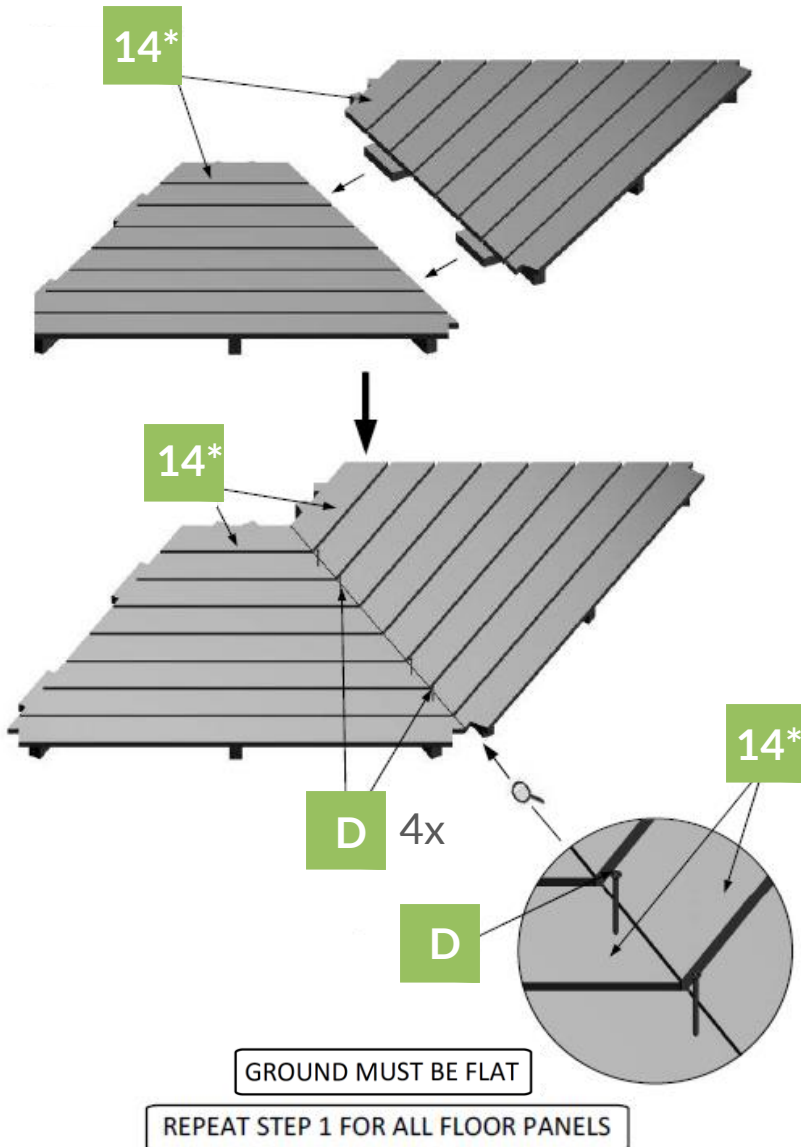


STEP 2*

SEGMENT CREATED IN STEP 1

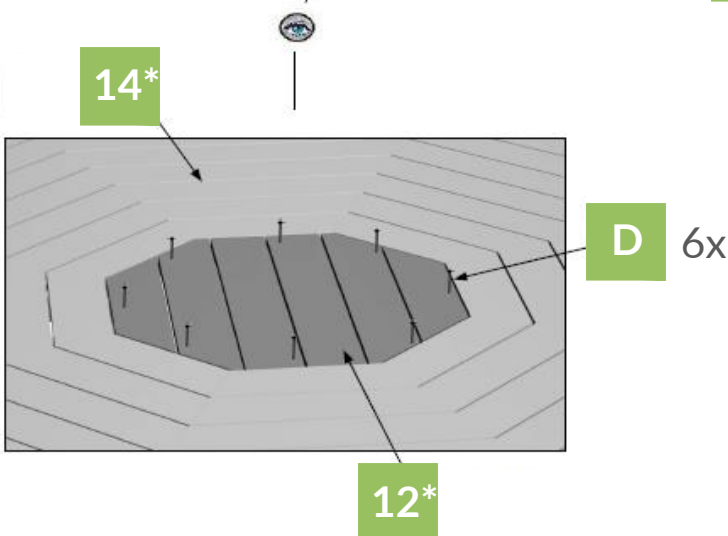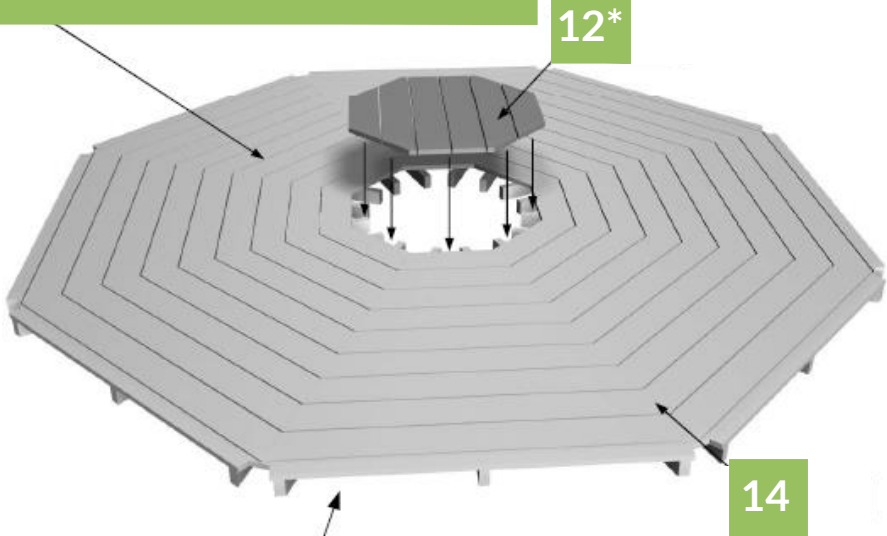


STEP 3

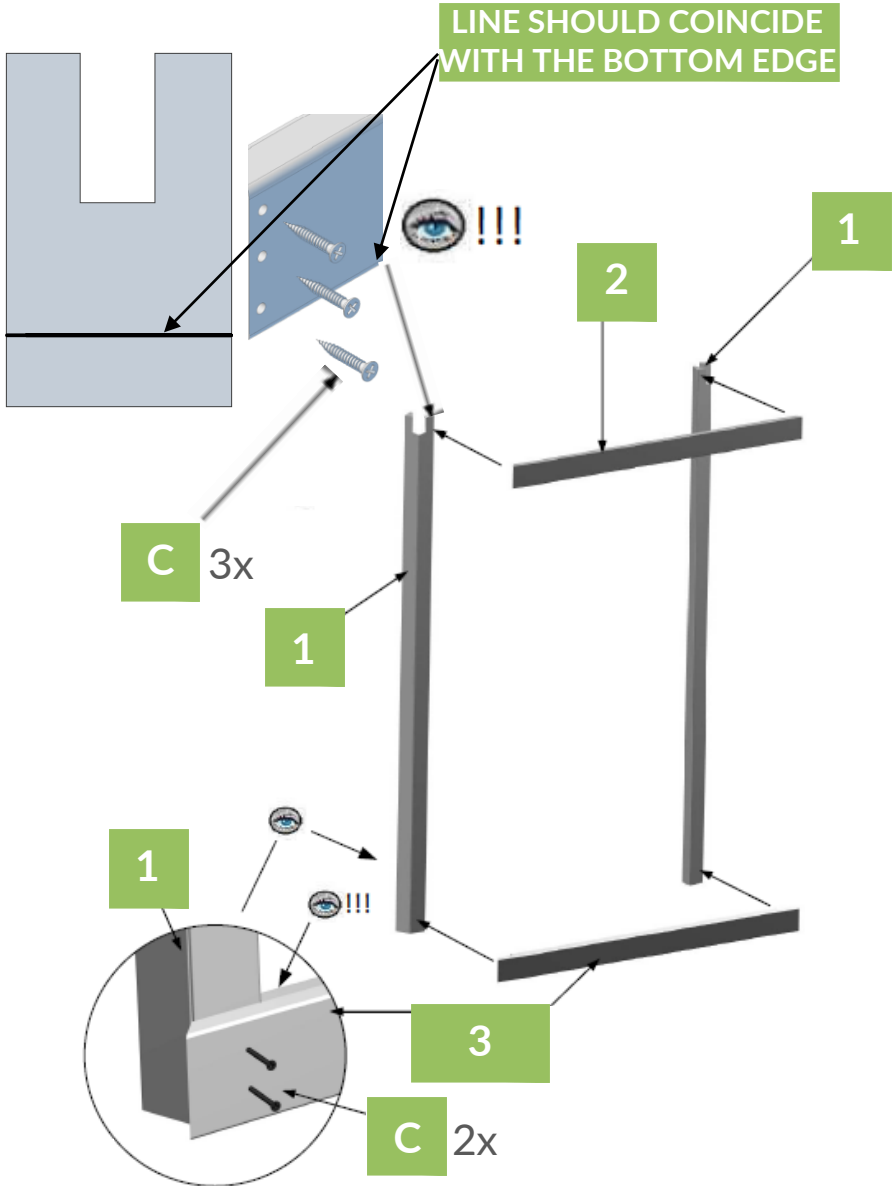

REPEAT STEP - 3 TIMES

STEP 4

SEGMENT CREATED IN STEP 3

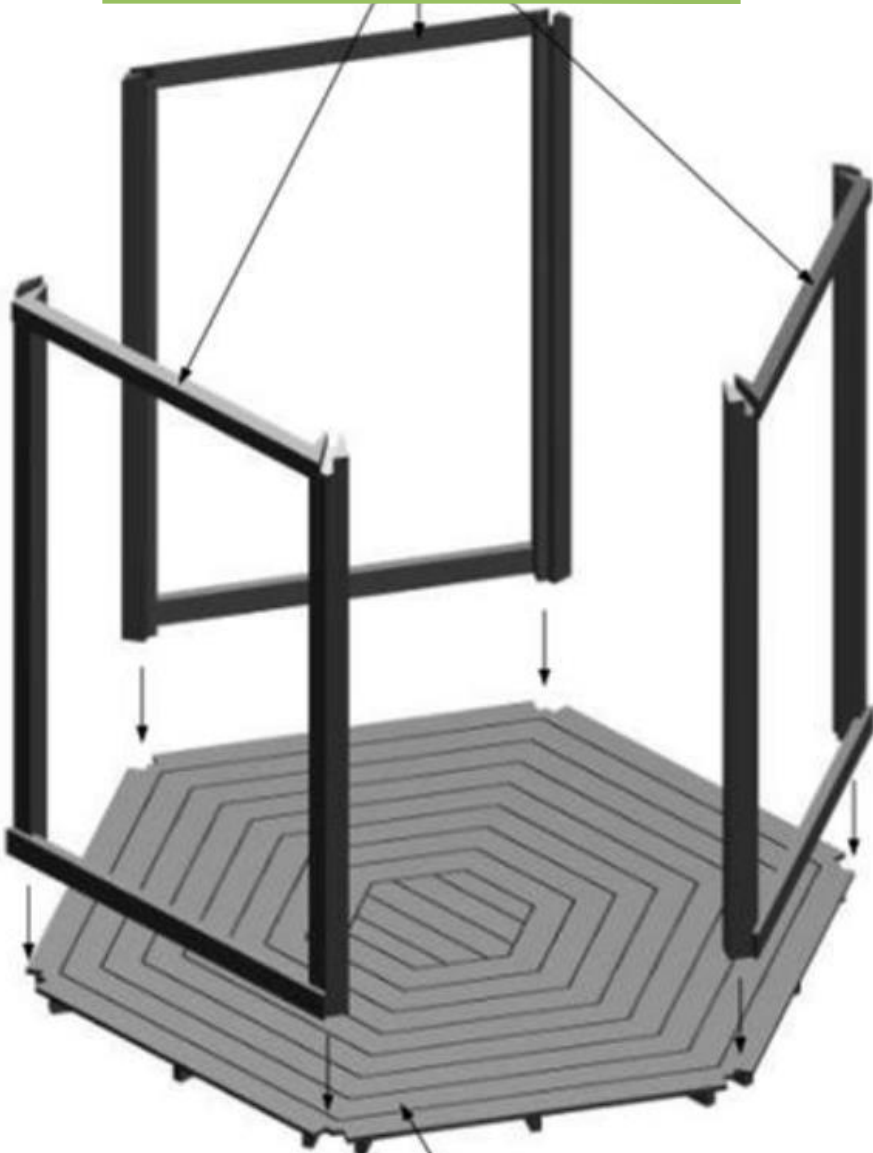


SEGMENT CREATED IN STEP 2*

STEP 5


SEGMENT CREATED IN STEP 3

AS IN STEPS 3

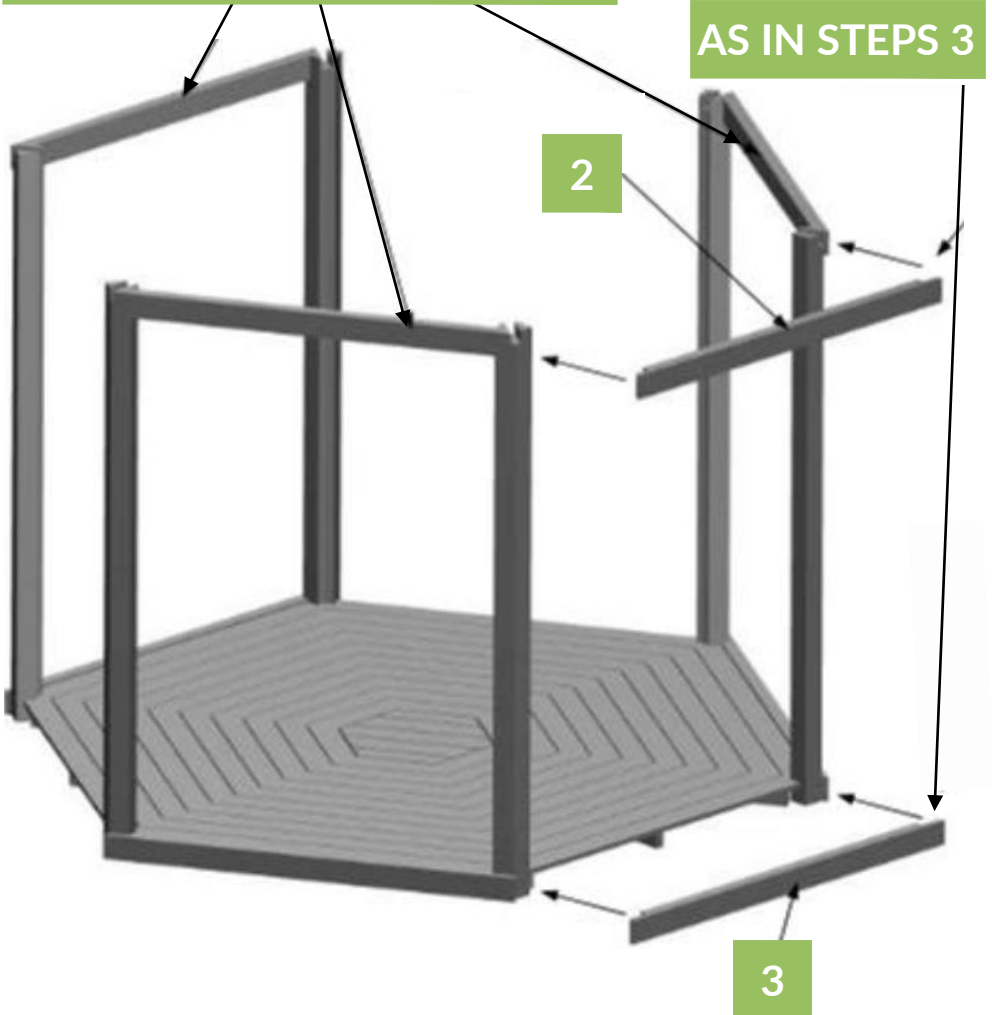

REPEAT STEP - 3 TIMES

STEP 6

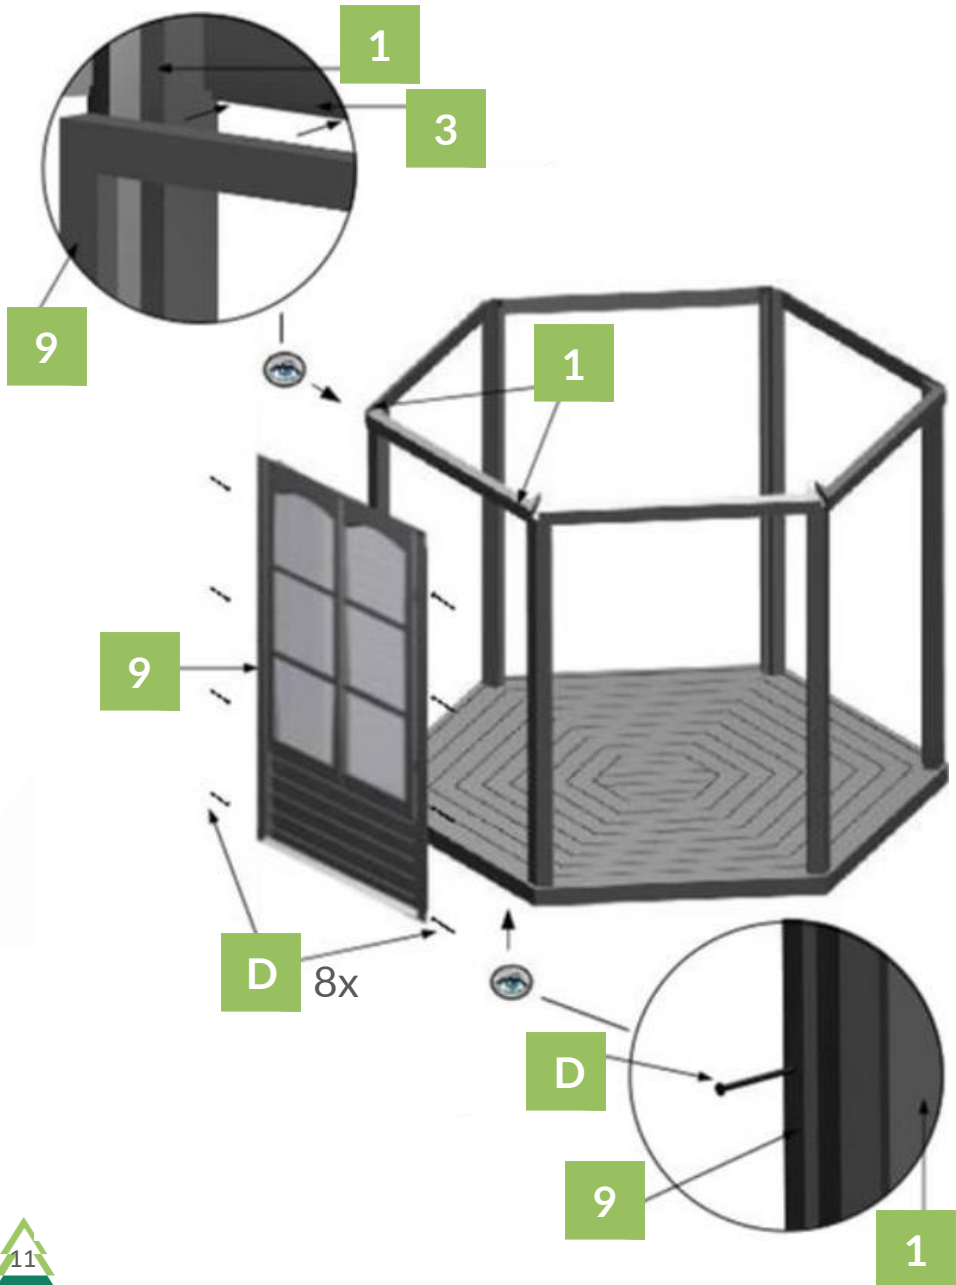


STEP 7




MOUNT 2 WINDOW HANDLES - 23

STEP 8

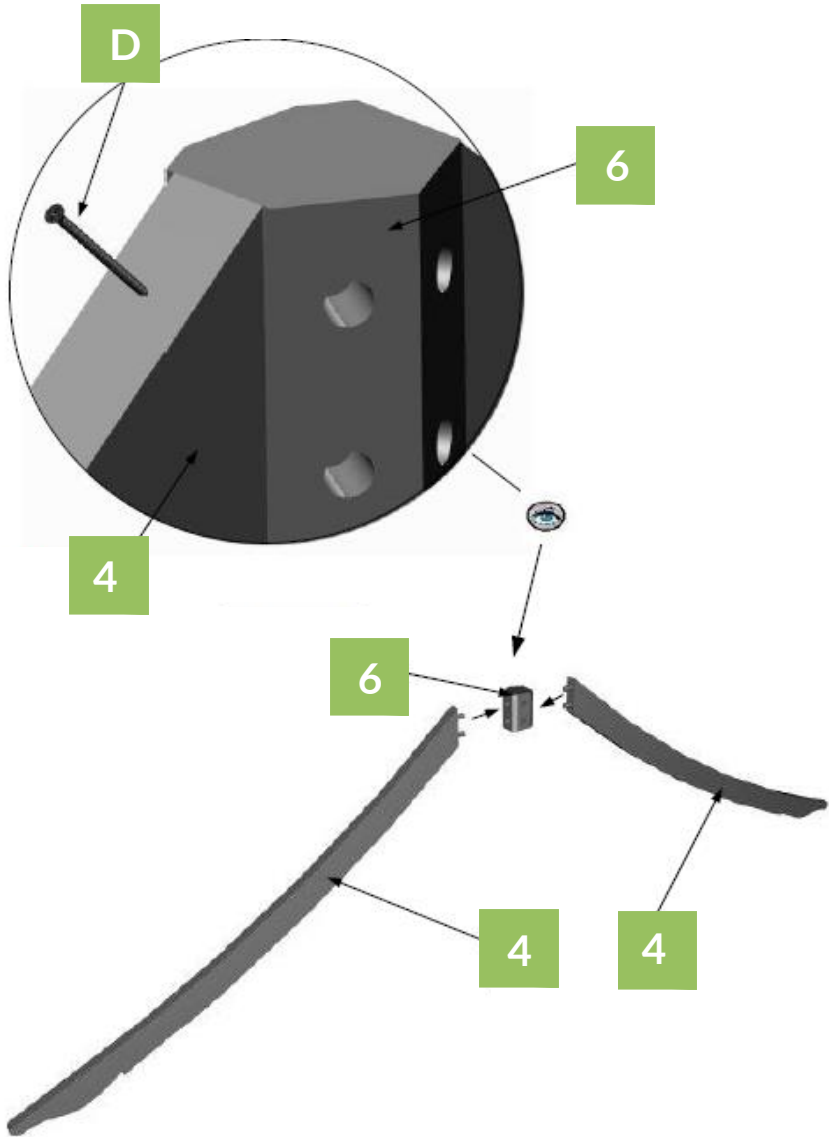


STEP 9

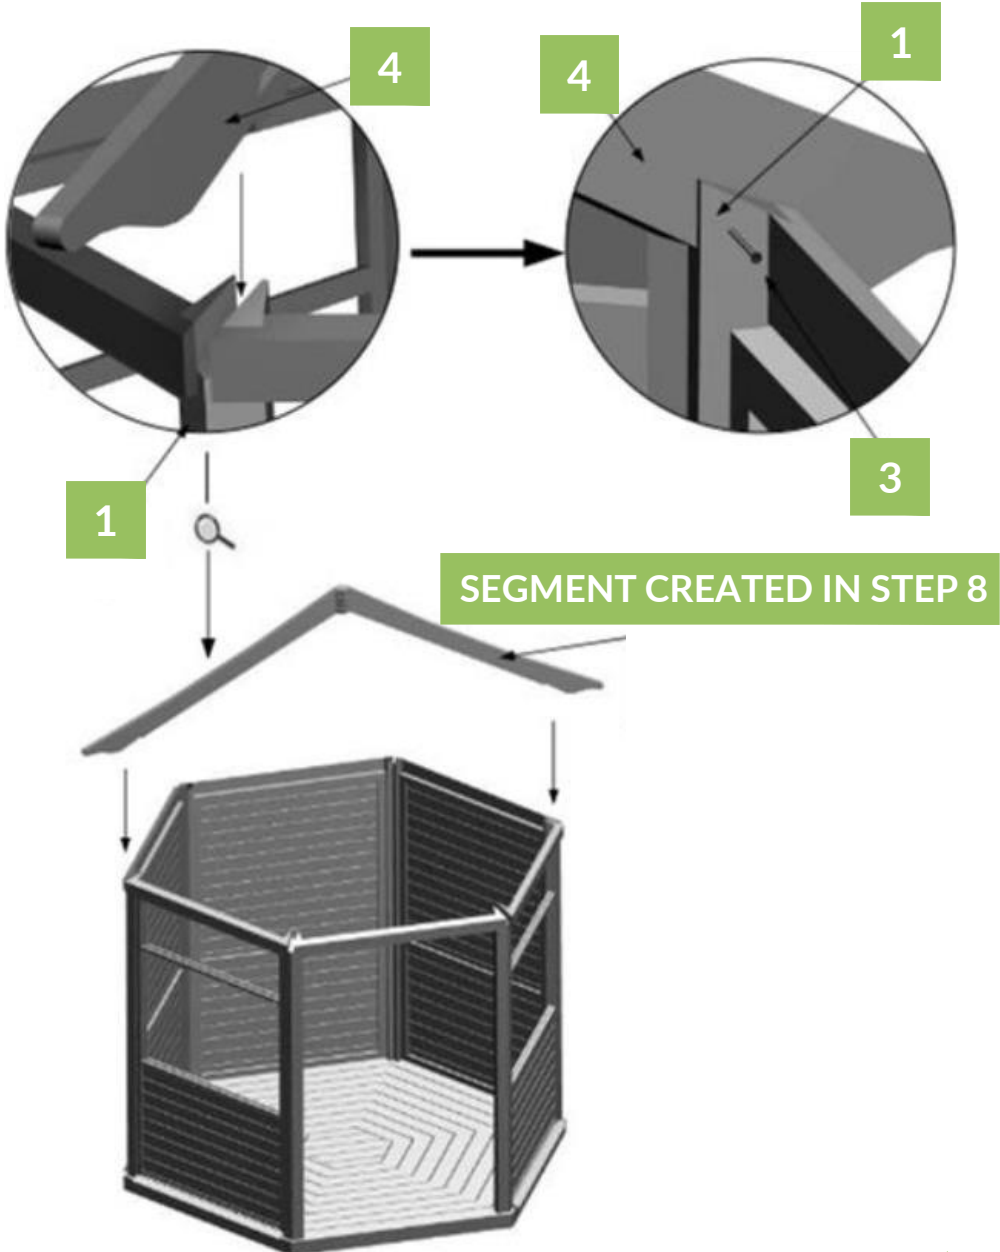


STEP 10

AS IN STEPS 8,9

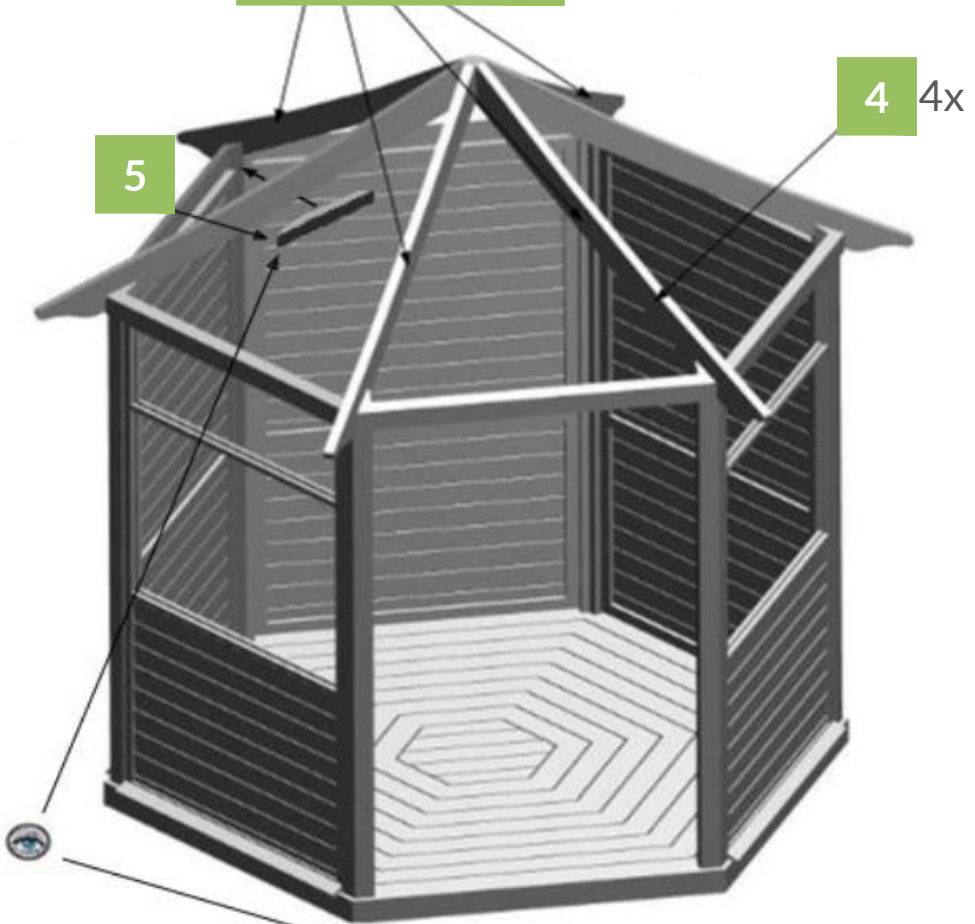


Screw PART: 5 in all corners !

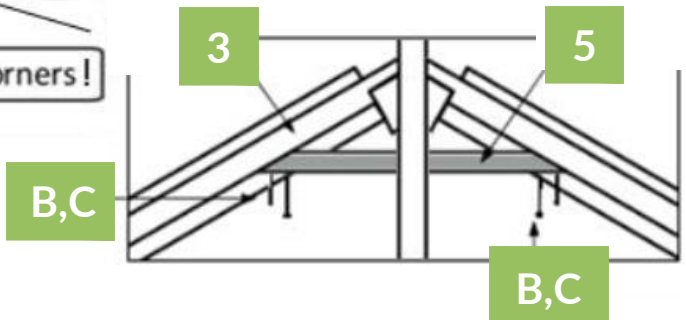



STEP 11

BEFORE ATTACHING THE DOOR FRAME (PART 11) TO THE POSTS, PLEASE TAKE OFF DOOR WINGS (PART 7; PART 8) FROM THE HINGES.

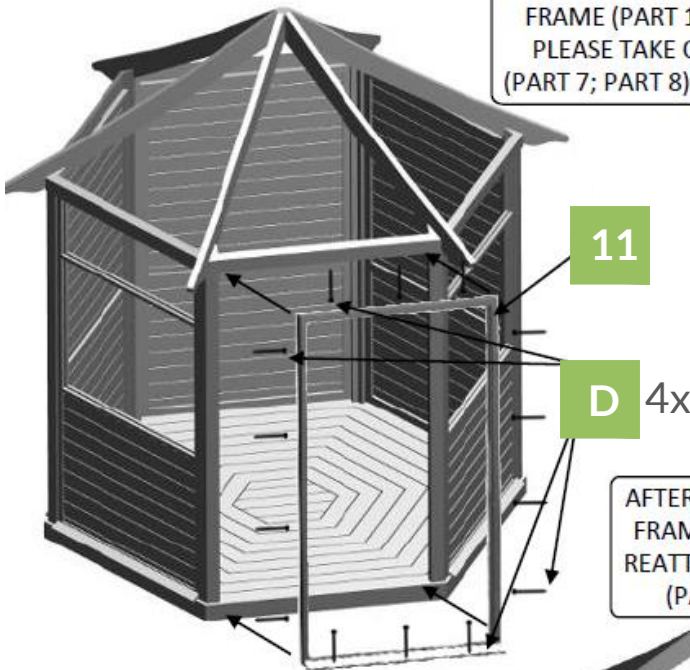


AFTER ASSEMBLY OF THE FRAME IS COMPLETED, REATTACH DOOR WINGS (PART 7; PART 8).

TO ADJUST THE POSITION OF DOOR WINGS (GAP BETWEEN THEM) TURN THE HINGES RIGHT OR LEFT

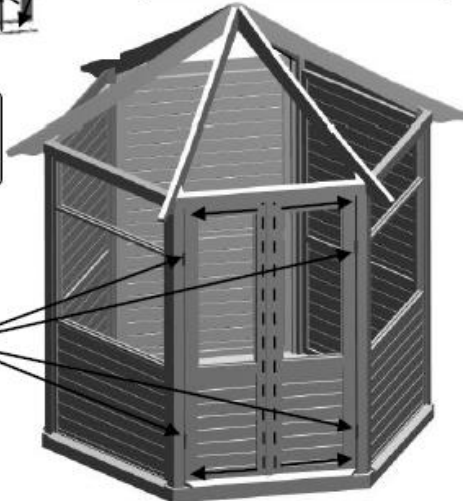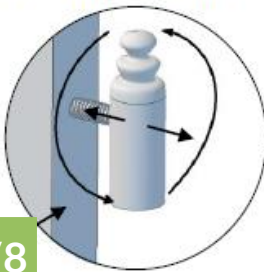

PLEASE BE AWARE THAT PERIODIC DOOR ADJUSTMENT MAY BE NEEDED AS A PART OF GOOD MAINTENANCE PRACTICE.

STEP 12

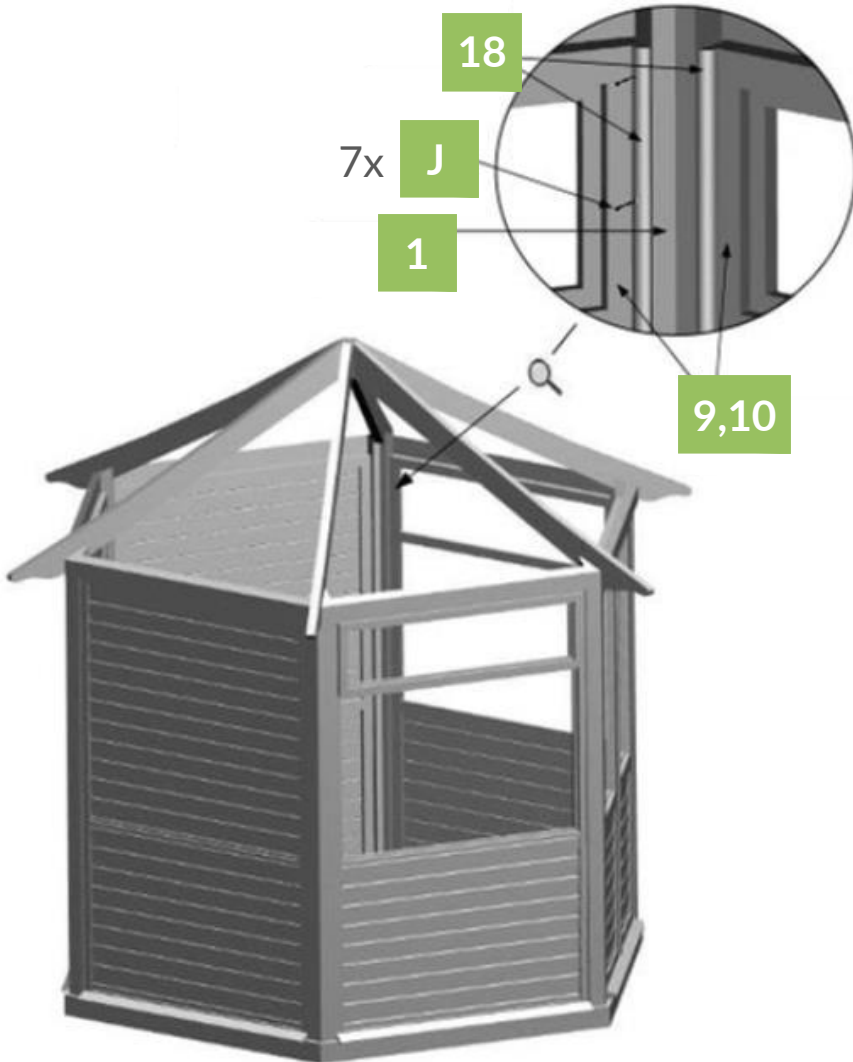

FOR ASSEMBLE PART:18 IN THE CORNER FROM BOTH SIDES
OF COLUMNS (PART: 1) USE NAILS PART: G (7 pcs TO PART:18)


STEP 13

TAKE ONE ITEM
FROM EACH
PACKAGE OF ROOF
ELEMENTS




18 ELEMENTS

SORT ROOF
ELEMENTS BY
LENGHT

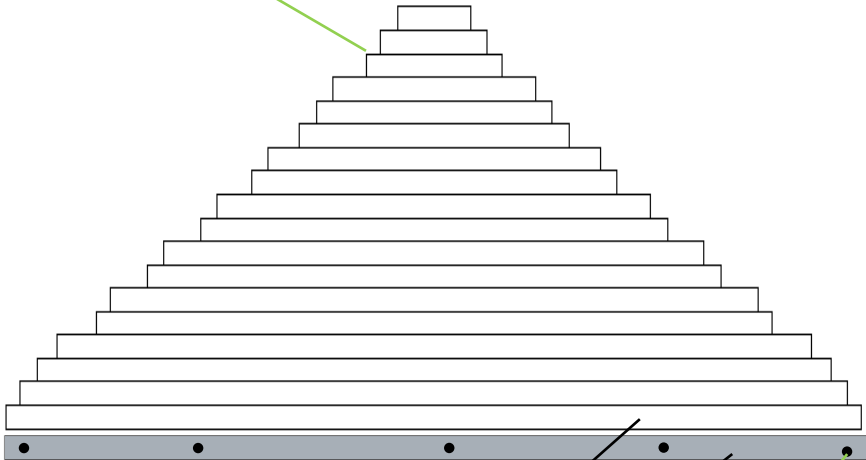


13
MONTAGE AFTER
STEP 15

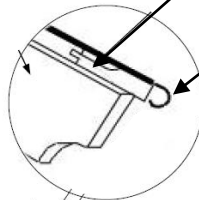

H 5x

REPEAT STEP - 6 TIMES

STEP 14

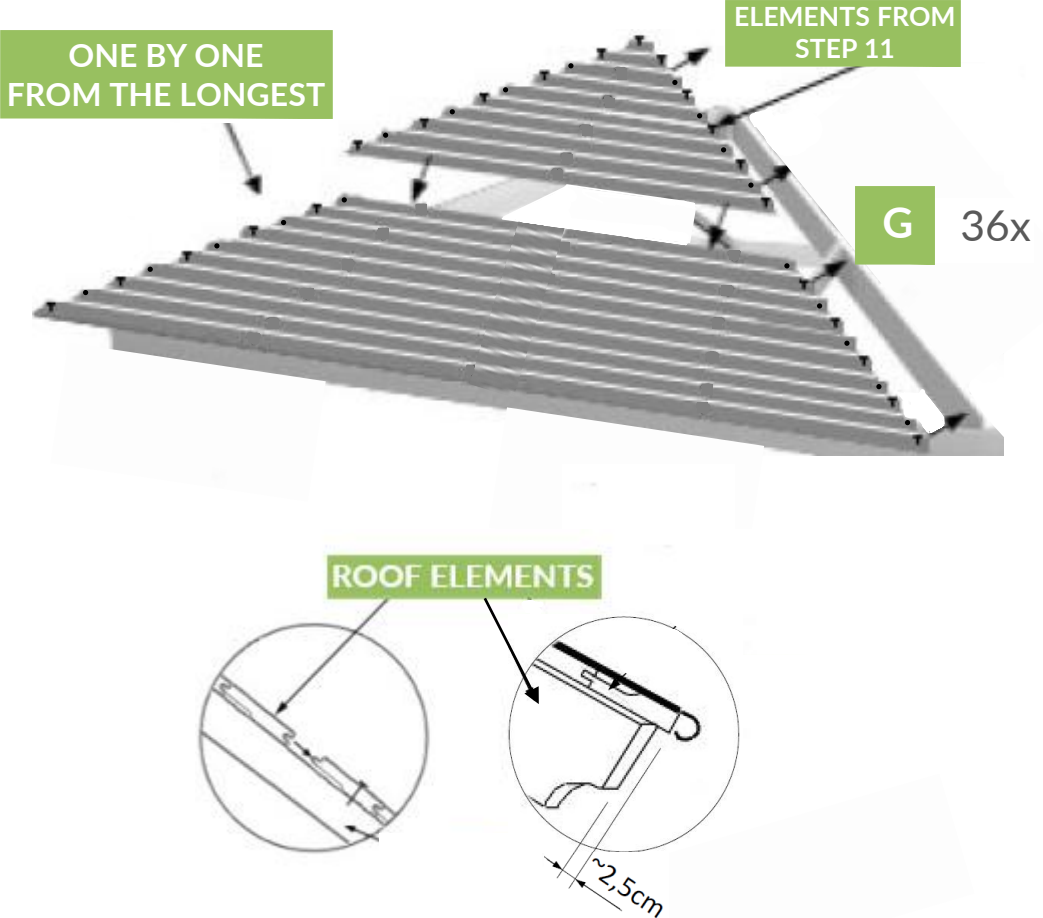


REPEAT STEP – 6 TIMES

STEP 15

set circular saw on 16mm
and use to cut the roof




draw a cutting line

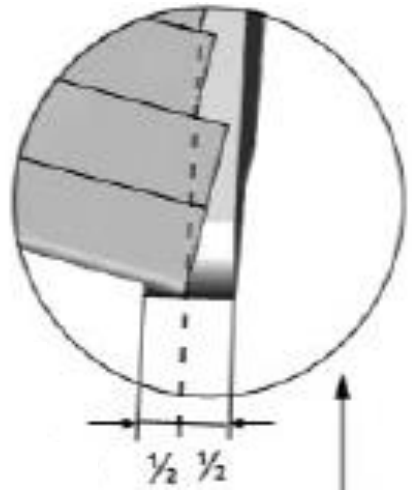


STEP 16


MONTAGE FROM 1 TO 11

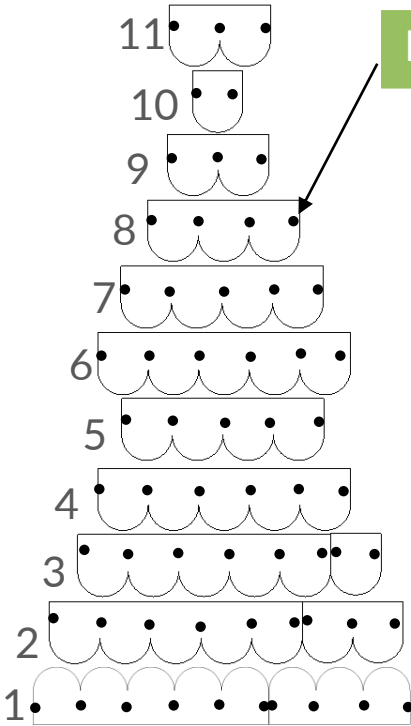

E 61x

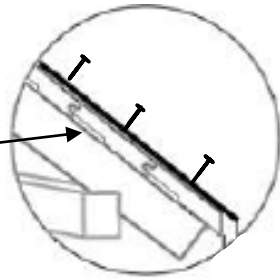


**REMOVE FOIL
BEFORE INSTALLATION**

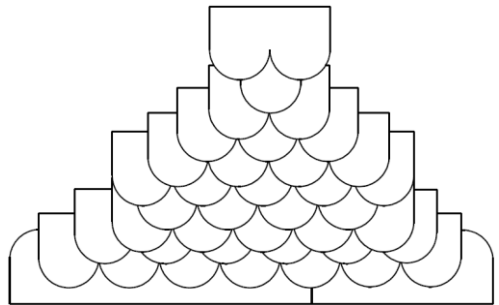

REPEAT STEP - 6 TIMES



STEP 17

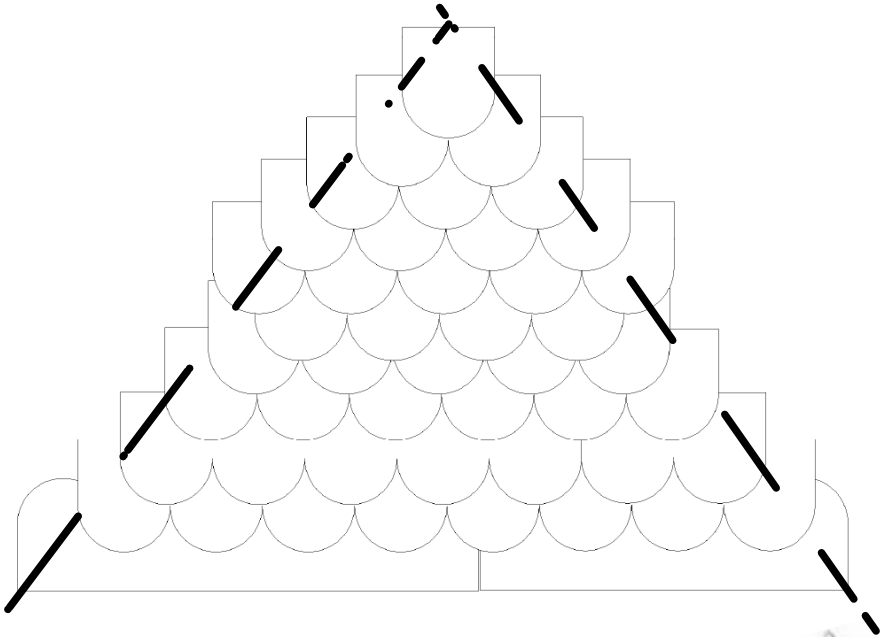

**CUT THE SCHINGLES TO
THE SHAPE OF THE ROOF
(ALONG THE JOINING
LINES OF THE SEGMENTS)**


REPEAT STEP – 6 TIMES

STEP 18

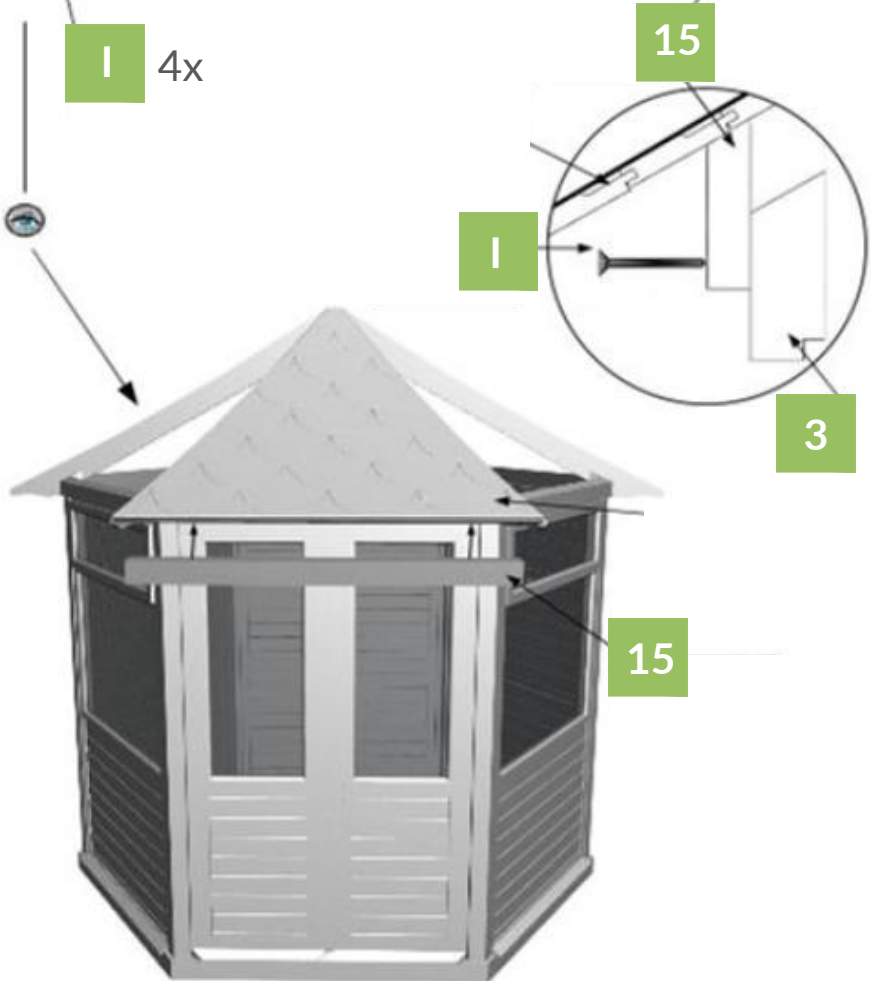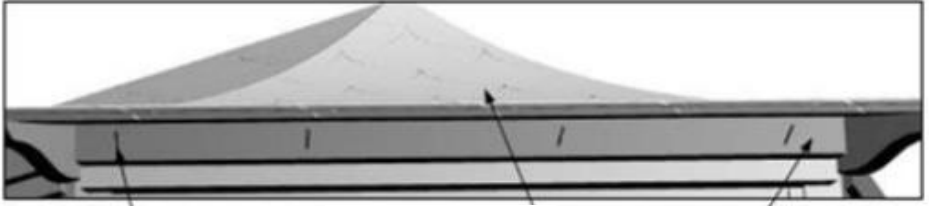


REPEAT STEP – 6 TIMES

STEP 19

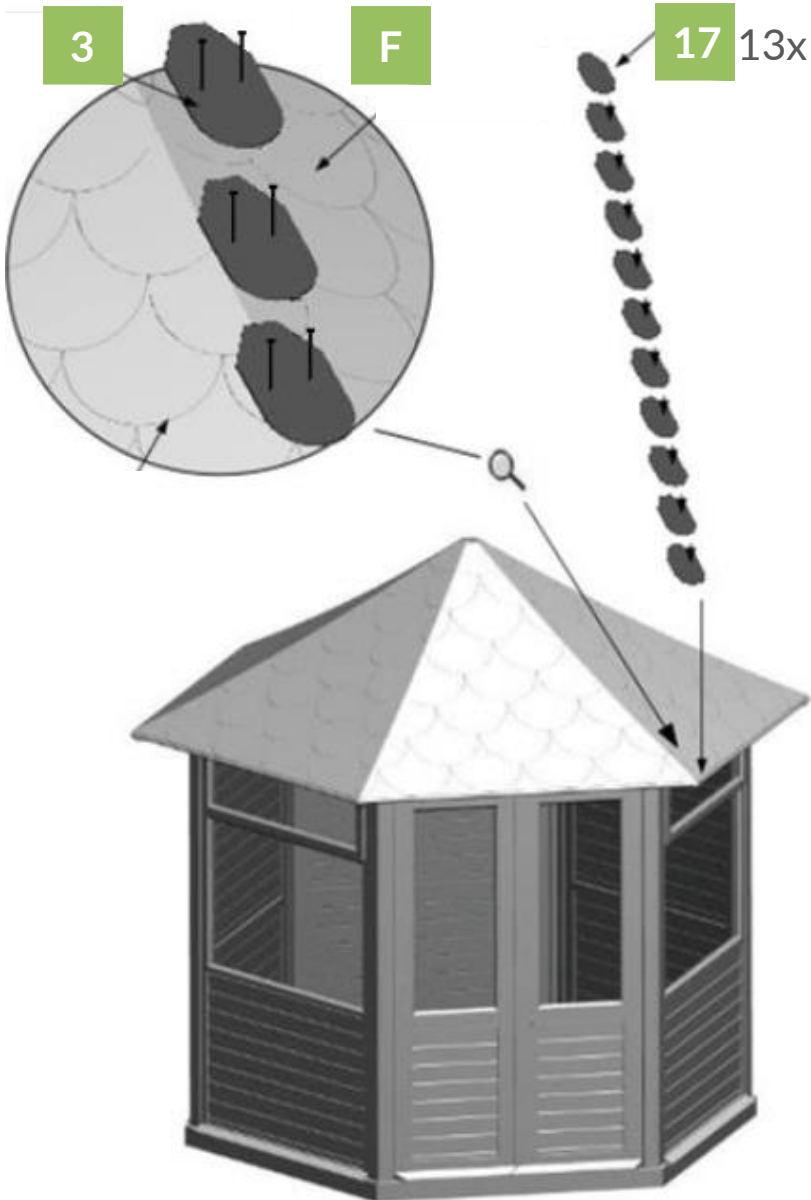


REPEAT STEP – 6 TIMES

STEP 20

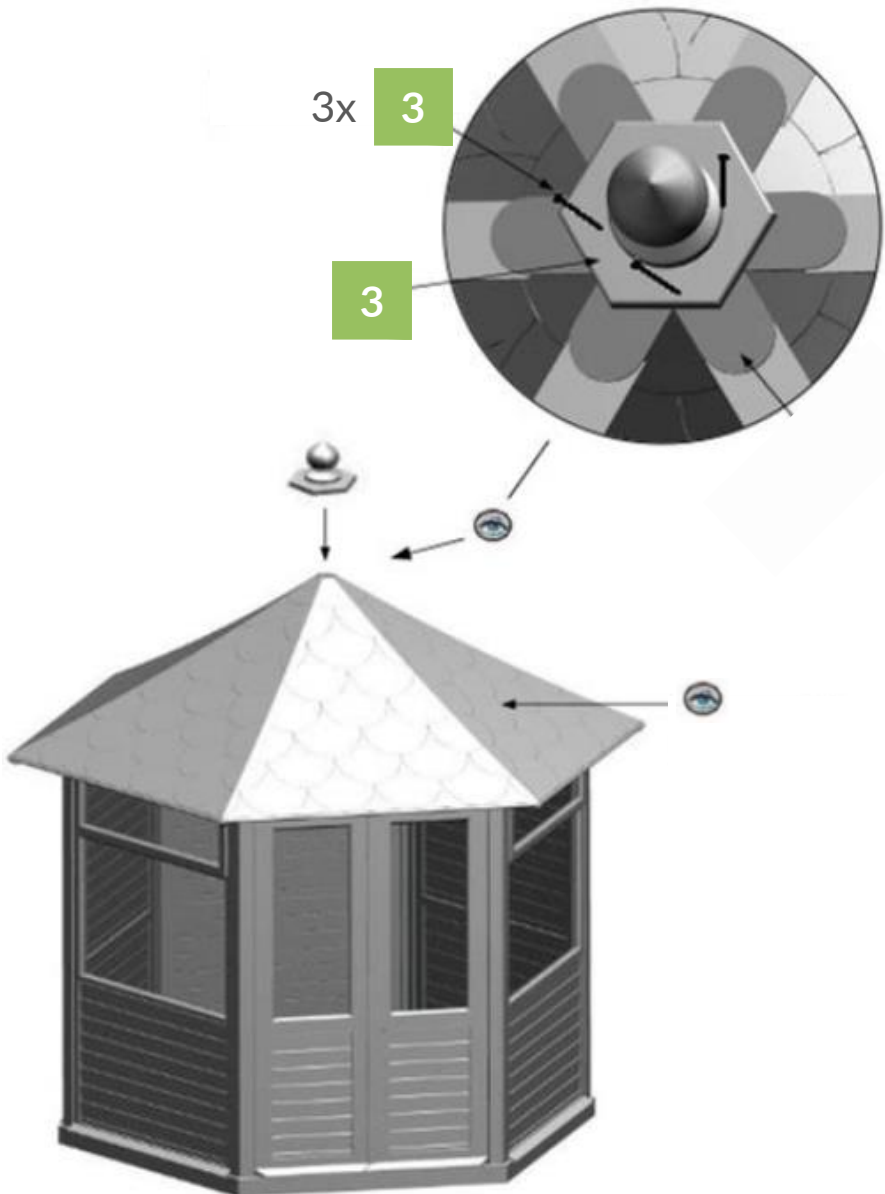


STEP 21

PUT BELT OF LEAD ON ROOF
THEN USE WOODEN SCRIBER TO COMPENSATE LEAD (PART: 20)

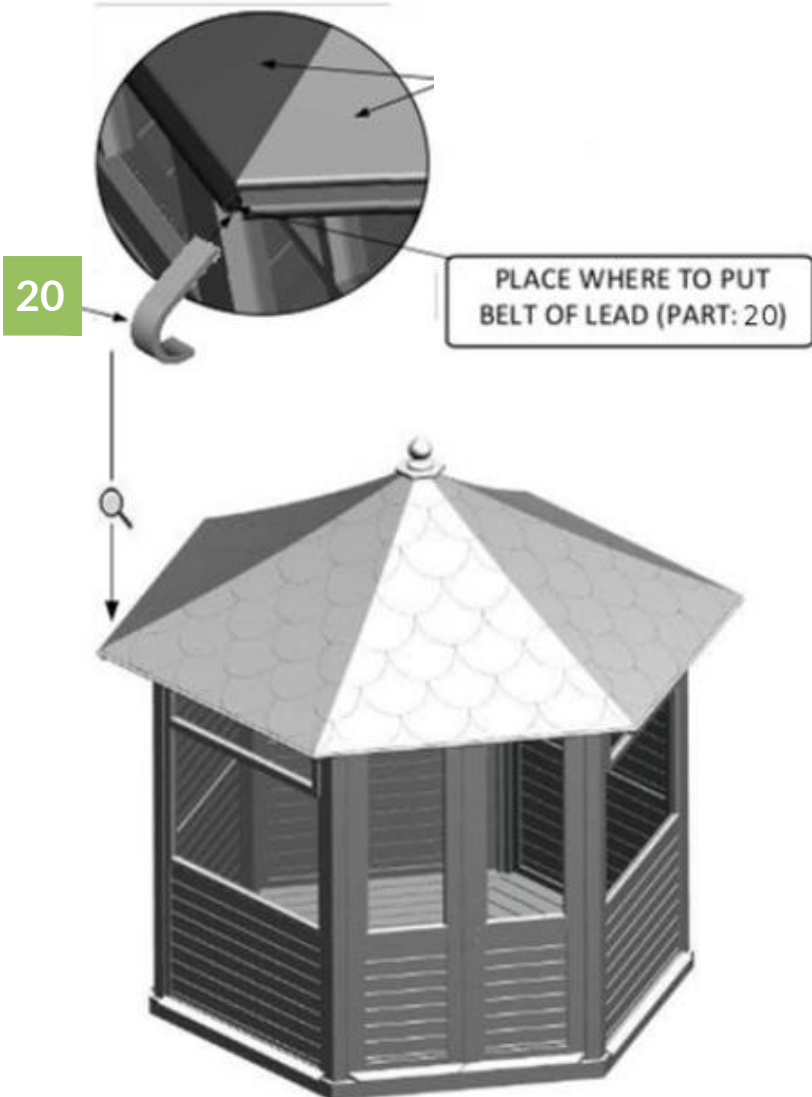

REPEAT STEP – 6 TIMES

STEP 22

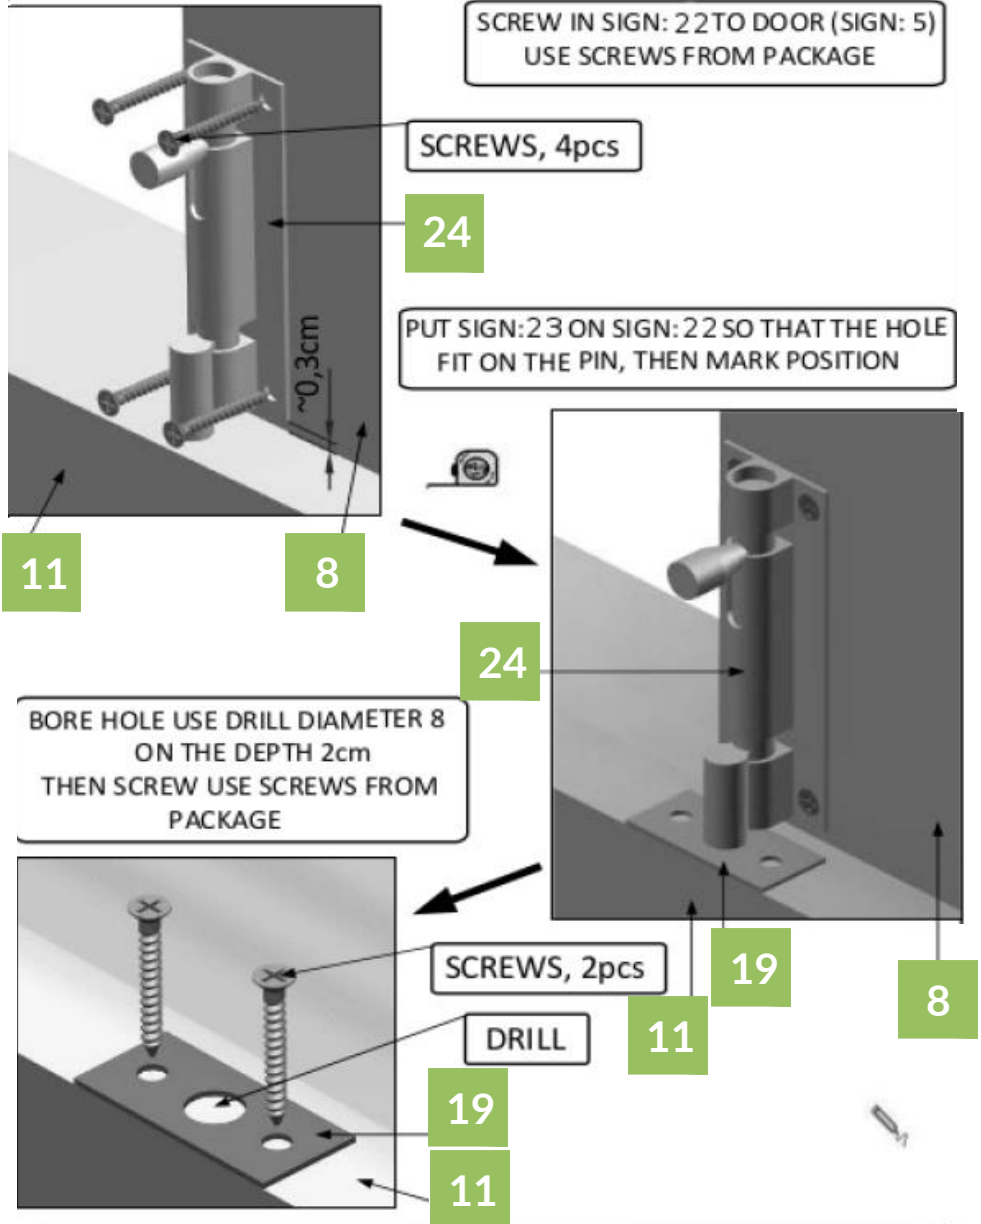


REPEAT STEP AT THE TOP OF DOOR (SIGN: 5) AND ON ALL WINDOWS


STEP 23




PUT SIGN: FROM INTERNAL SIDE DOOR TO THE HOLE IN LOCK
THEN SCREW SIGN USE SCREWS FROM PACKAGE

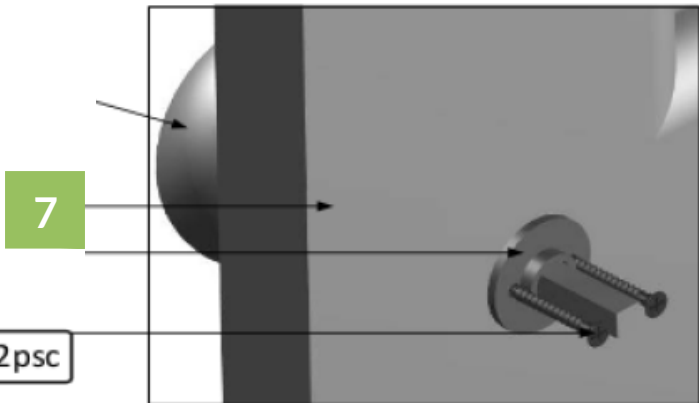

PUT SIGN: ON SIGN: AND SCREW USE SCREWS FROM PACKAGE

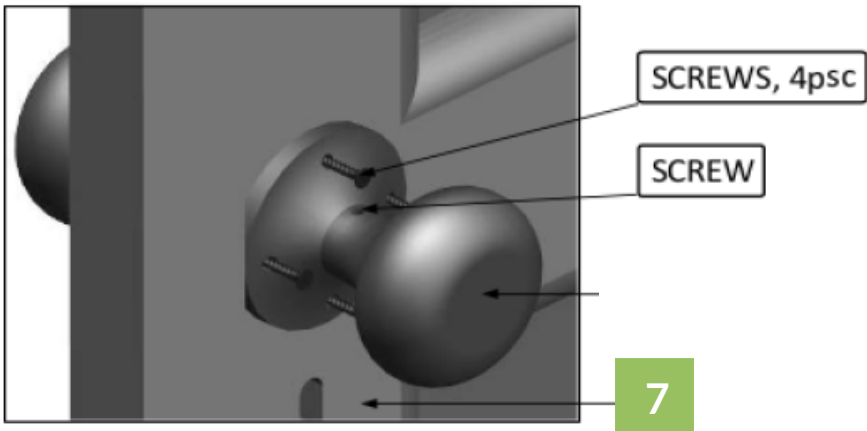

STEP 24

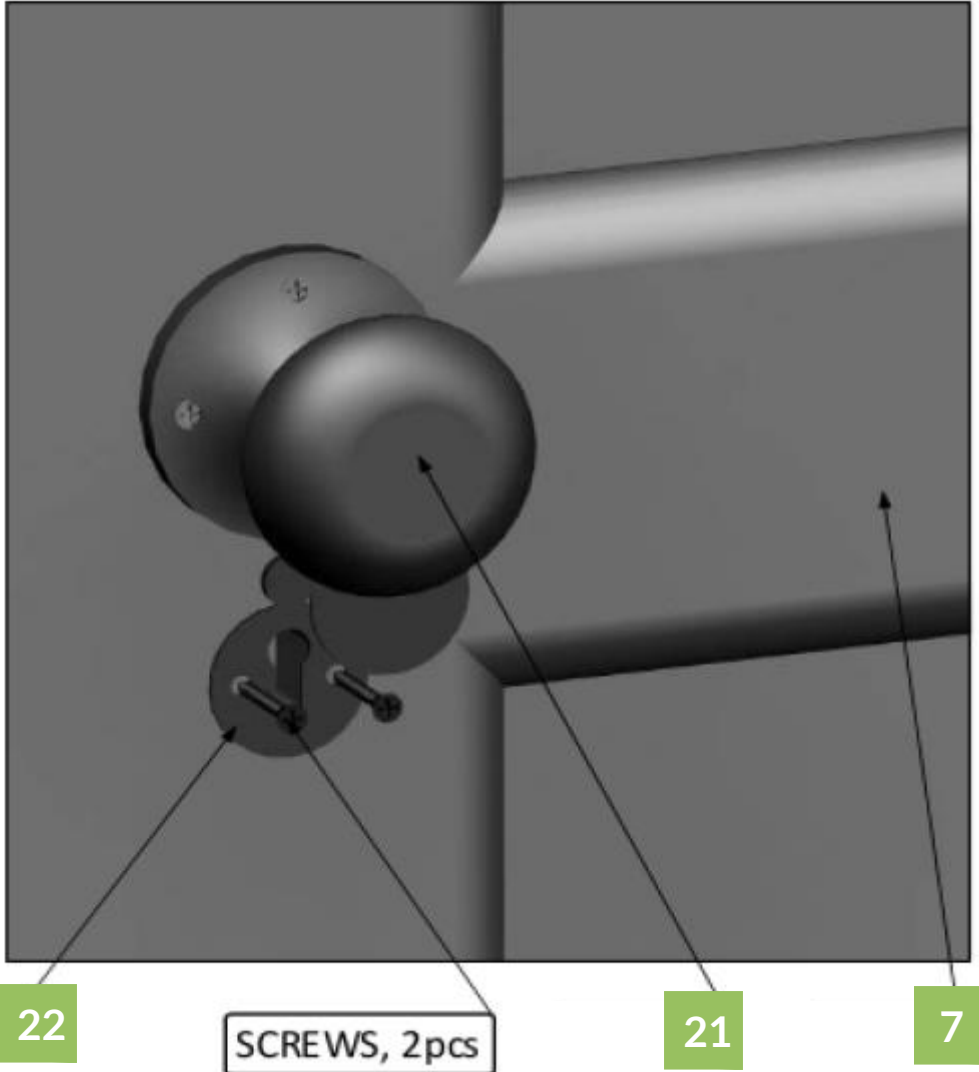

STEP 25

