


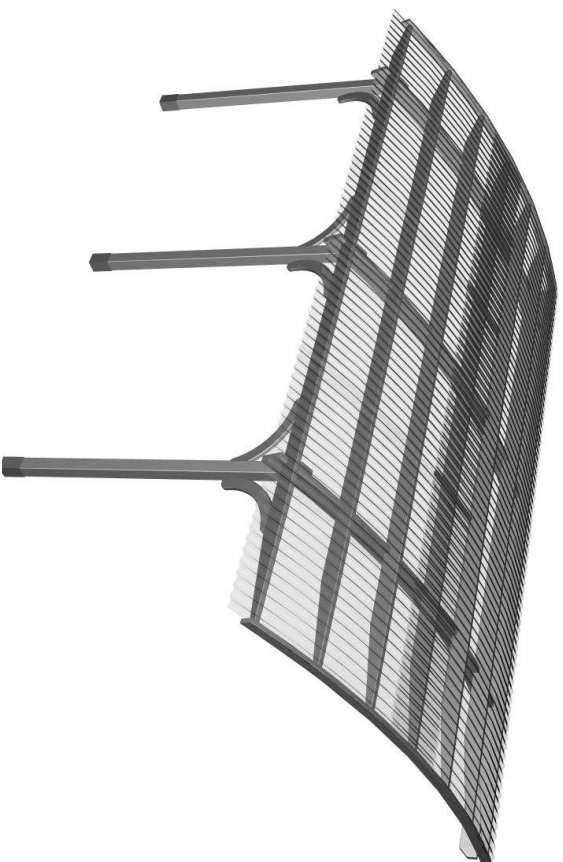

## Side Carport 1-sided

NR. ART. 041842

2x



PART: 1


3 pcs



PART: 2

7 pcs


long



PART: 3

7 pcs

short



PART: 4

1 pc



PART: 5

1 pc



POST

RAFTER

RAFTER

WALL BEAM

WALL BEAM

PART: 6

3 pcs



ARCH


PART: 7

12 pcs




PCV PANEL

PART: 8 5 pcs



CORNER BARCING

PART: 10 3 pcs

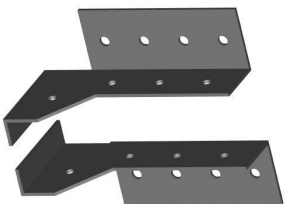

METAL WORKS

PART: 9 2 pcs



ARCH

## EXPLANATION



VIEW



ZOOM




MEASURE




DRAW

| PART | FIXING HARDWARE | QUANTITY |
|------|-----------------|----------|
| A    | M8 x 100 mm     | 9 pcs    |
| B    | 5,0 x 160 mm    | 21 pcs   |
| C    | 5,0 x 120 mm    | 28 pcs   |
| D    | 5,0 x 60 mm     | 14 pcs   |
| E    | 4,8 x 25 mm     | 205 pcs  |
| F    | 3,5 x 35 mm     | 48 pcs   |


## STEP 0




HAMMER



WOODEN BLOCK



POST HOLDER

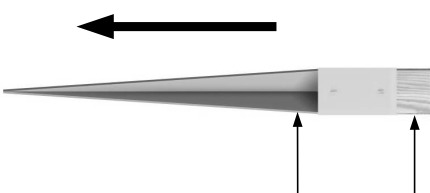

GROUND




POST

SCREW M8 x 100 mm, 2 pcs


POST HOLDER

MARK POSITION AND BORE HOLE  
USE DRILL DIAMETER 8

USE A SPIRIT LEVEL TO DETERMINE VERTICAL

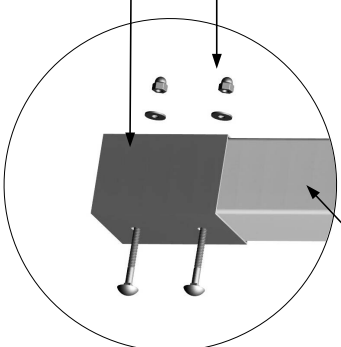


## STEP 1

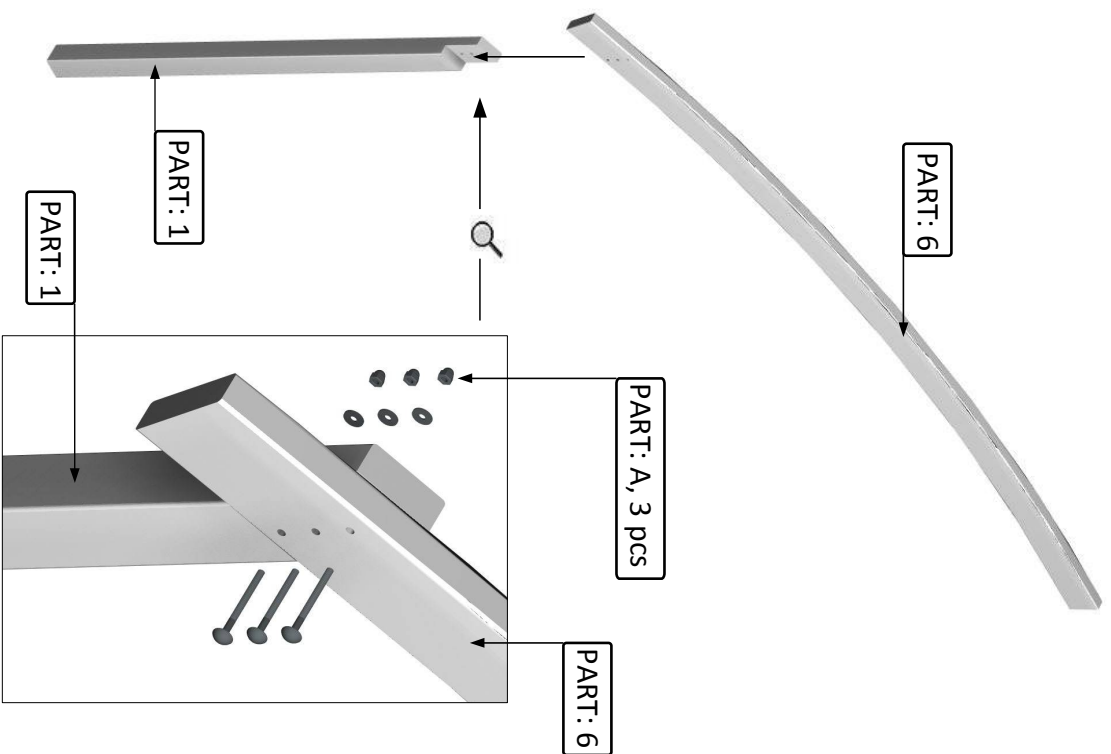


REPEAT STEP 1 - 3 TIMES

## STEP 2

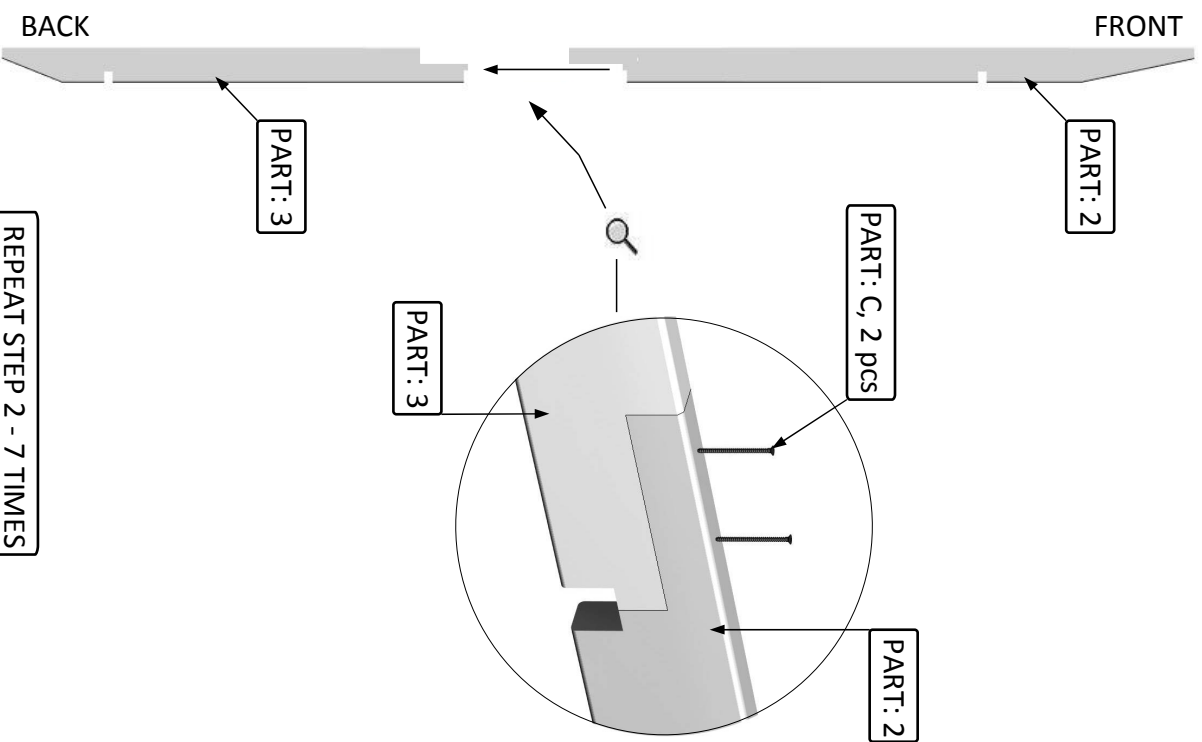


REPEAT STEP 2 - 7 TIMES


### STEP 3

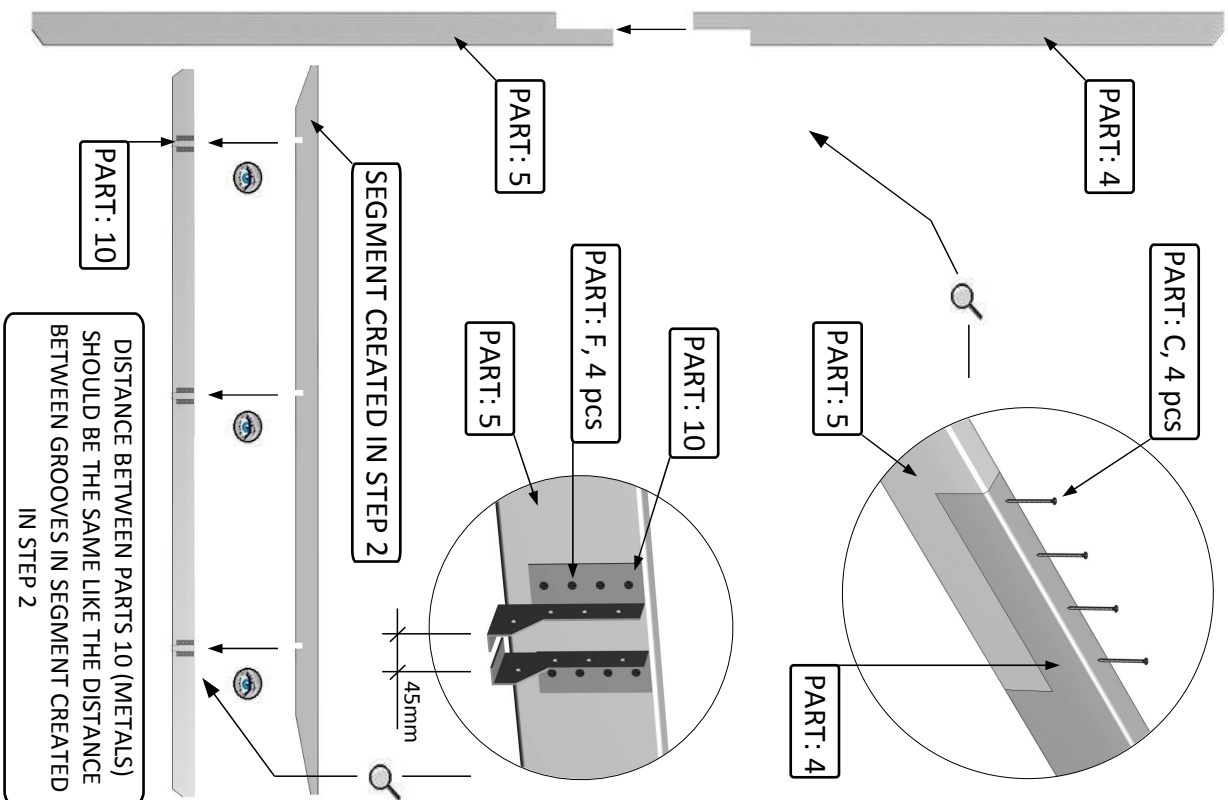

### STEP 4


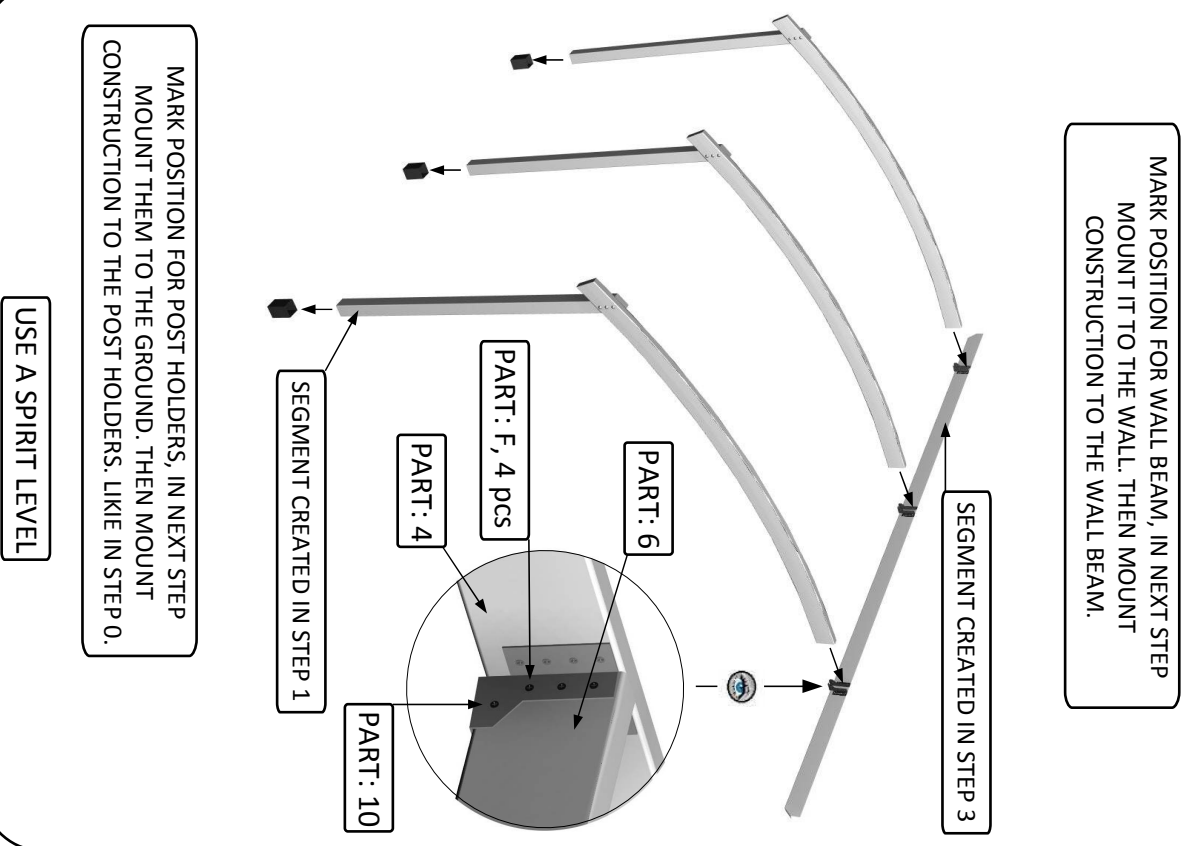


## STEP 5

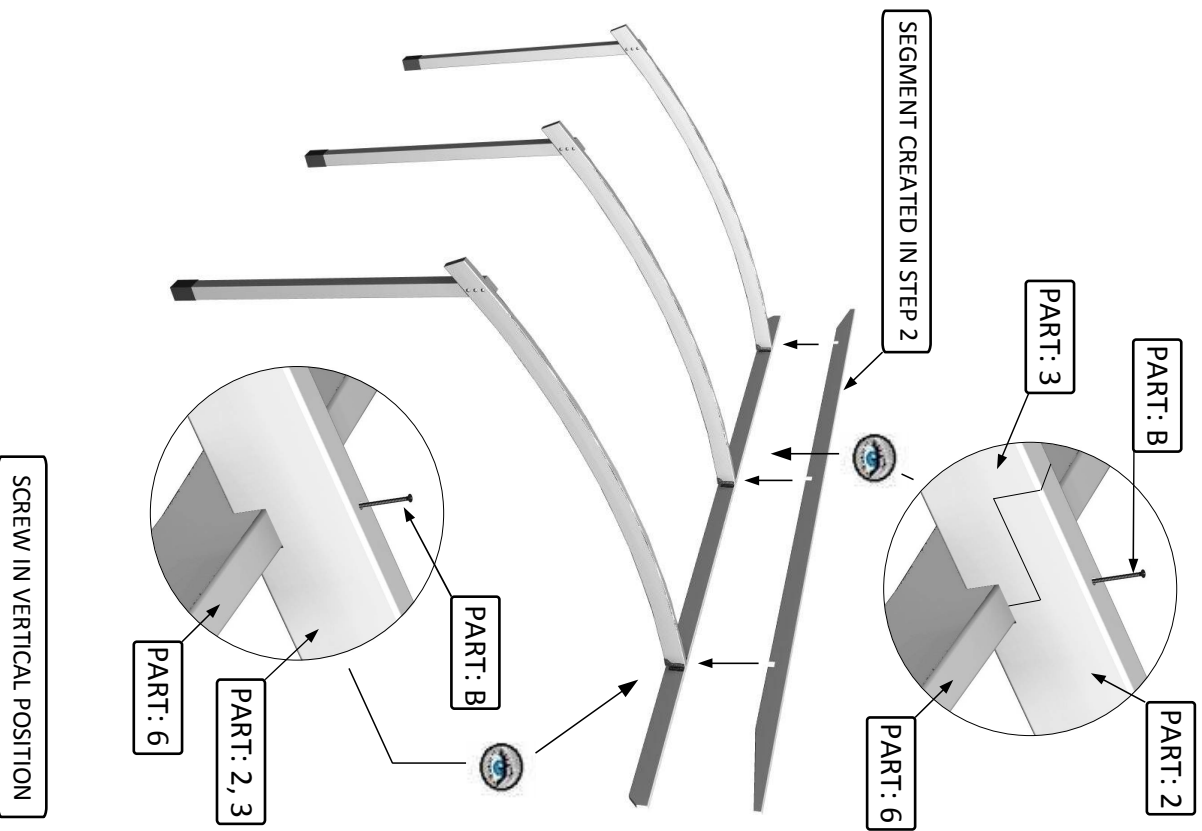


SCREW IN VERTICAL POSITION

## STEP 6

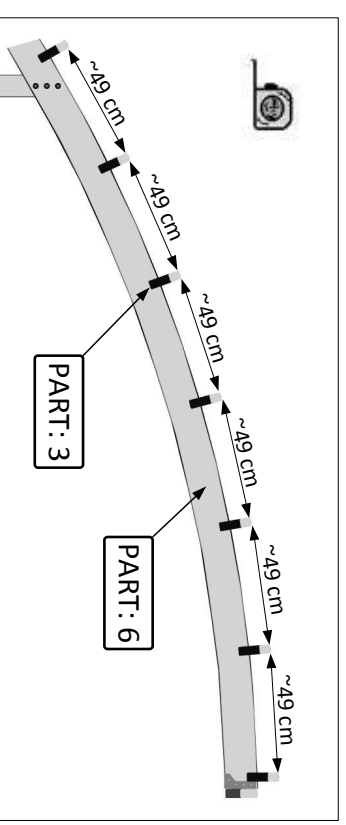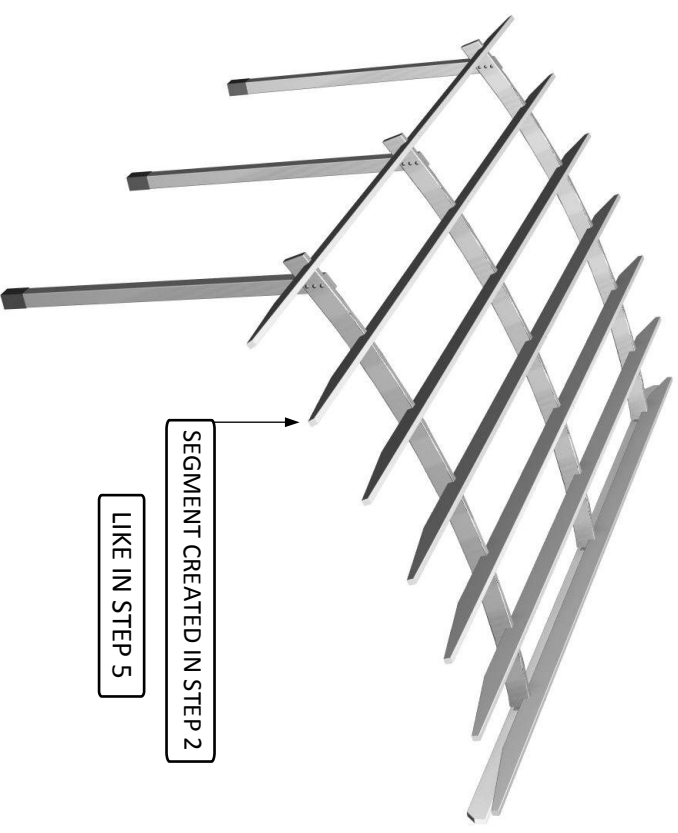


## STEP 7


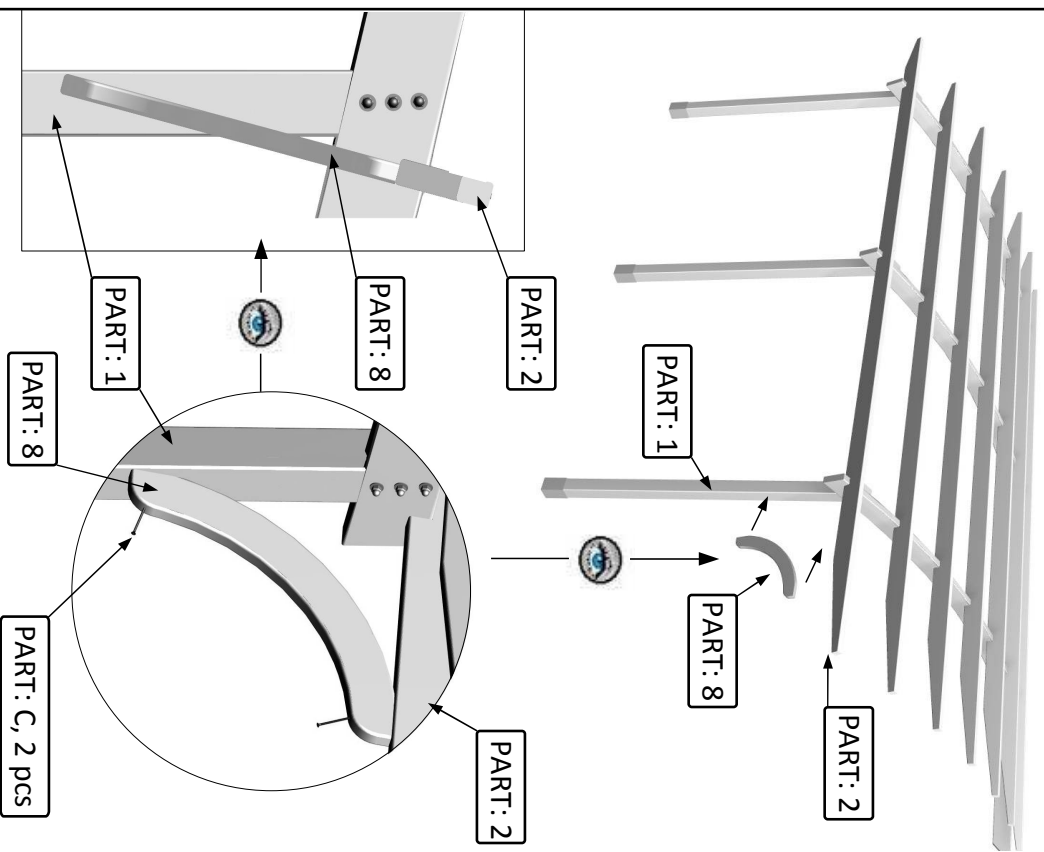


REPEAT STEP 7 - 5 TIMES

## STEP 8

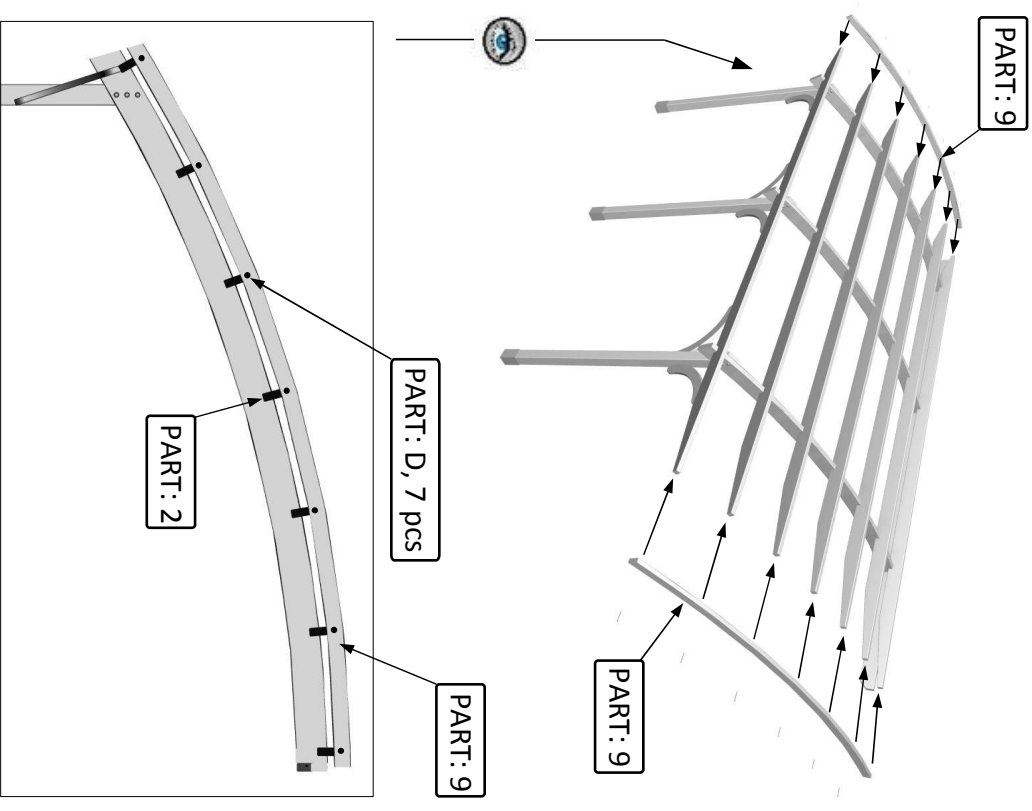

## STEP 9

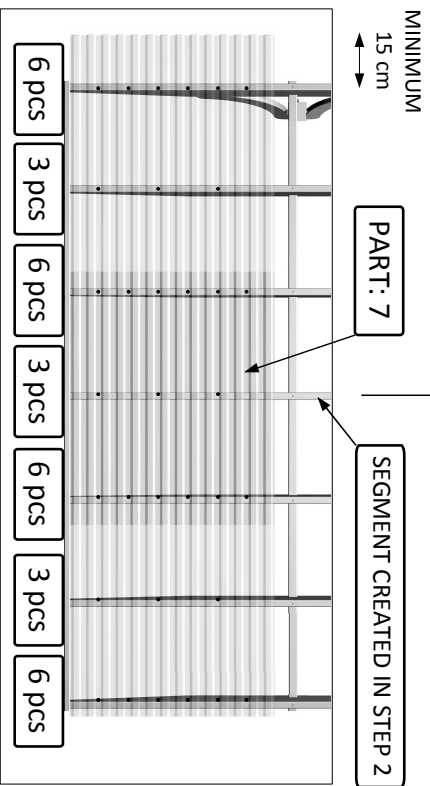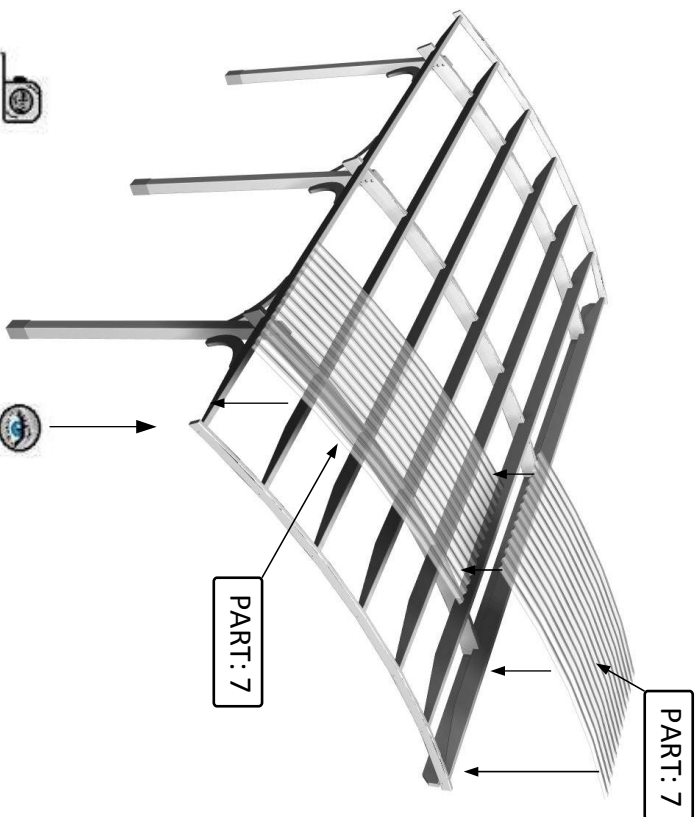

## STEP 10

