

**Oxford**

040186

## EQUIPMENT

---



2 people



Measure



Drill



Level




Angle  
bracket


## PARTS

---


1

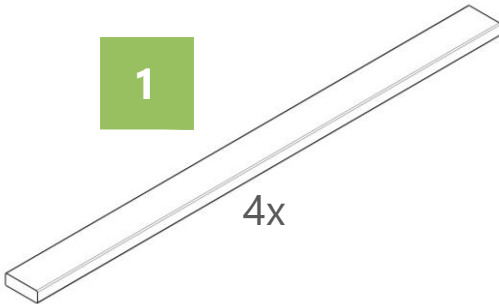


2








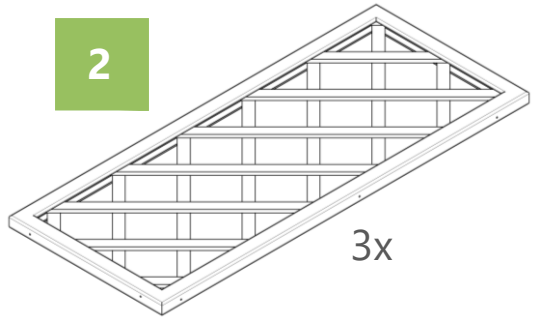


3

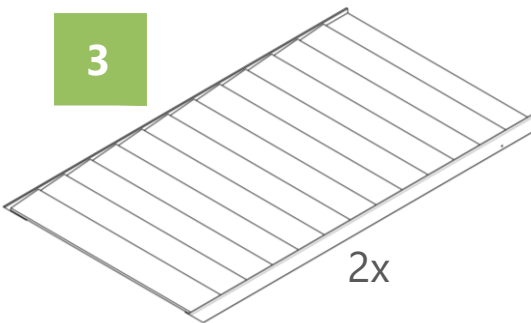

4

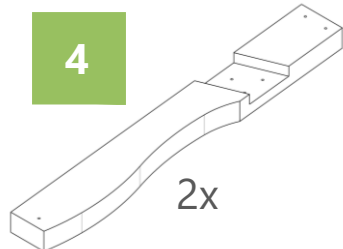

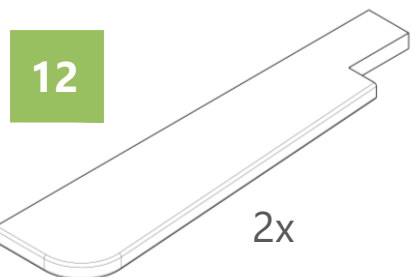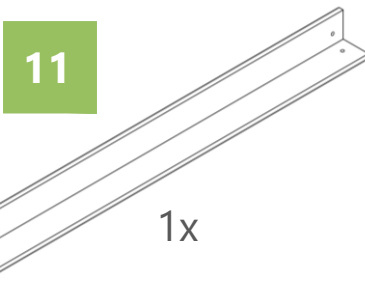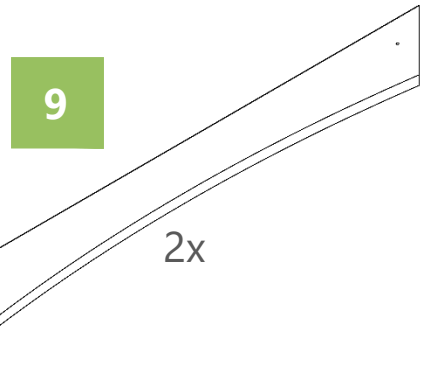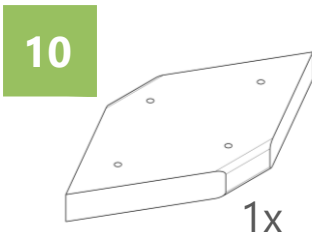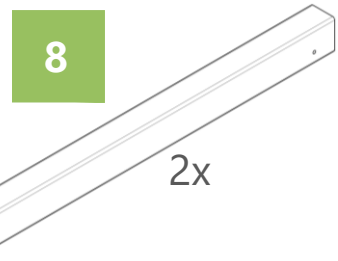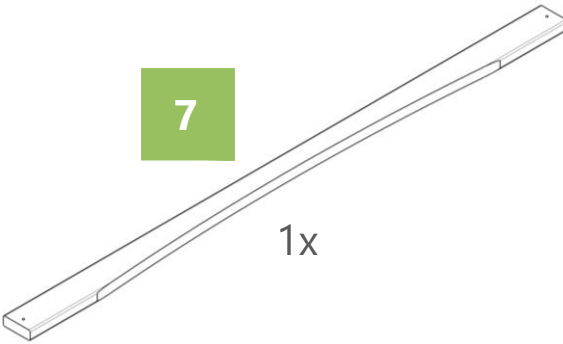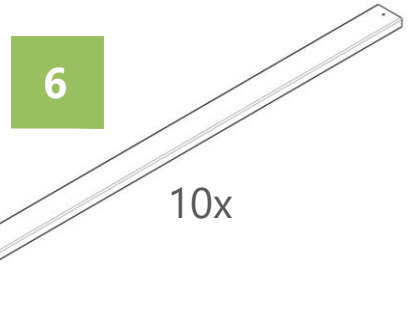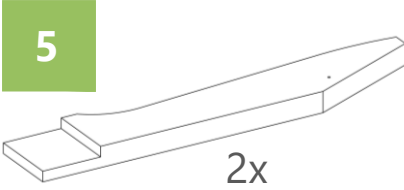

# FITTINGS


**A**

1x



**B**

4x

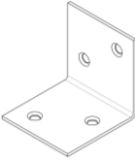

**SCREW BIT: PZ2**

**C**

26x  4x20 mm

**D**

6x  4x25 mm

**E**

8x  4x30 mm

**F**

29x  4x40 mm


**G**

16x  4x50 mm

**H**


18x  4x60 mm

# Step 1

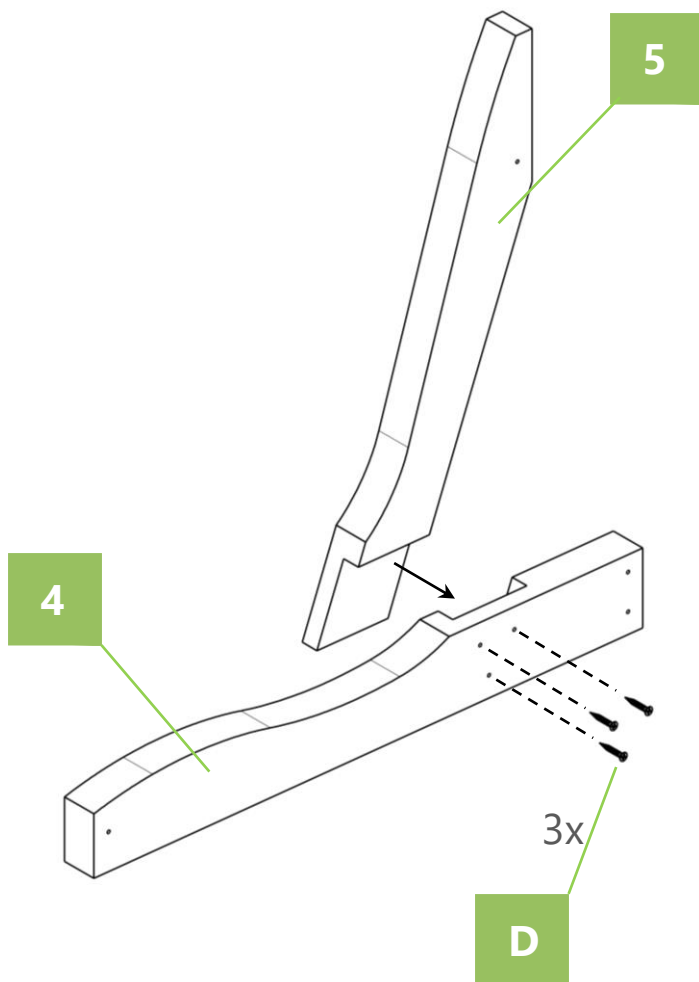


**Assemble 2 such segments**


## Step 2

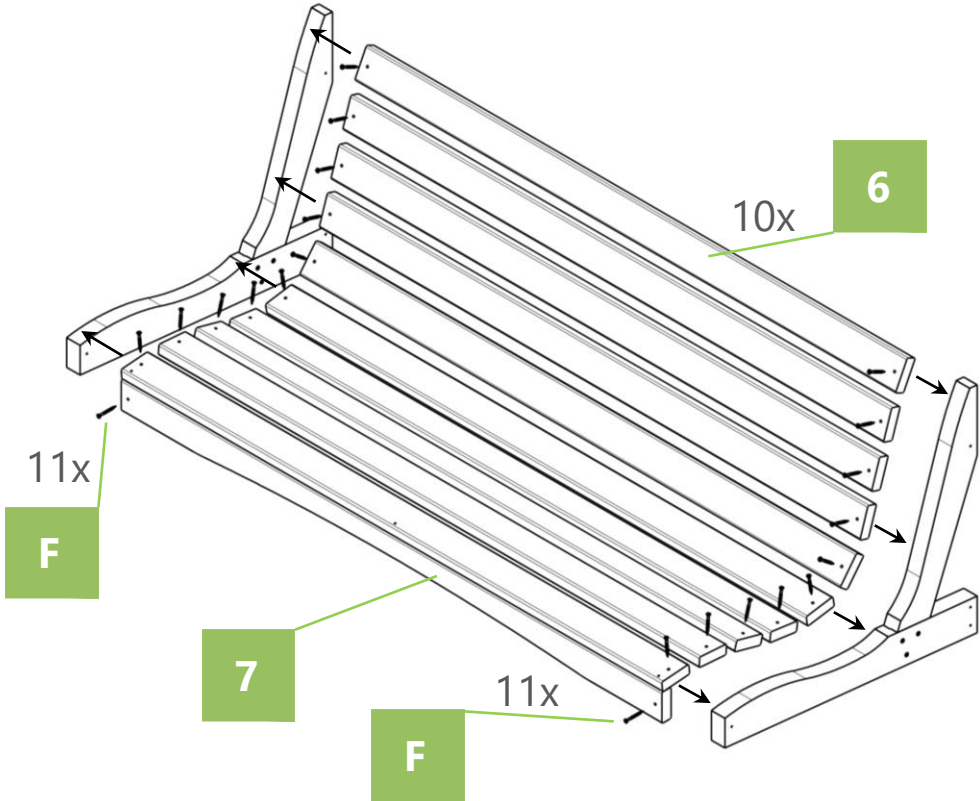

### The mounting sequence of slats

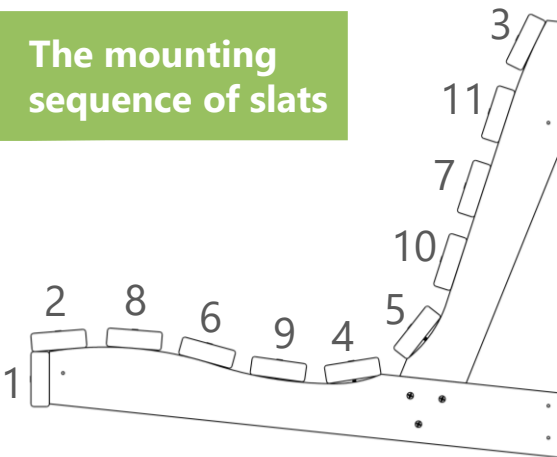


## Step 3

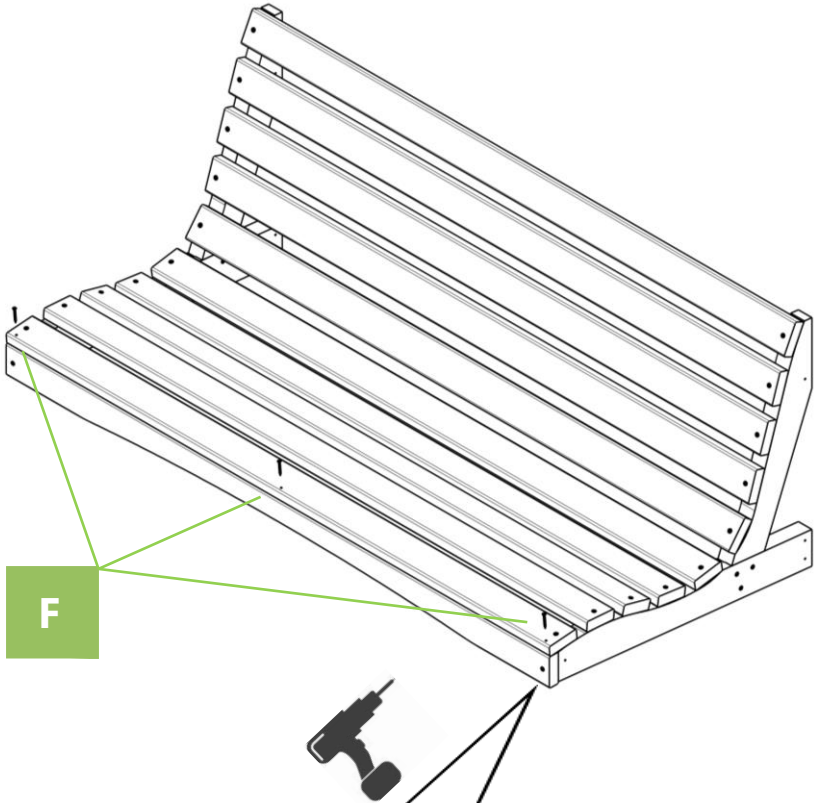


Pre-drill holes for  
screws in the 2nd  
slat.

Drill bit: **Ø4**

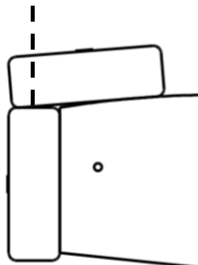


## Step 4

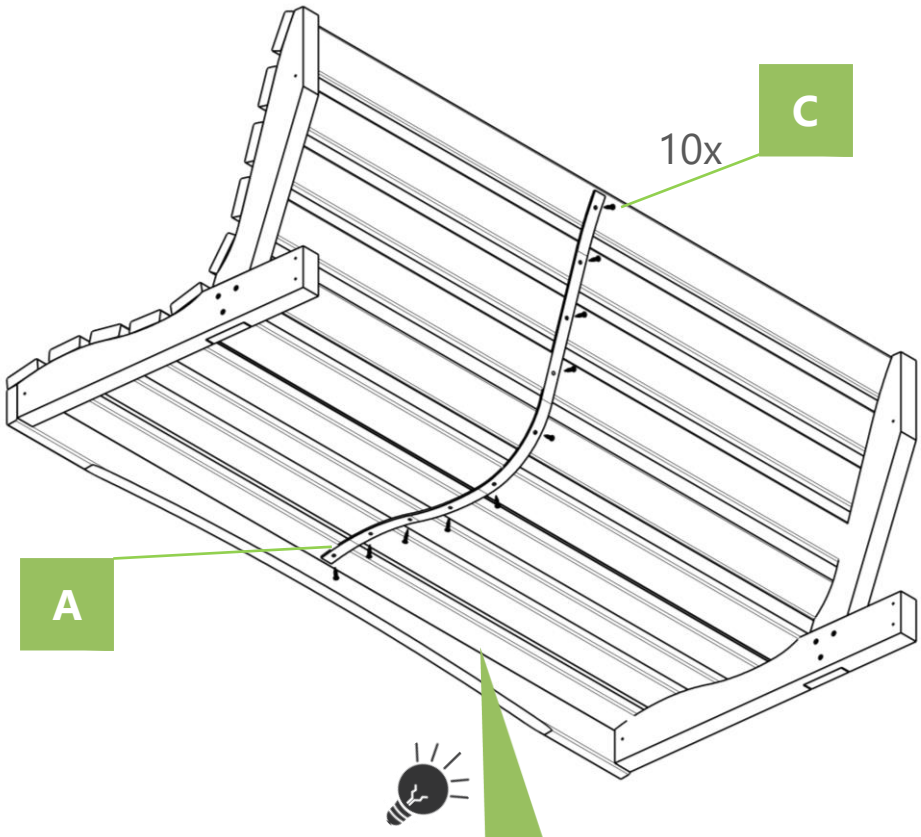

**Start mounting the steel flat bar from the 2nd slat from the bottom (see step2 – slat no. 2). Adjust it to the profile of the bench by bending it.**





## Step 5

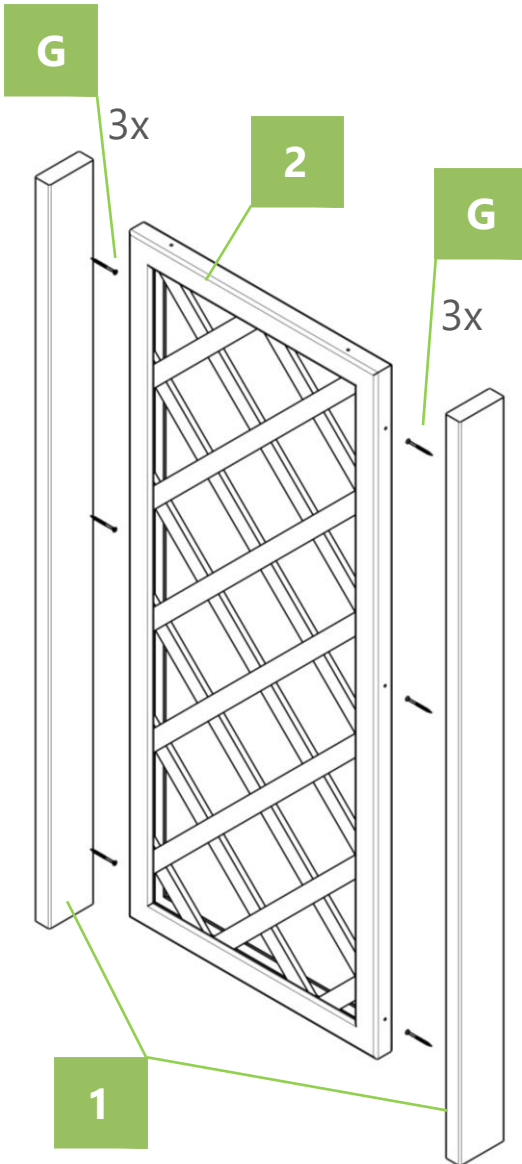


**Align at  
the top.**

**Align to the  
one side of  
the posts.**


## Step 6

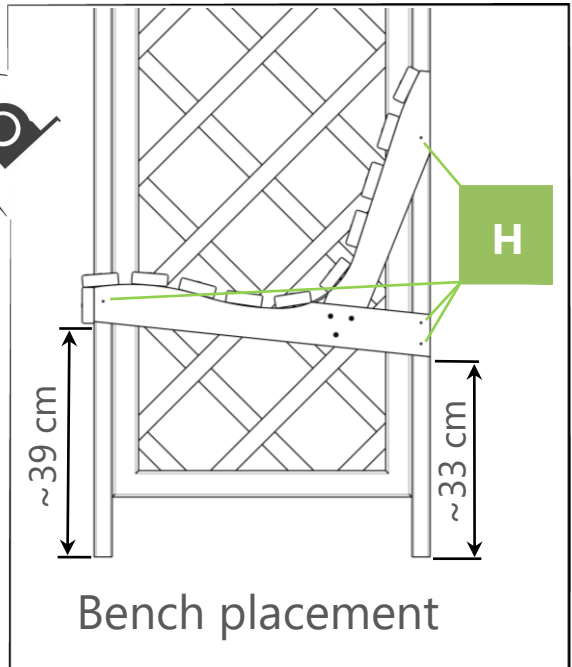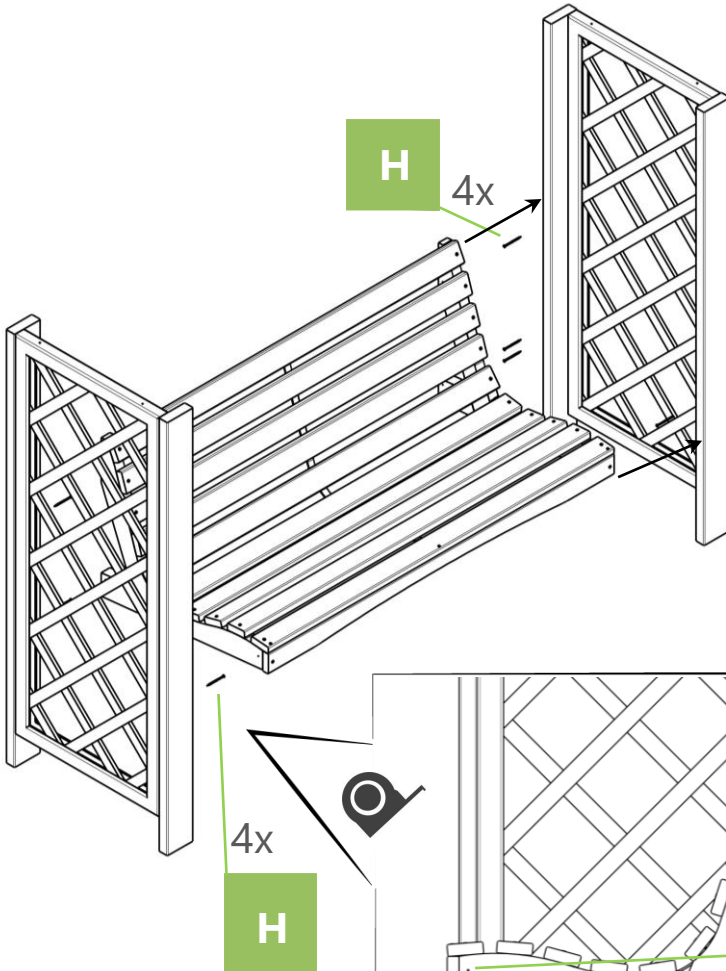


## Step 7

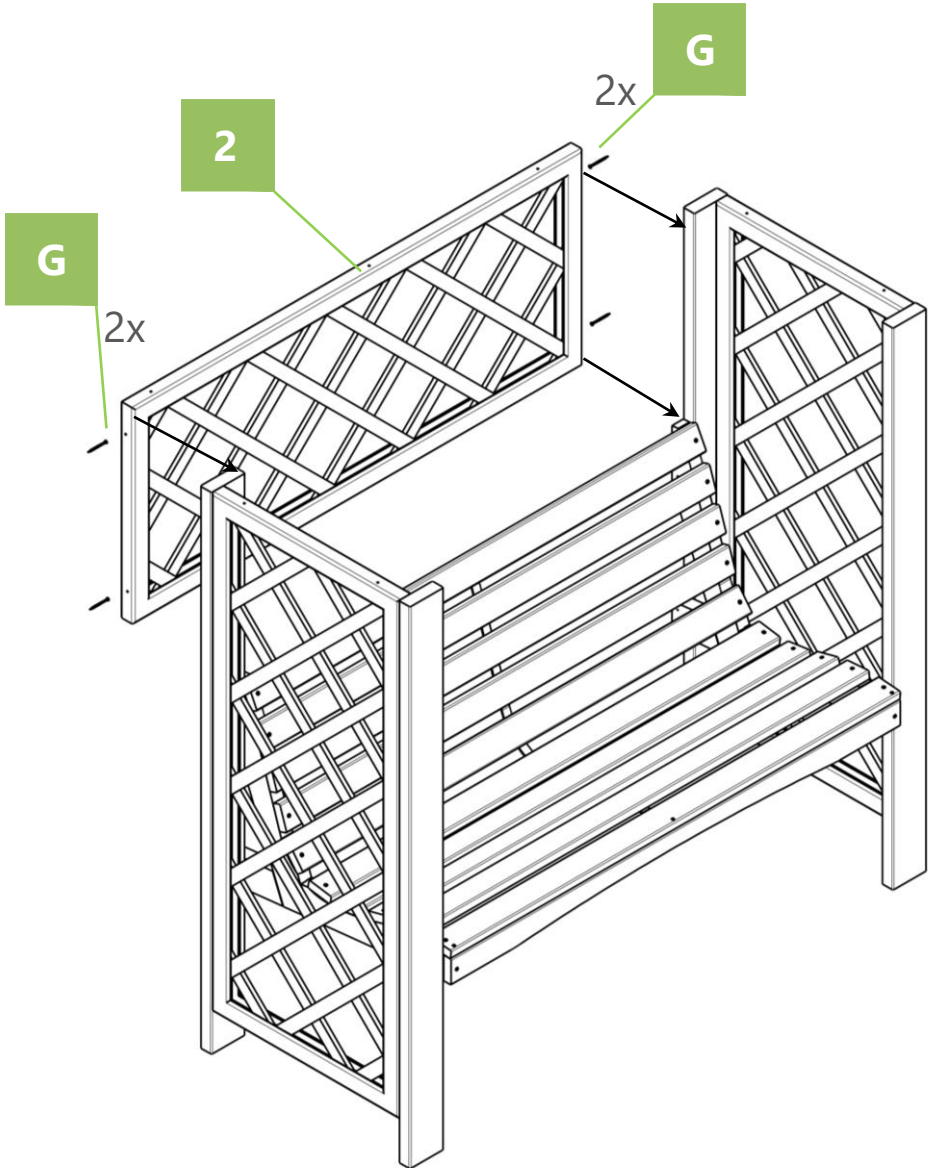



## Step 8

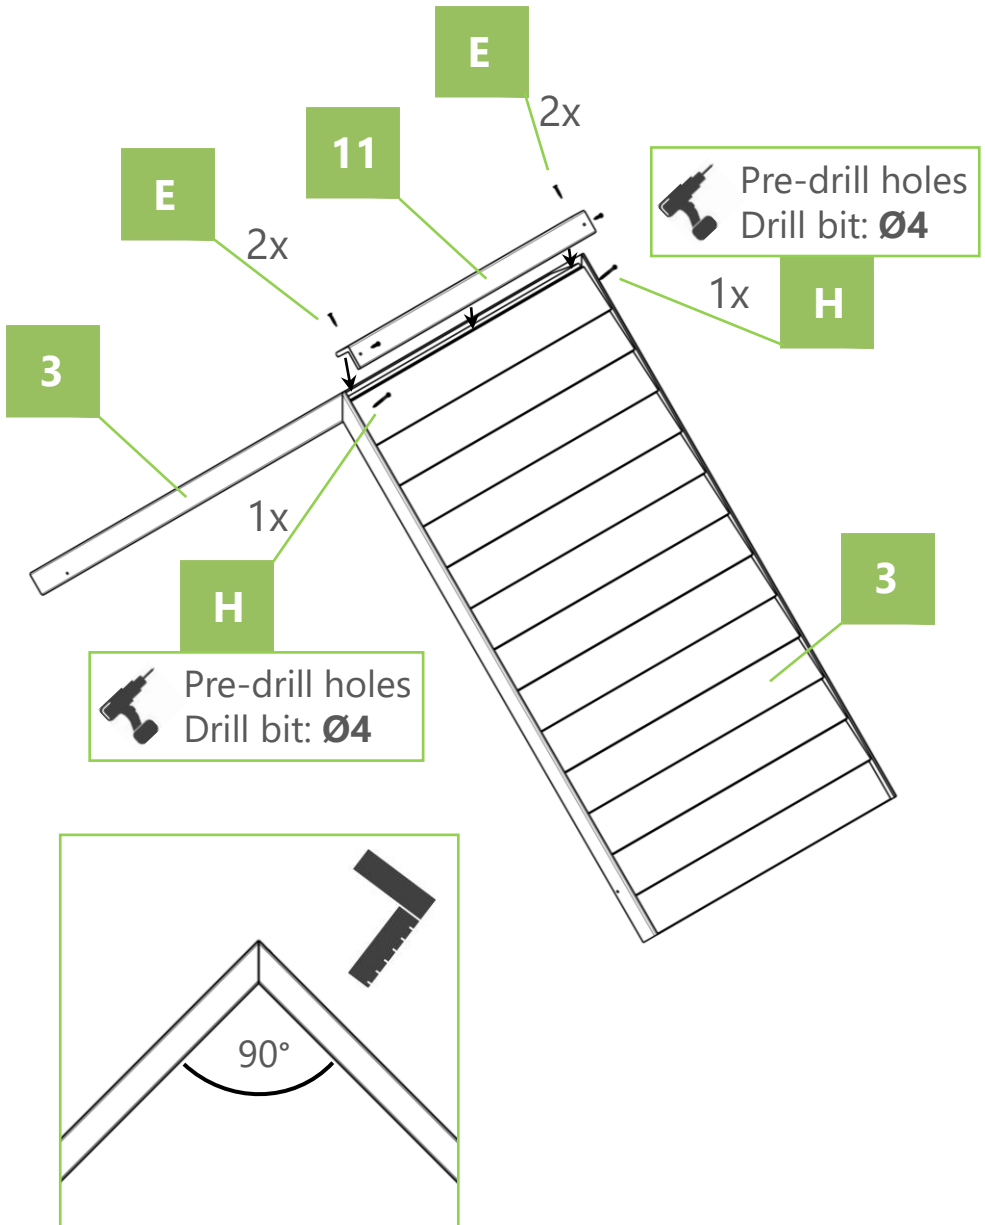

## Step 9

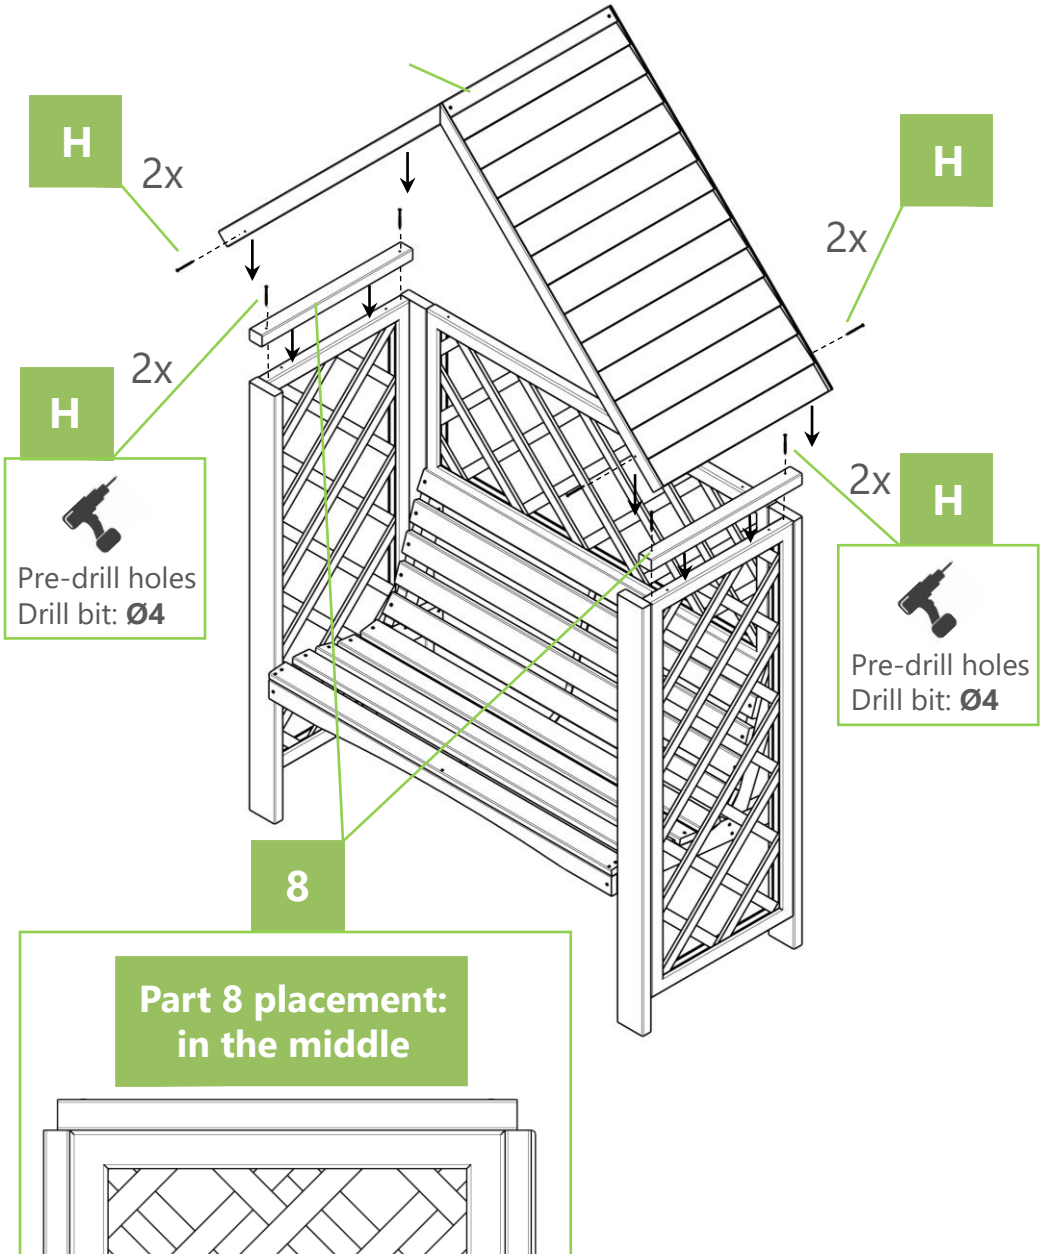


# Step 10

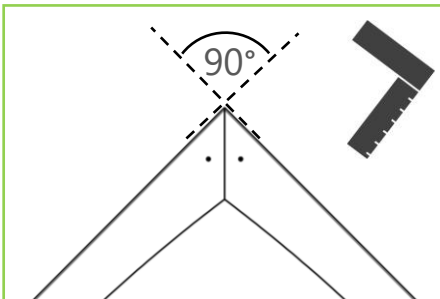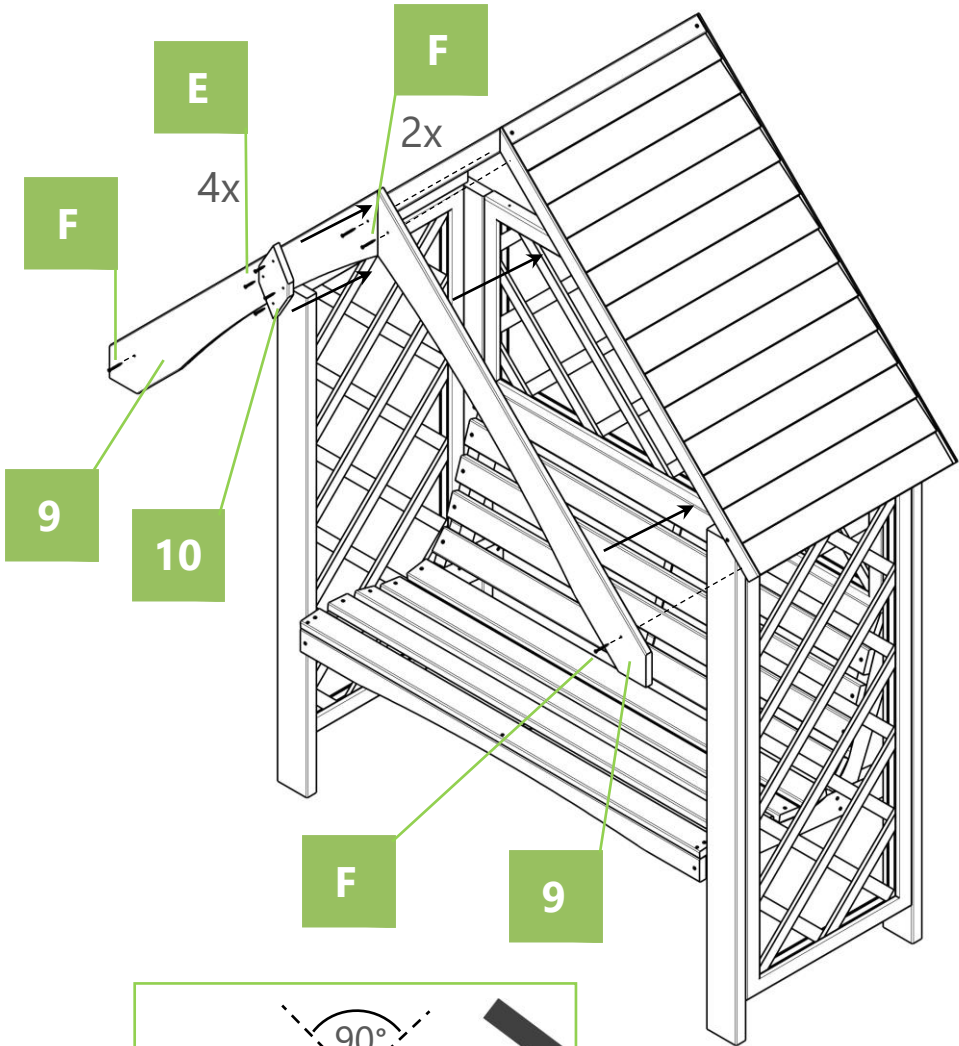

# Step 11

---

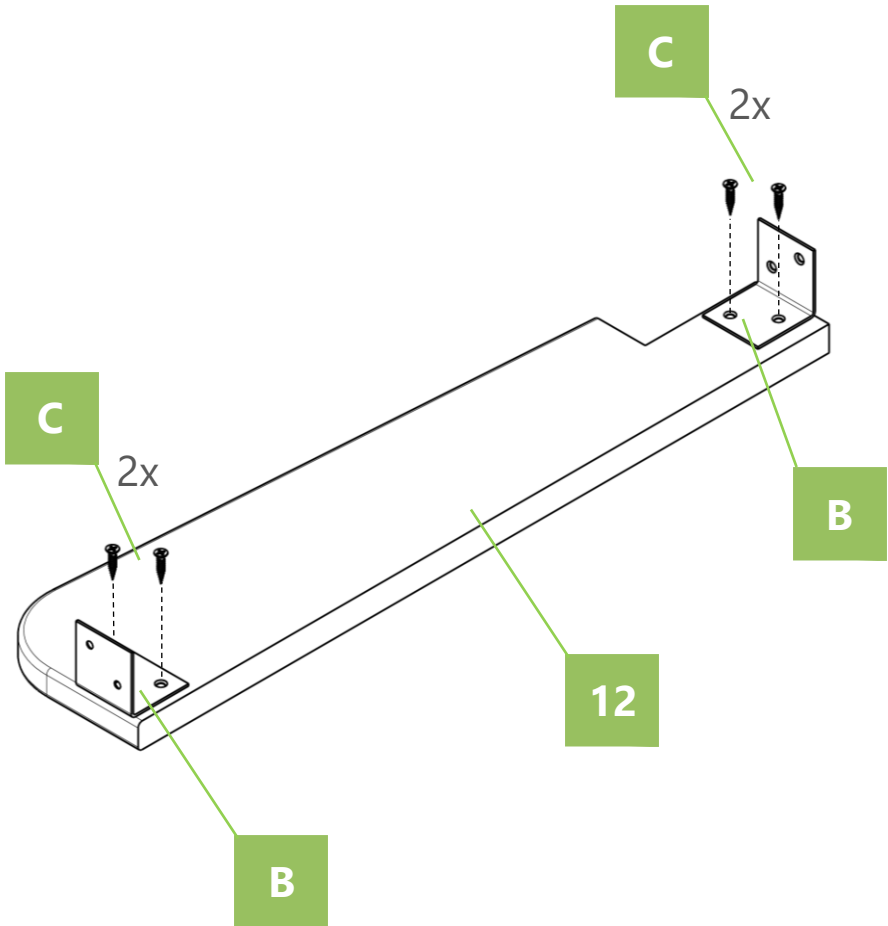

## Step 12

### The armrest placement

