


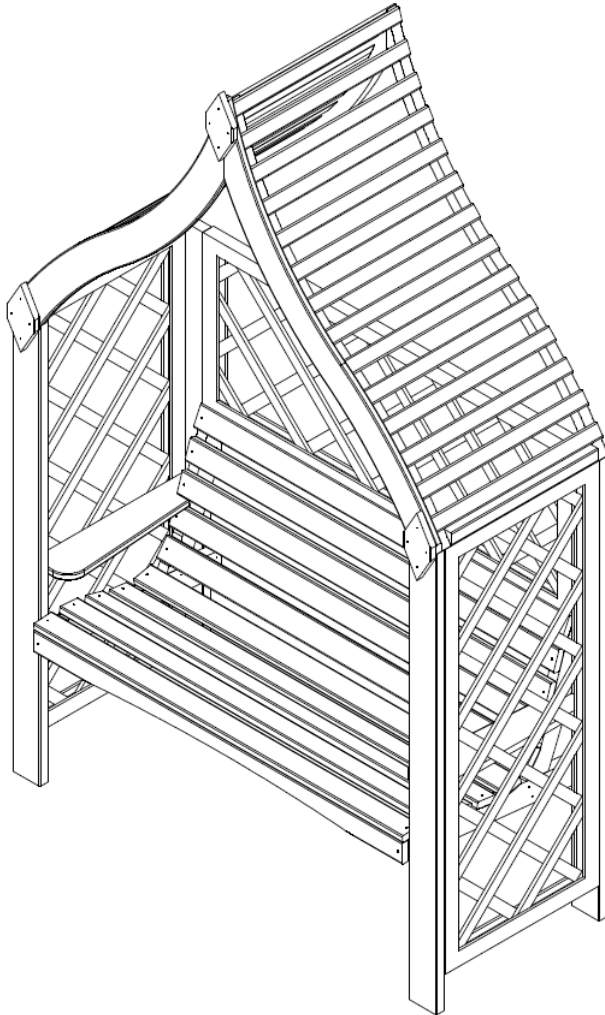

Siam

040190

EQUIPMENT



2 people



Measure



Drill




Level




Angle
bracket

PARTS


1

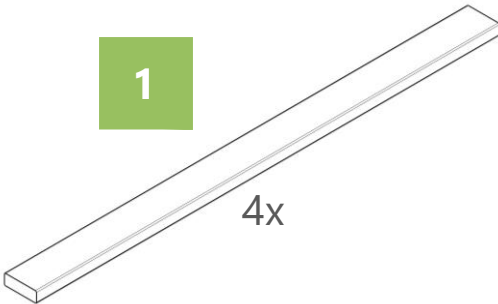


2








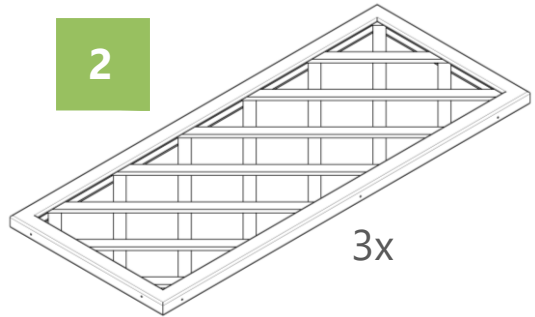


3

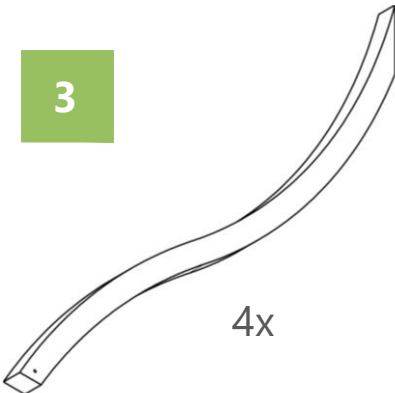

4

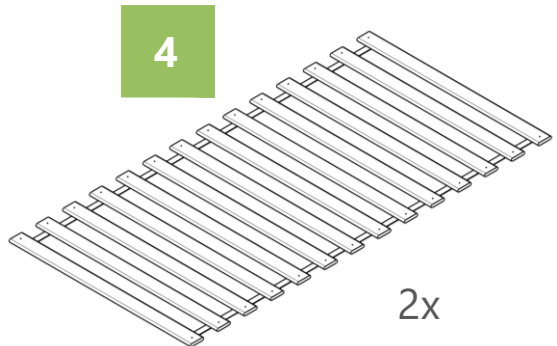

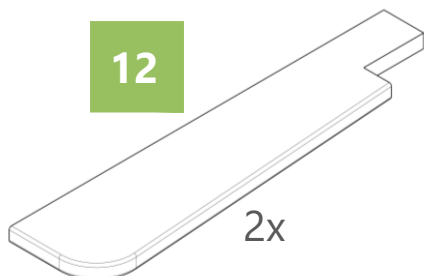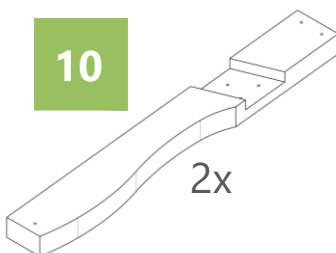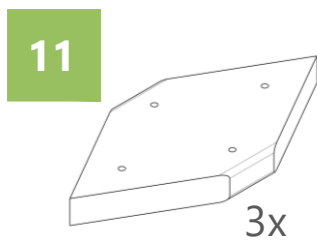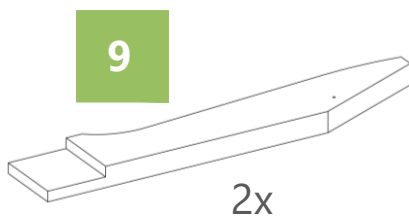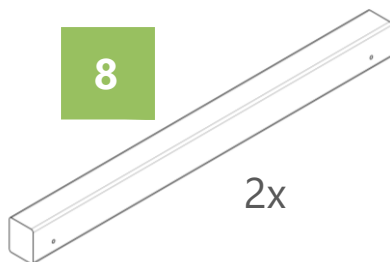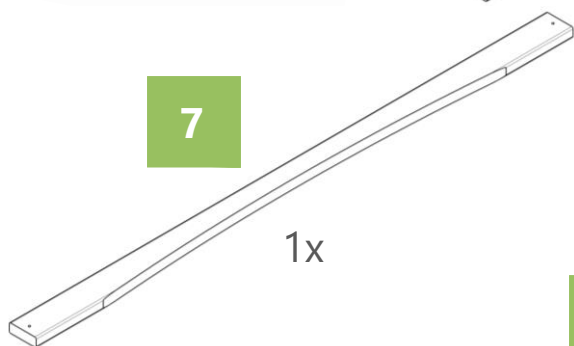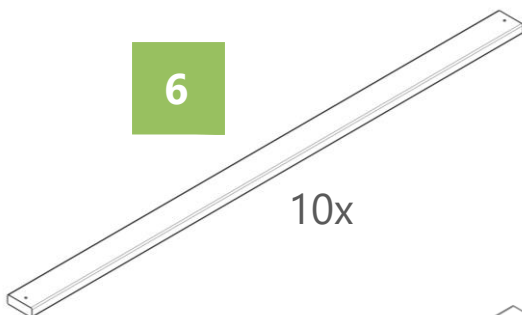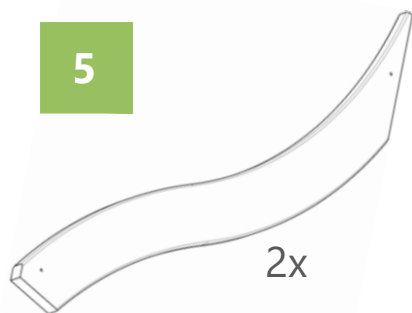

FITTINGS


A

1x



B

4x

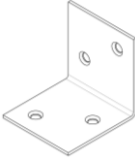

SCREW BIT: PZ2

C

26x



4x20 mm

D

6x



4x25 mm

E

12x



4x30 mm

F

29x



4x40 mm

G

16x



4x50 mm

H

18x



4x60 mm

SCREW BIT: PZ1


I

20x




3x16 mm

Step 1

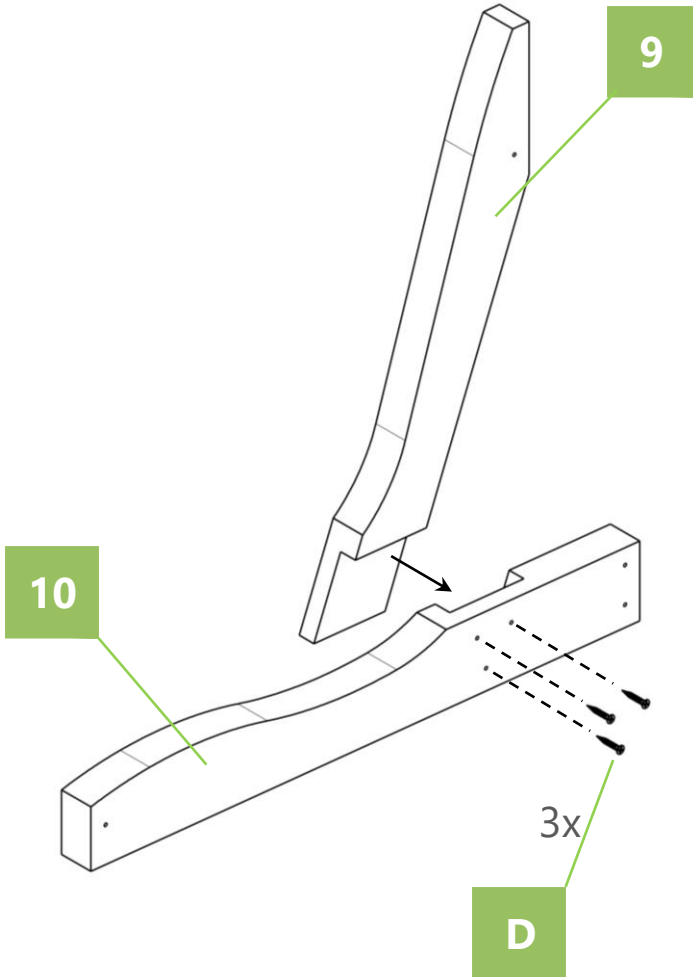


Assemble 2 such segments


Step 2

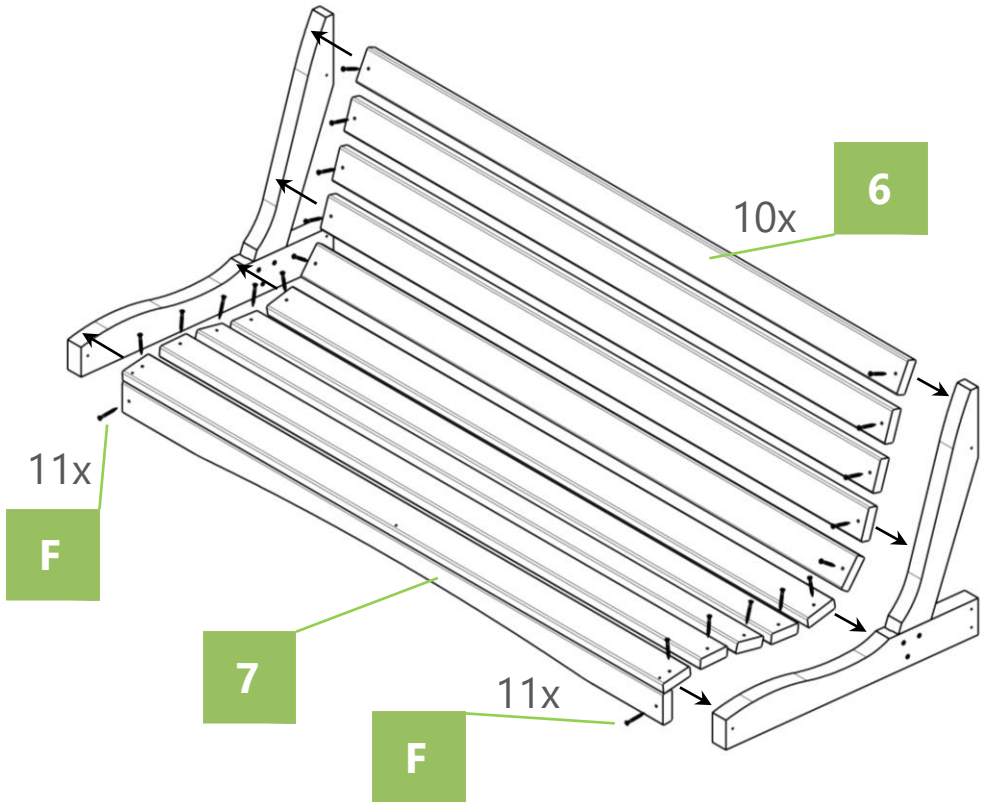

The mounting sequence of slats

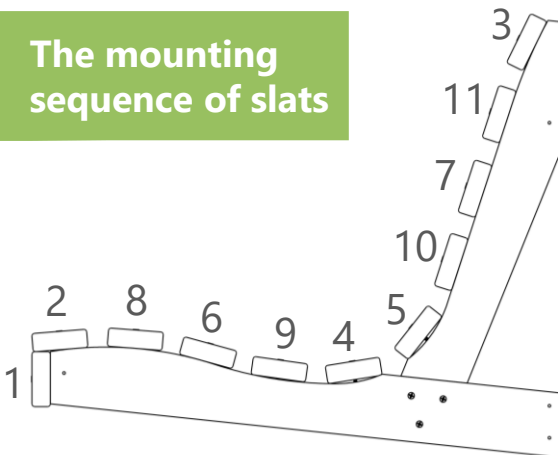


Step 3

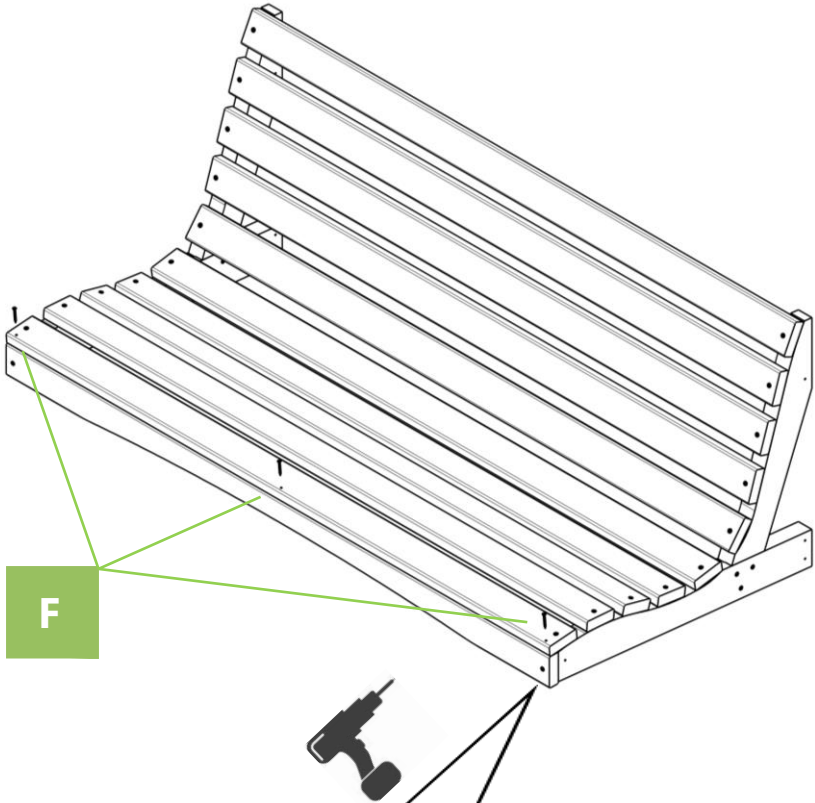


Pre-drill holes for
screws in the 2nd
slat.

Drill bit: **Ø4**

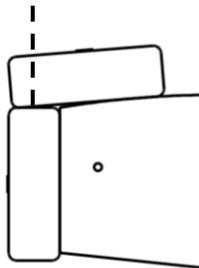


Step 4

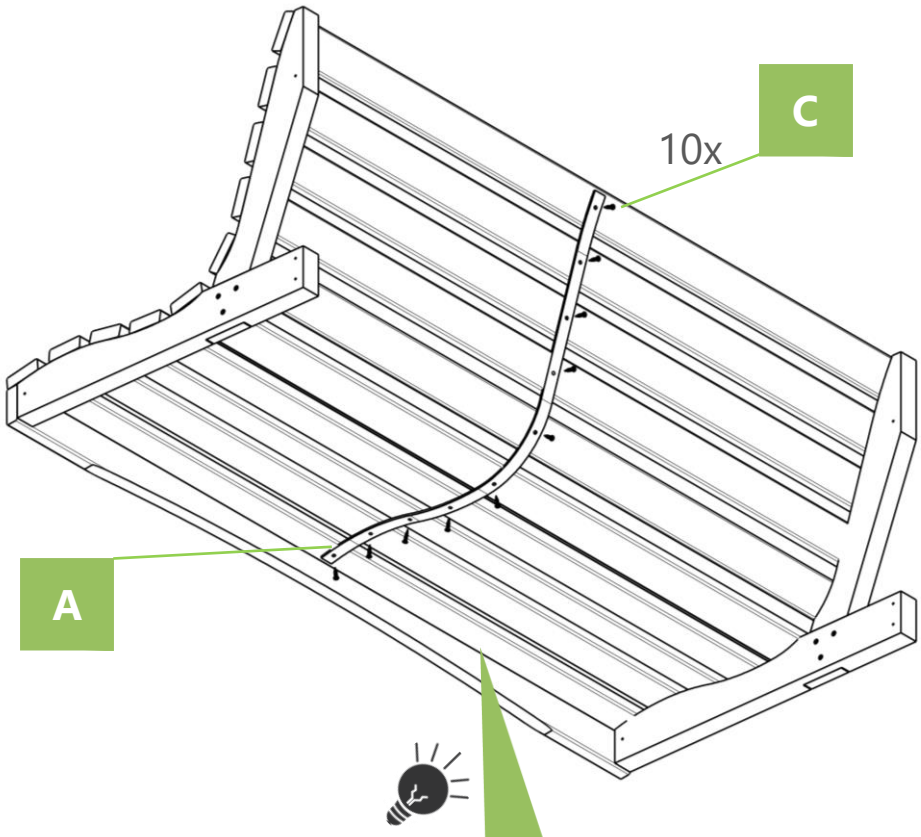

Start mounting the steel flat bar from the 2nd slat from the bottom (see step2 – slat no. 2). Adjust it to the profile of the bench by bending it.



Step 5

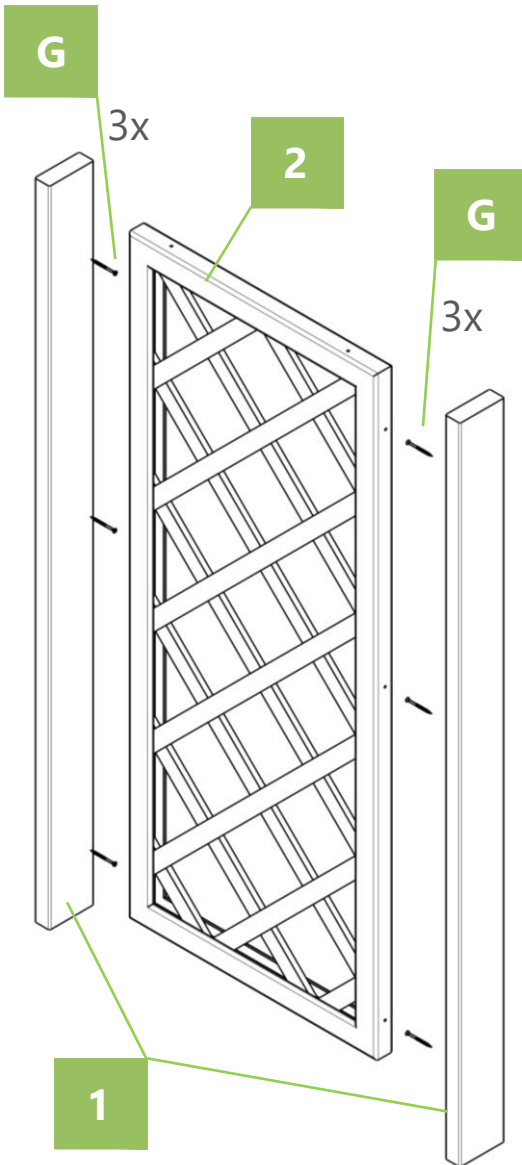

**Align at
the top.**


**Align to the
one side of
the posts.**

Step 6

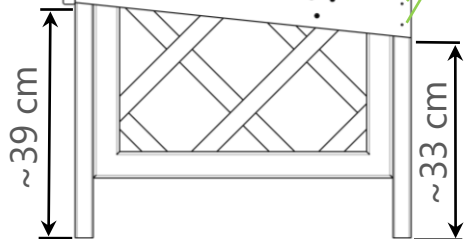
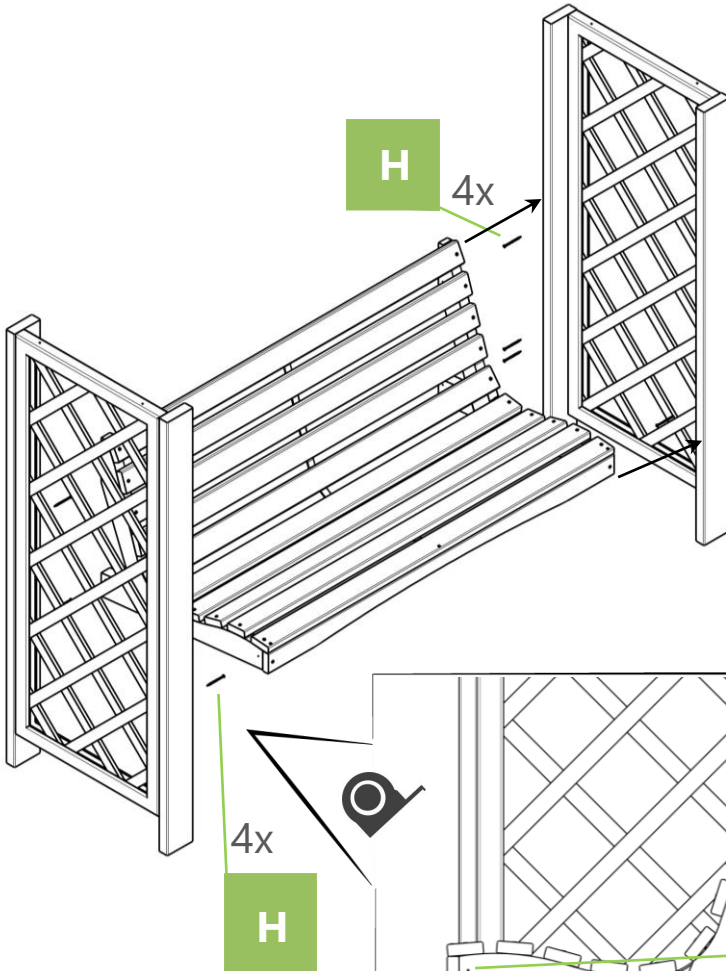


Bench placement

Step 7

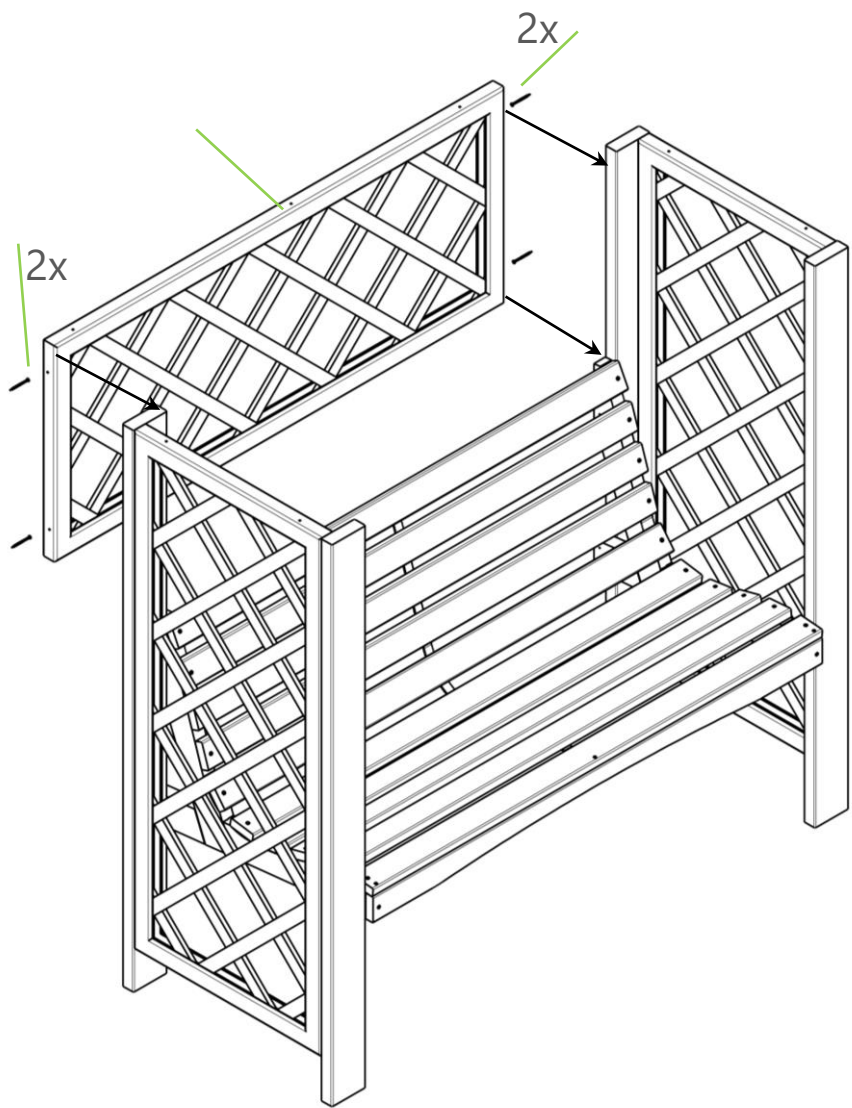


Step 8

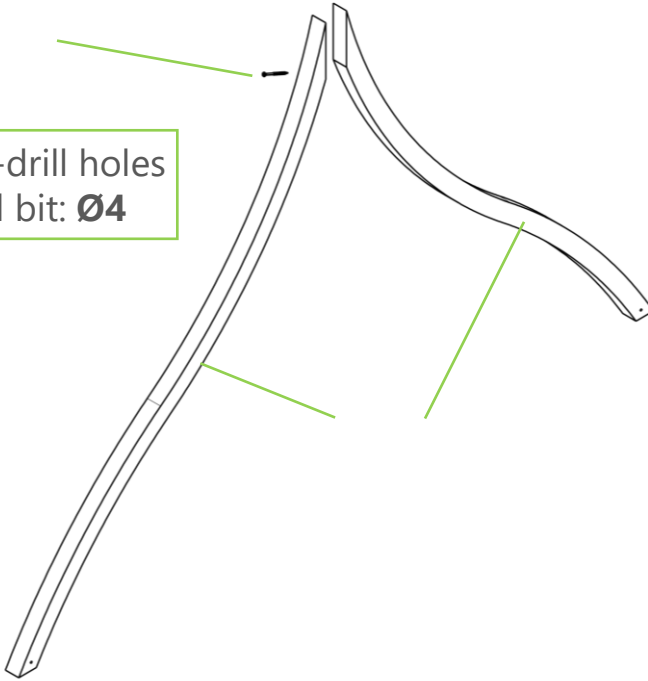


Assemble 2 such segments

Step 9

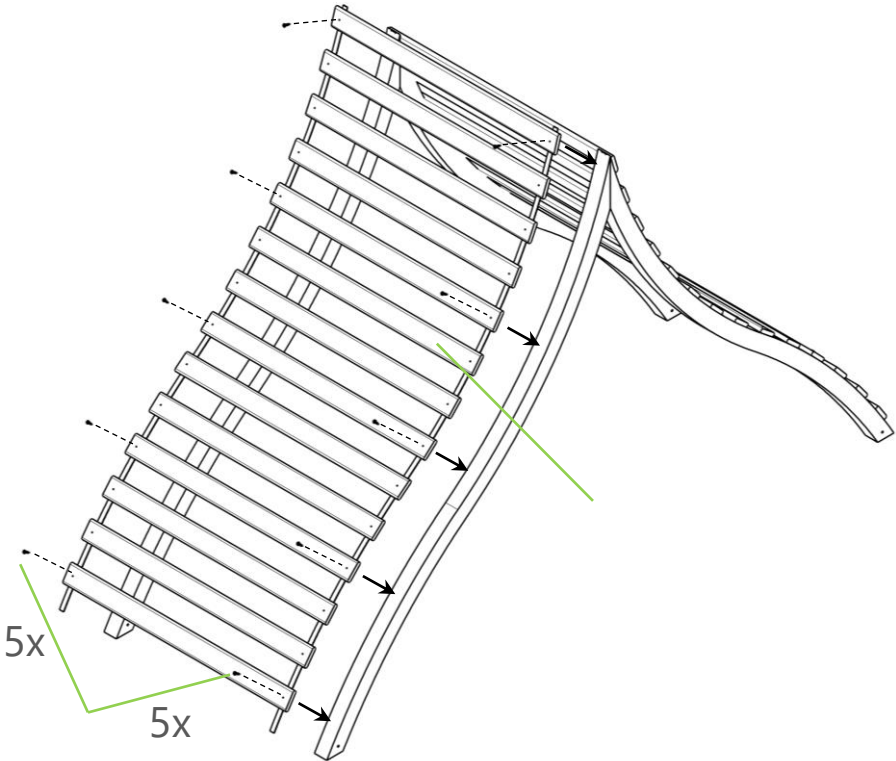


Pre-drill holes
Drill bit: Ø3


Step 10

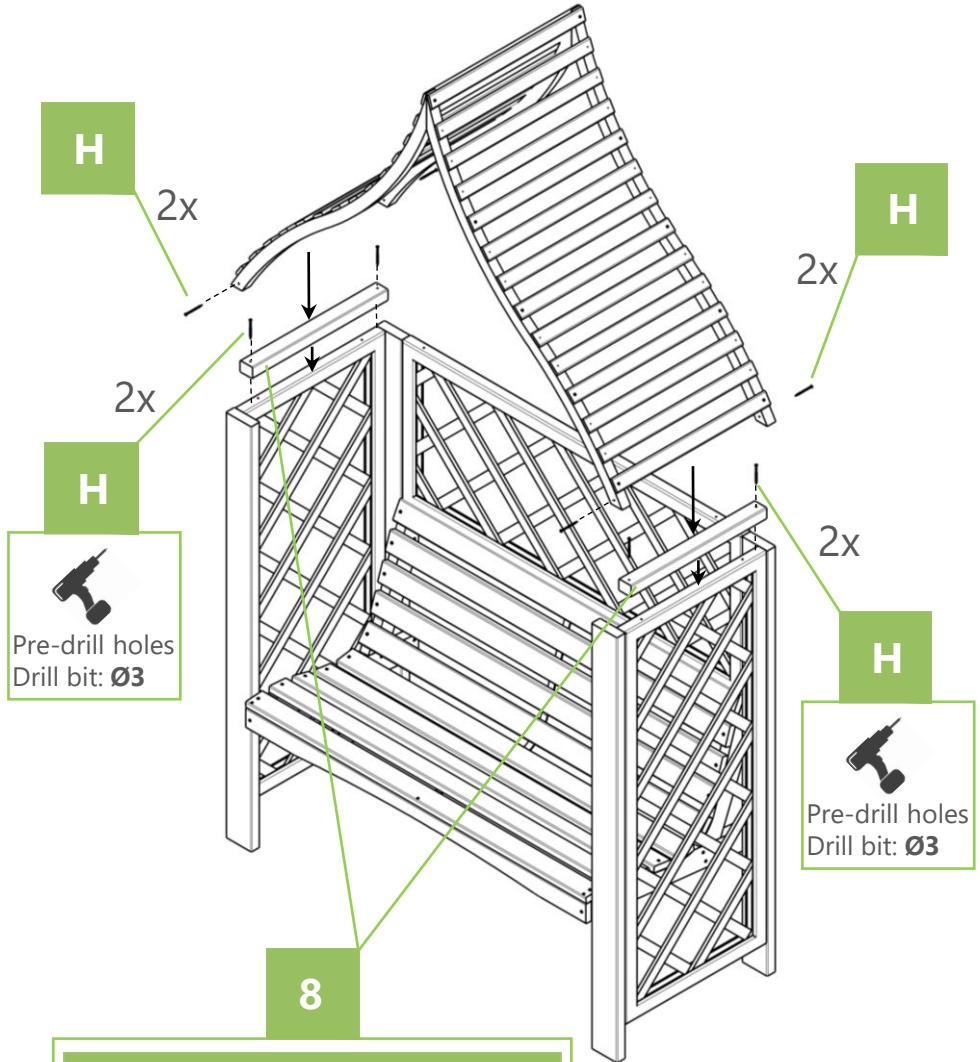


**Part 8 placement:
Align with the post at the back**

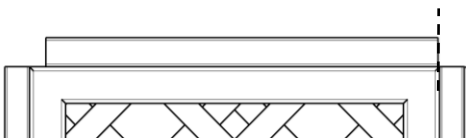

Step 11

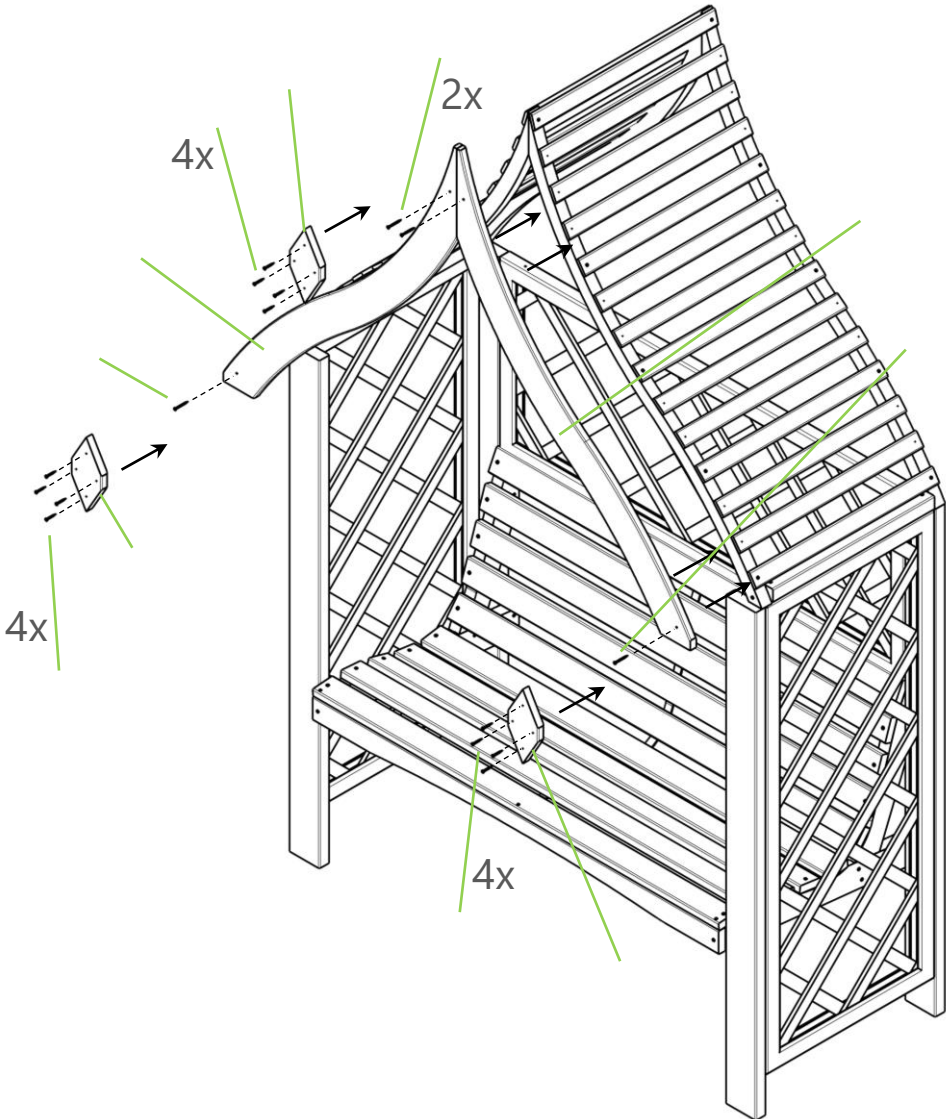

Step 12

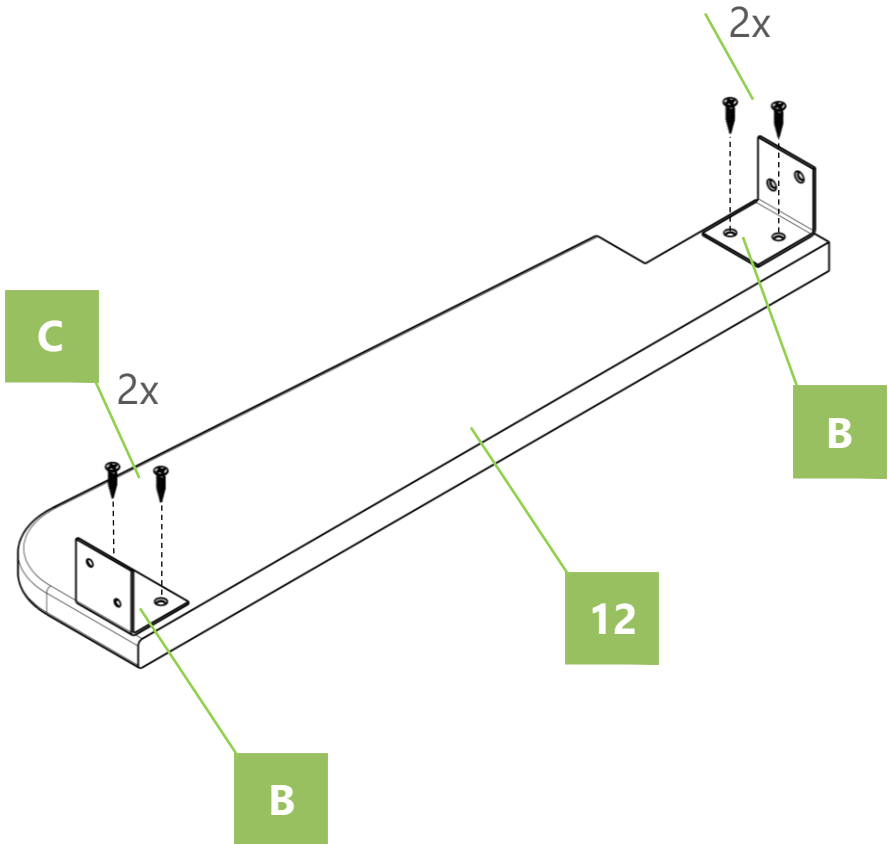

Step 13

