




Rimini Pavilion

PRODUCT: C41500



PARTS

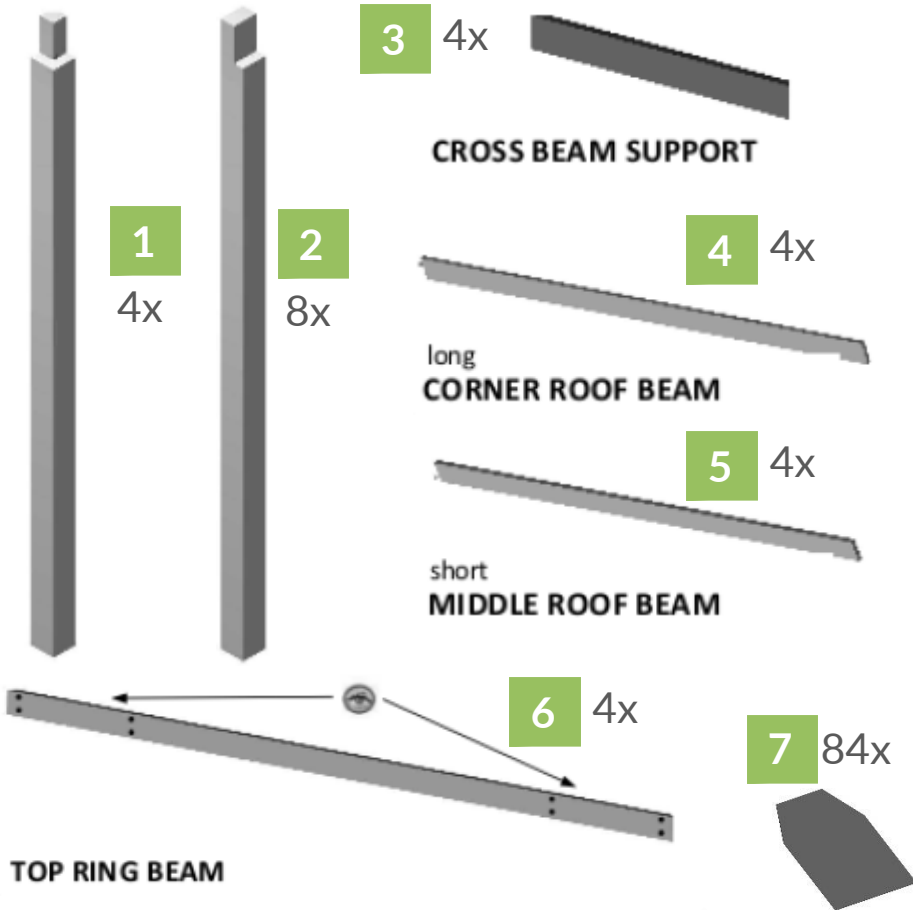

EQUIPMENT




PARTS

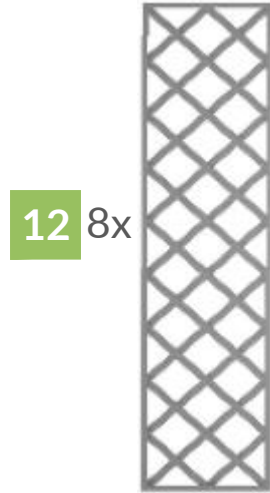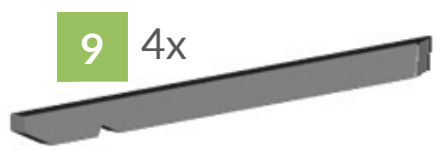

**PACKAGE OF EACH ROOF
ELEMENT**

21x

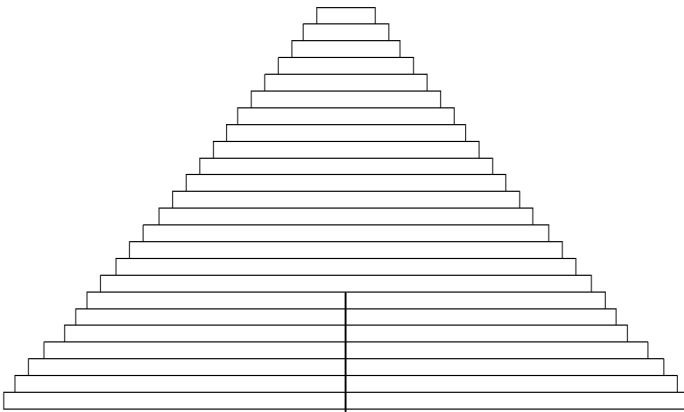







**PACKAGE OF TILLED
ELEMENTS**


104x



FITTINGS

A	16x		6x120 mm
B	52x		6x90 mm
C	80x		4,5x60 mm
D	640x		2,8x15 mm
E	168x		3x25 mm
F	224x		2x40 mm

STEP 1

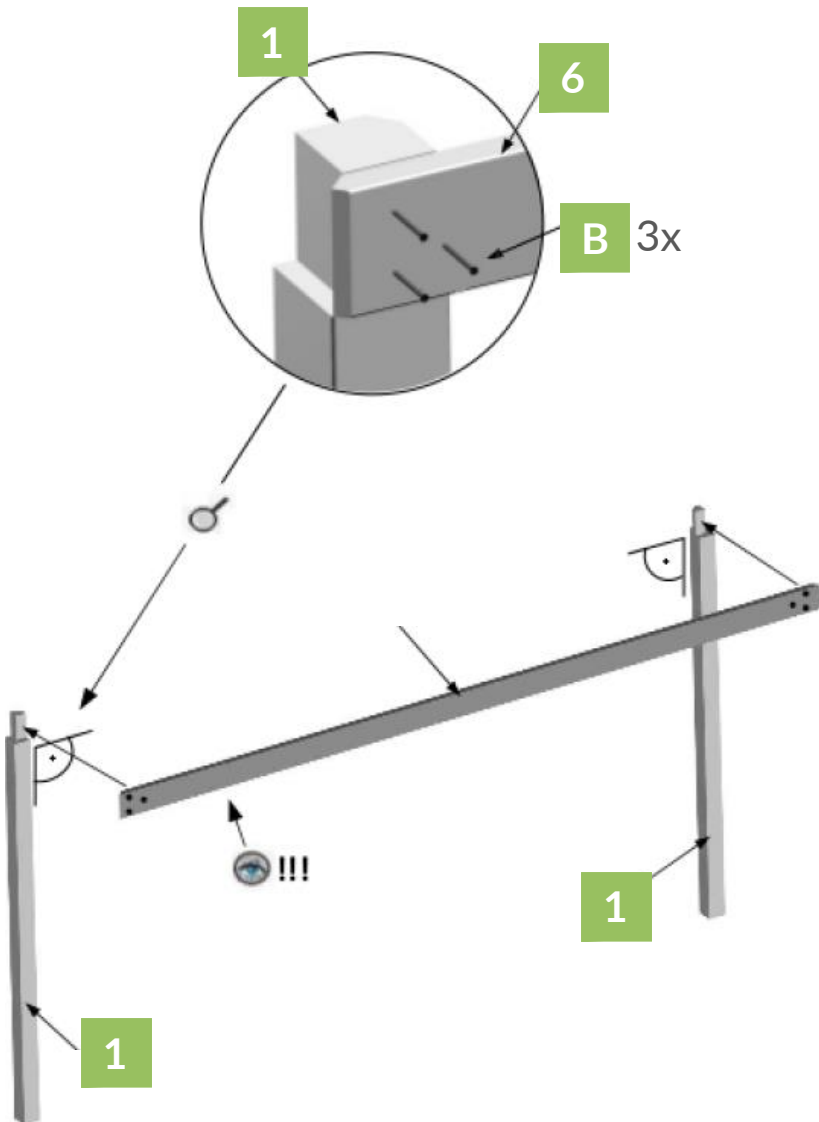

REPEAT STEP – 2 TIMES

STEP 2

SEGMENT CREATED IN STEP 1


7

7


SEGMENT CREATED IN STEP 1

7


STEP 3

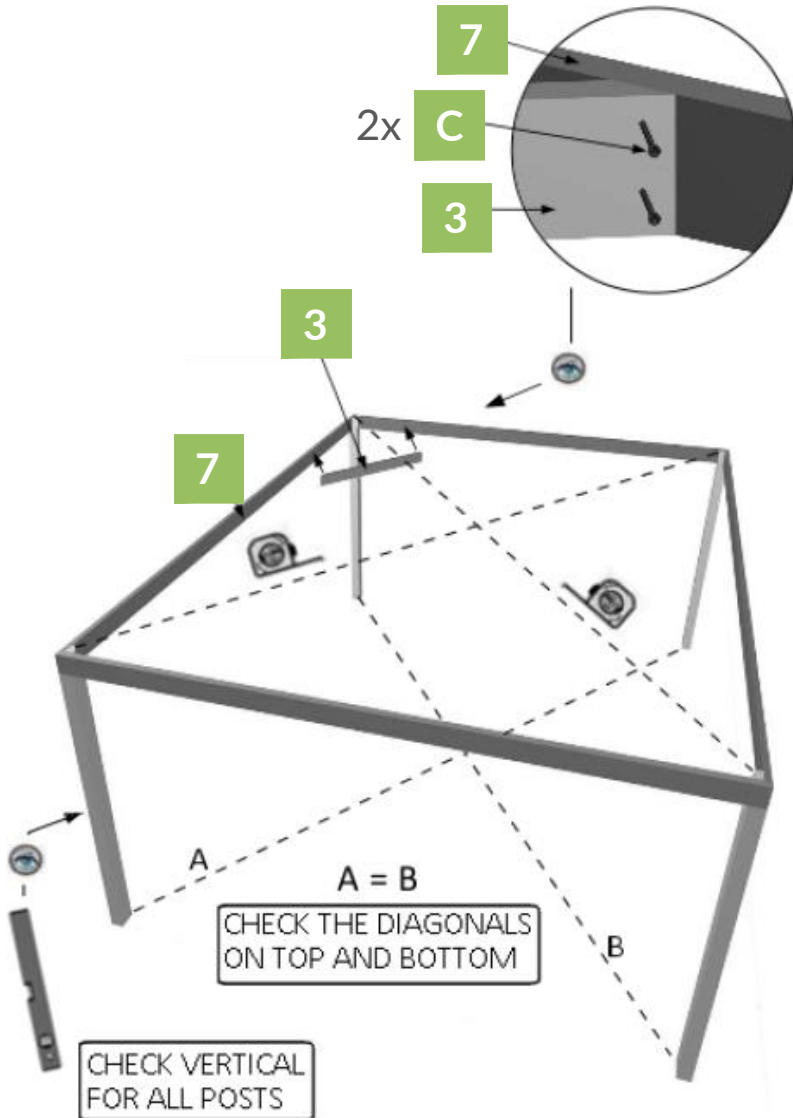

STEP 4

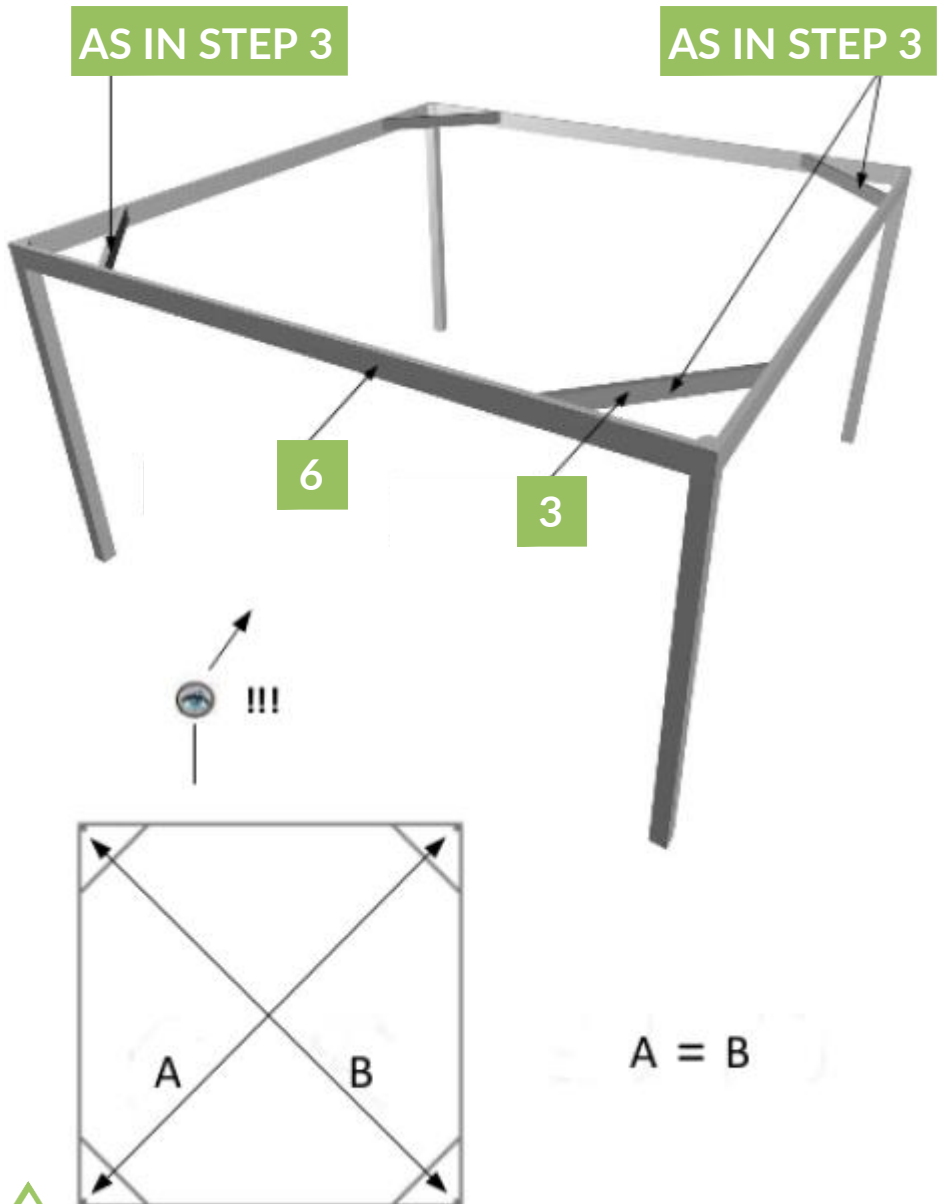


STEP 5

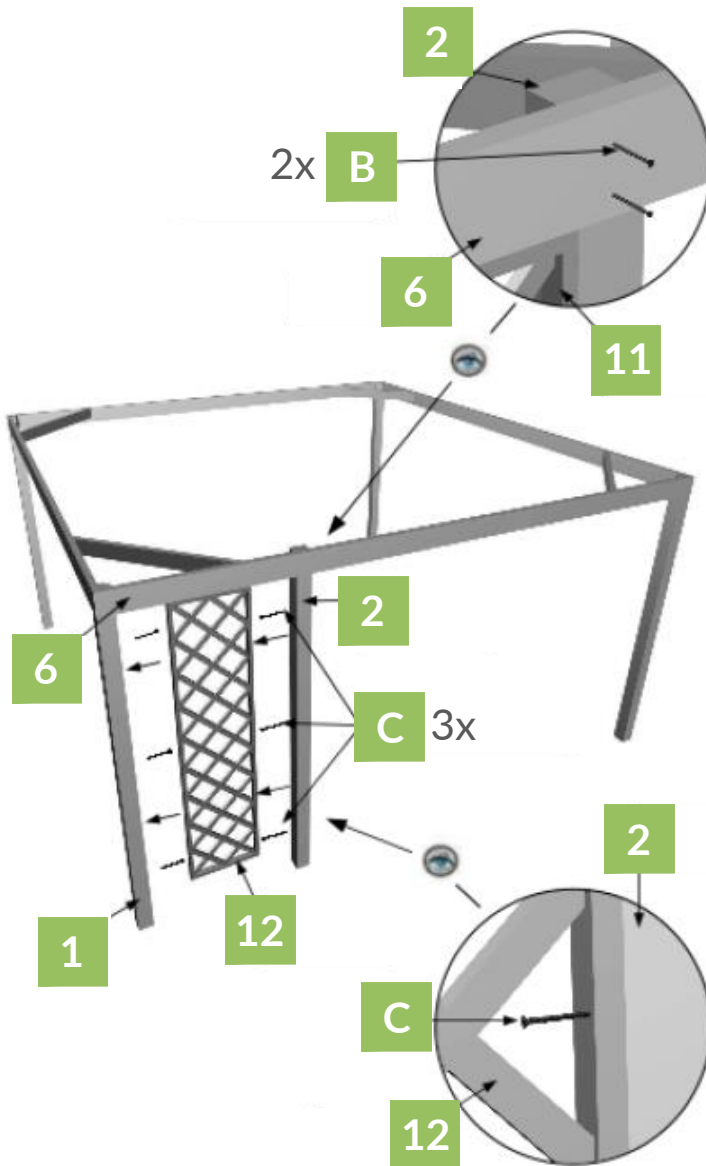


REPEAT STEP 5 AT OTHER SIDE OF THE CORNER


STEP 6

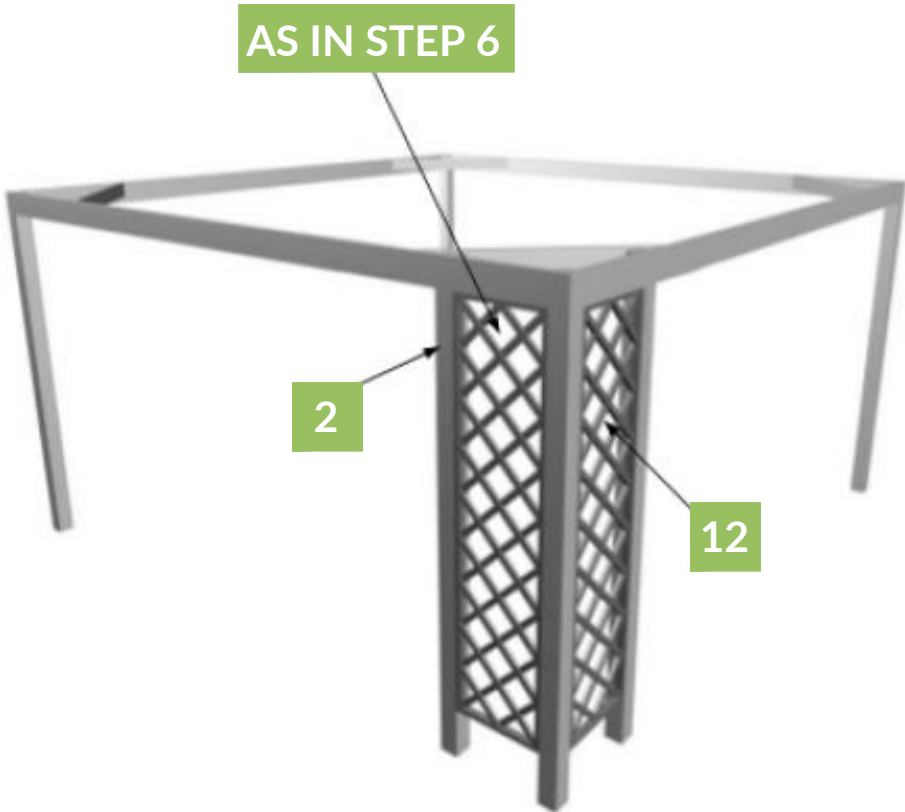


STEP 7

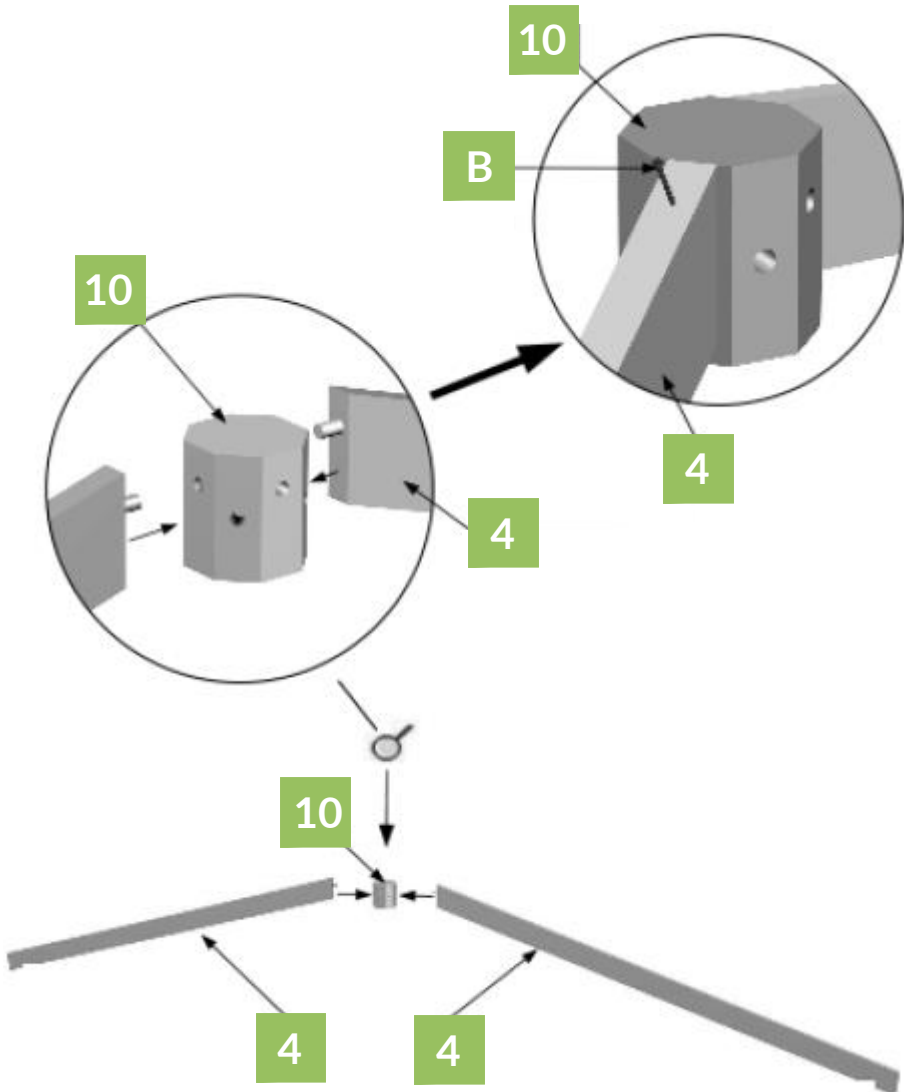


STEP 8

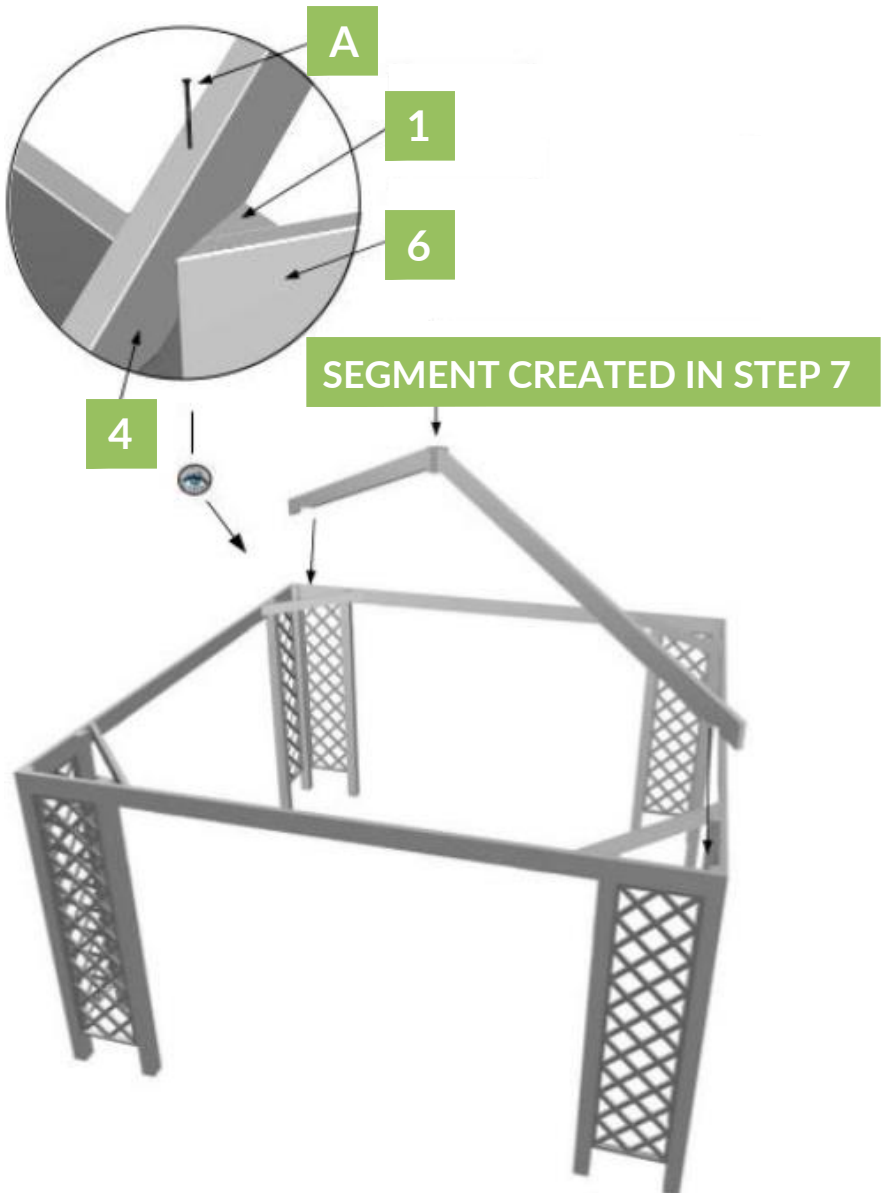

STEP 9

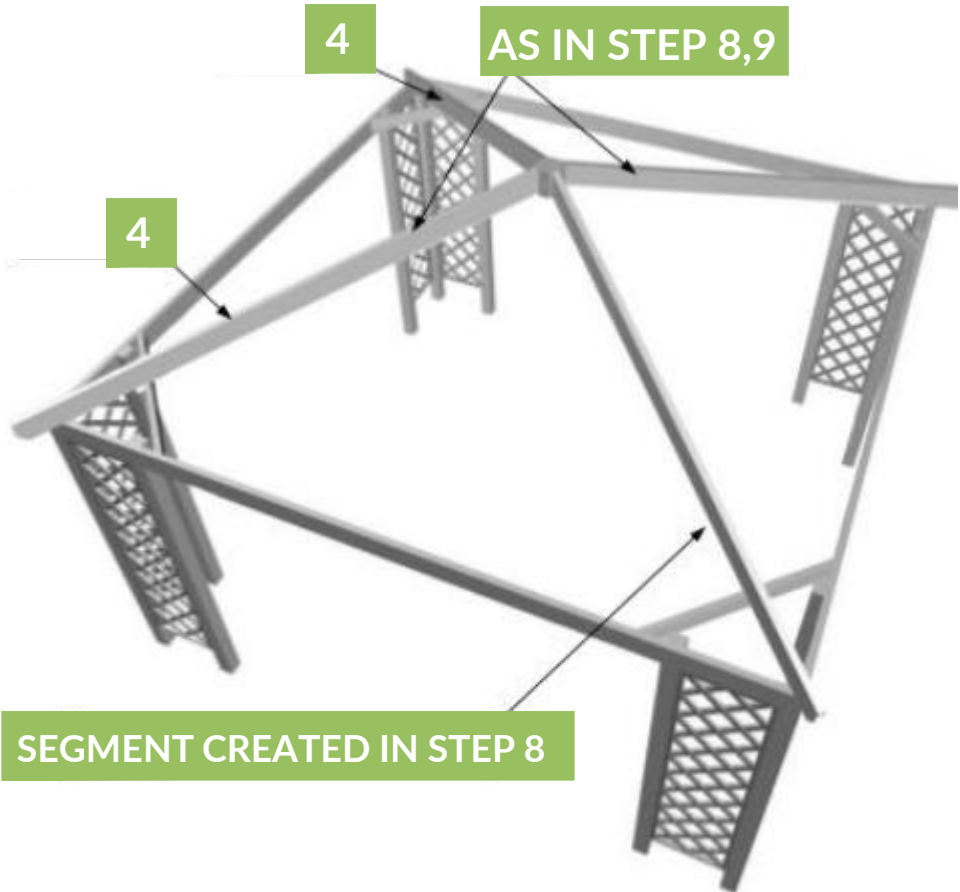


STEP 10

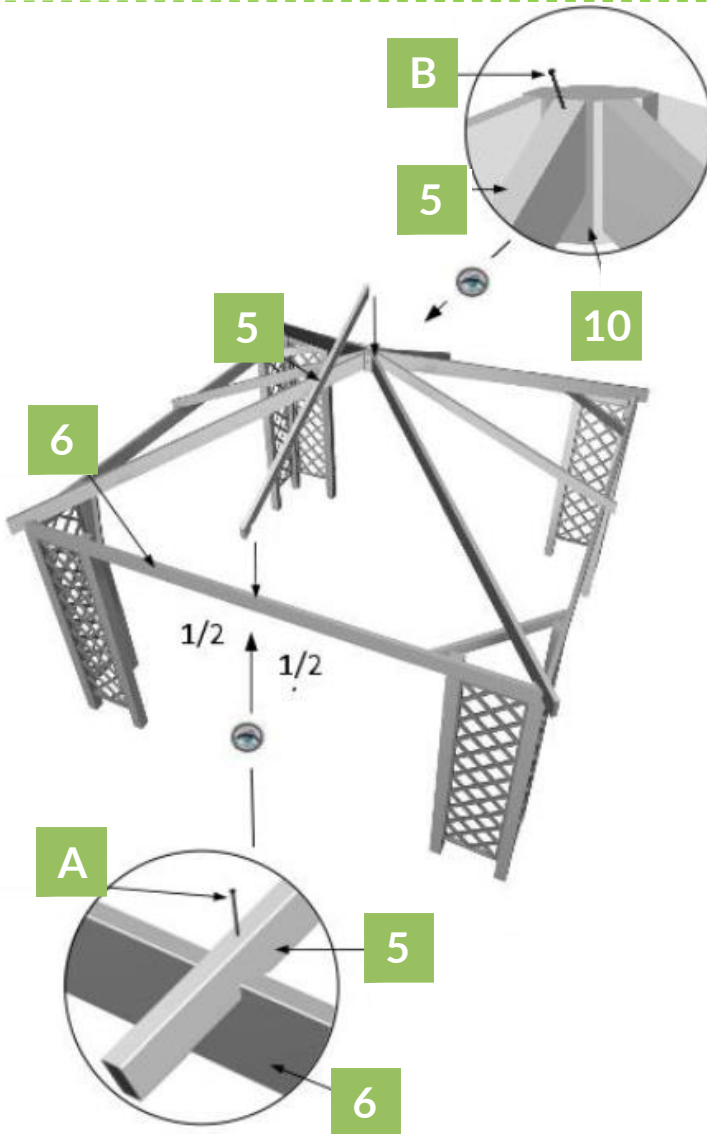


REPEAT STEP - 4 TIMES

STEP 11

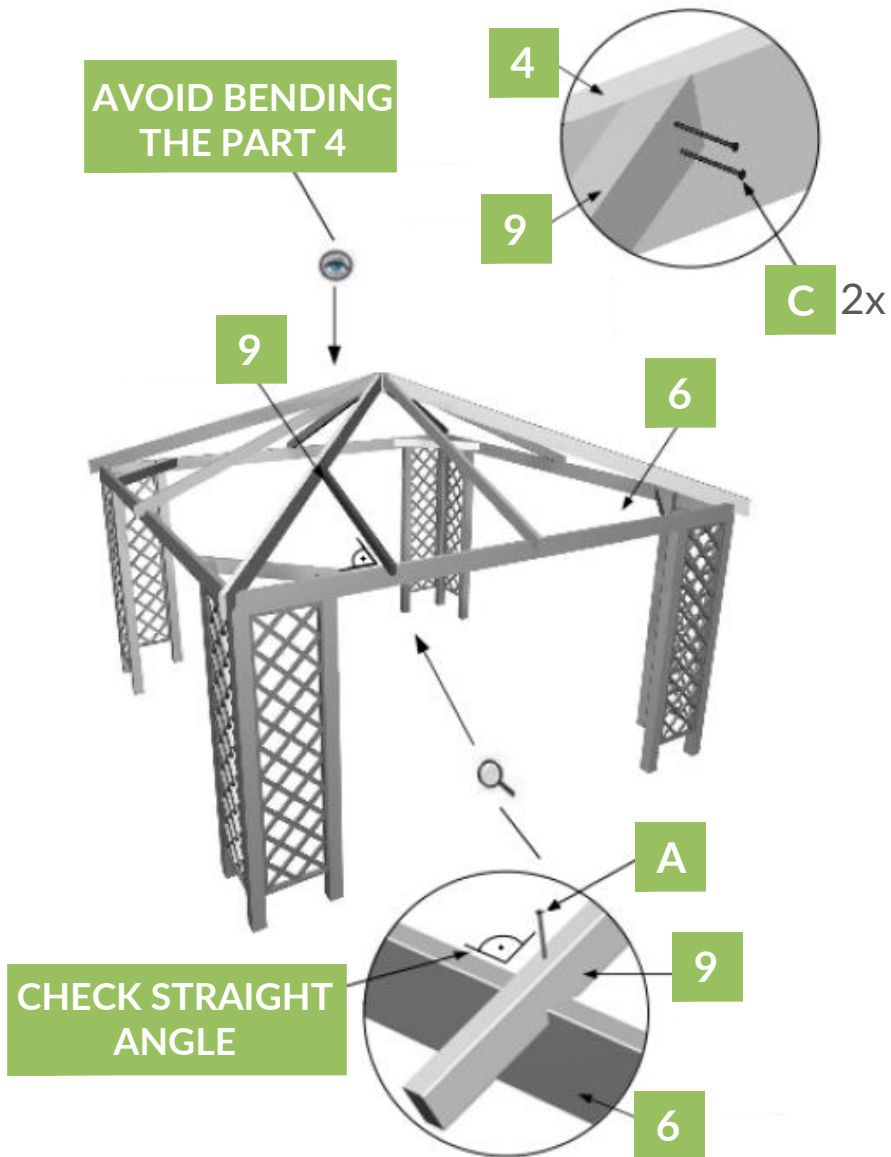

STEP 12

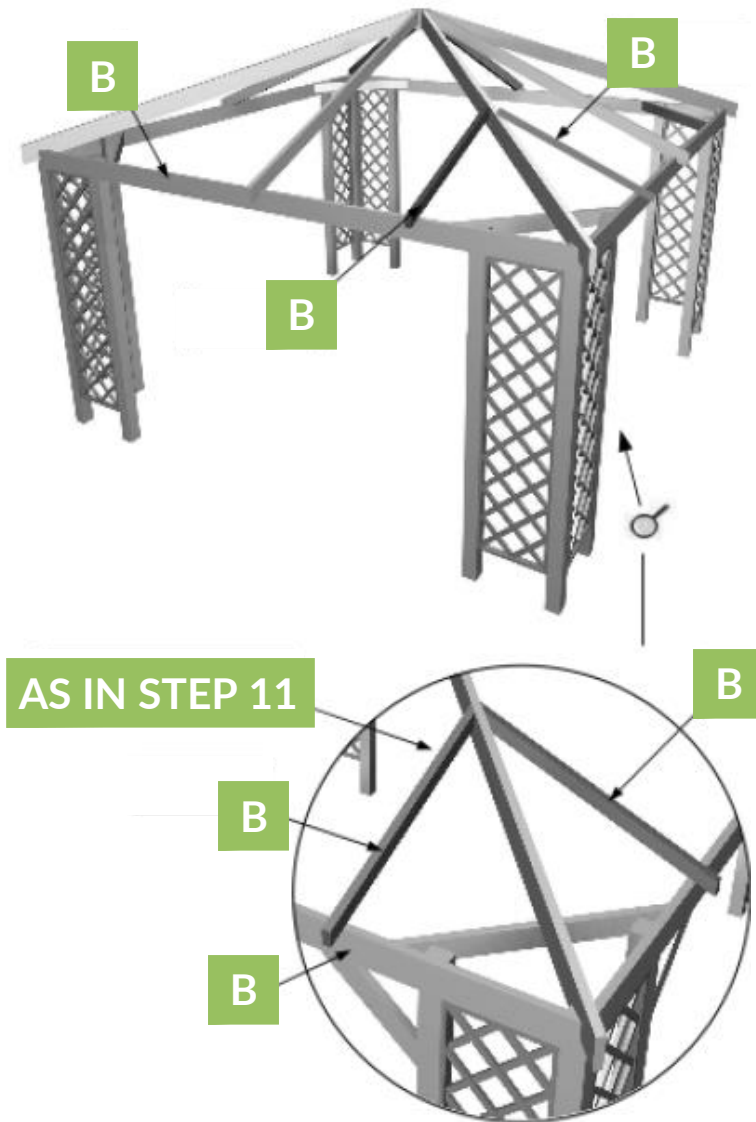

REPEAT STEP 11,12 – 4 TIMES


STEP 13

**TAKE ONE ITEM
FROM EACH
PACKAGE OF ROOF
ELEMENTS**




21 ELEMENTS

**SORT ROOF
ELEMENTS BY
LENGHT**

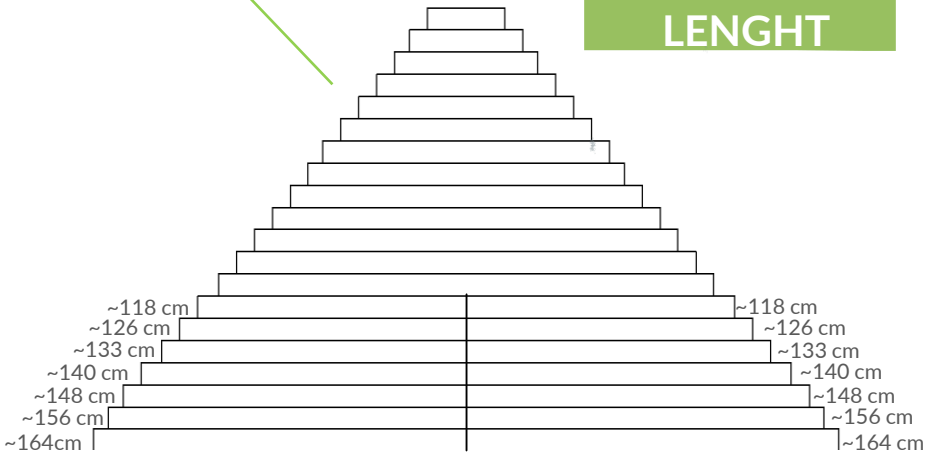

REPEAT STEP – 4 TIMES

STEP 14

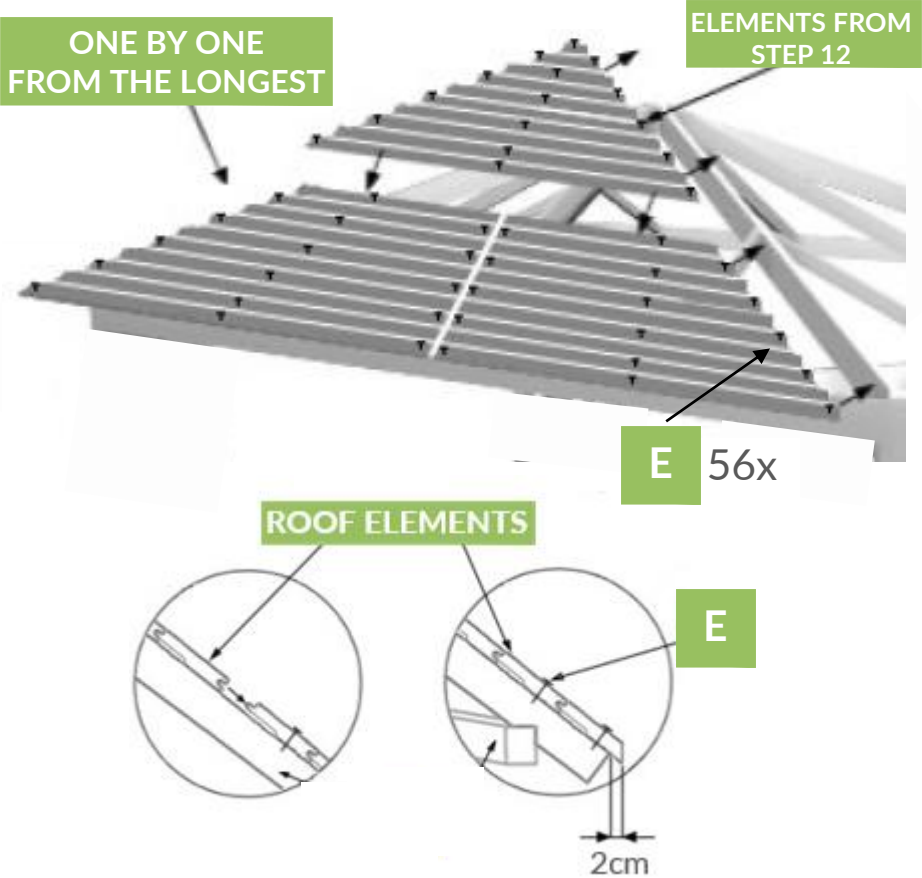


REPEAT STEP – 4 TIMES

STEP 15

set circular saw on 16mm
and use to cut the roof








draw a cutting line

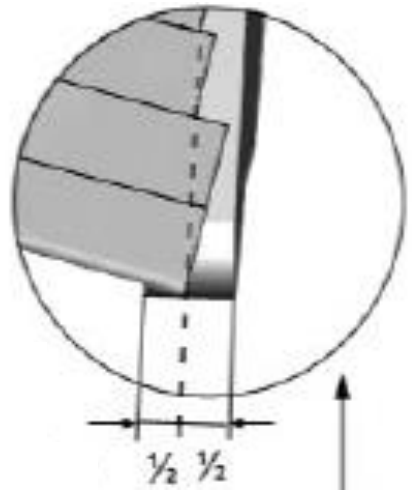


STEP 16

**PREPARE TILED
ELEMENTS FOR
ROOF**

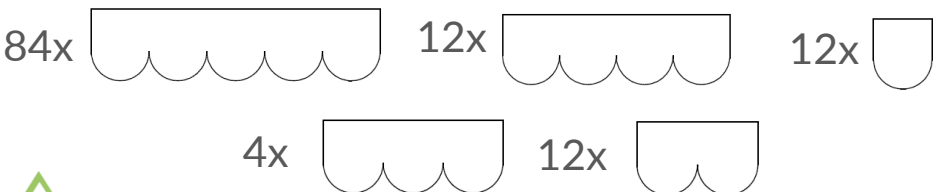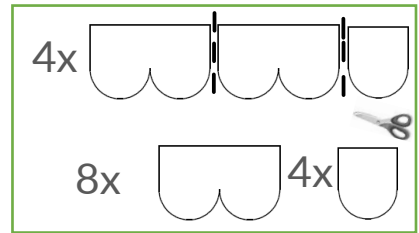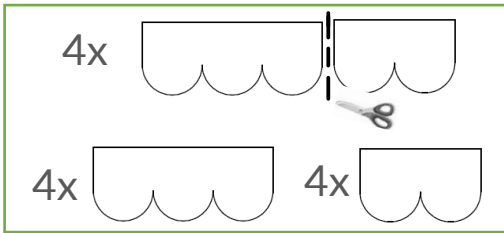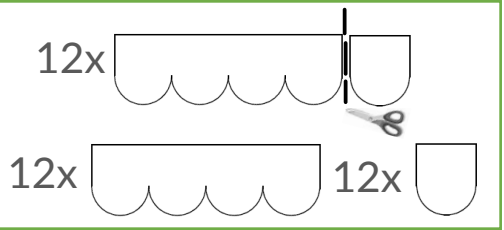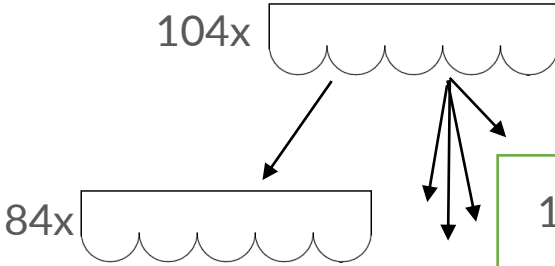

STEP 17



FIRST ELEMENT MONTAGE OPPOSITE AND DRAW AXIS IN THE MIDDLE

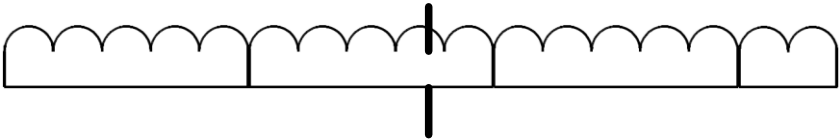


AXIS WILL HELP IN MONTAGE OF
TILL ELEMENTS
DRAW AXIS ON EACH NEXT ELEMENT

STEP 18

MONTAGE FROM 1 TO 13

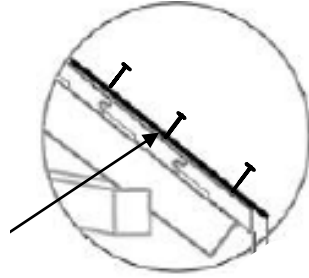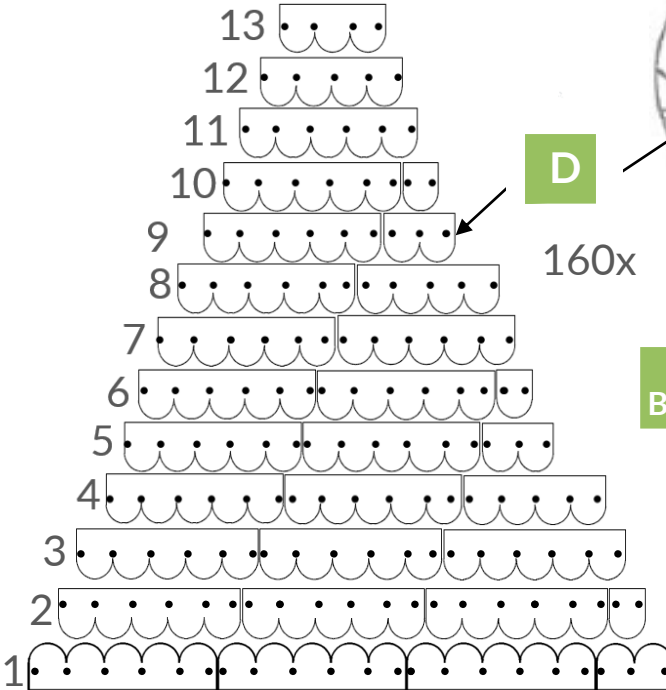


**REMOVE FOIL
BEFORE INSTALLATION**

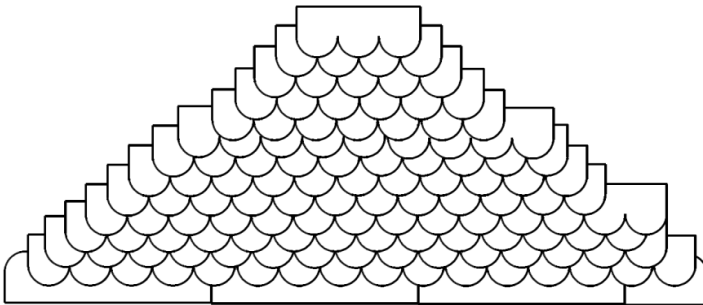

REPEAT STEP - 4 TIMES


STEP 19

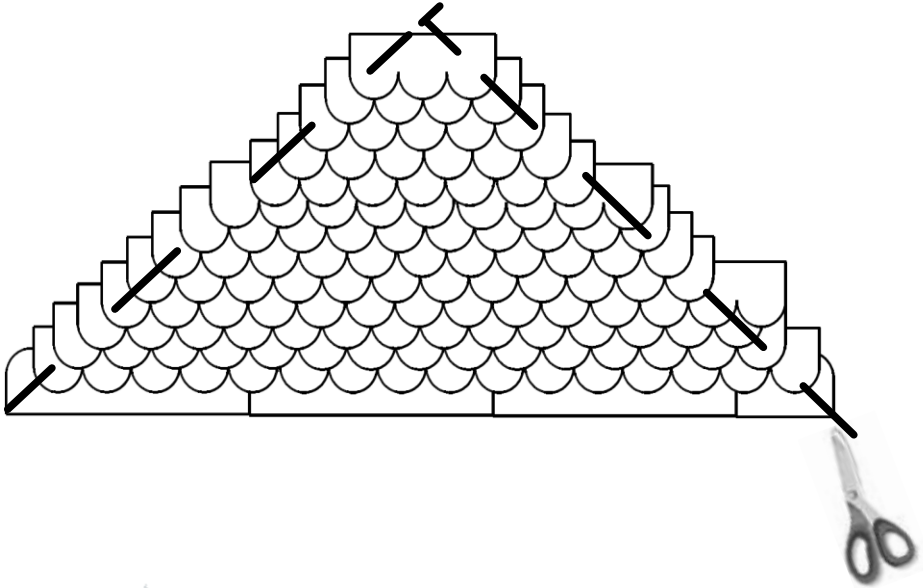

**CUT THE SCHINGLES TO
THE SHAPE OF THE ROOF
(ALONG THE JOINING
LINES OF THE SEGMENTS)**

REPEAT STEP - 4 TIMES

STEP 20

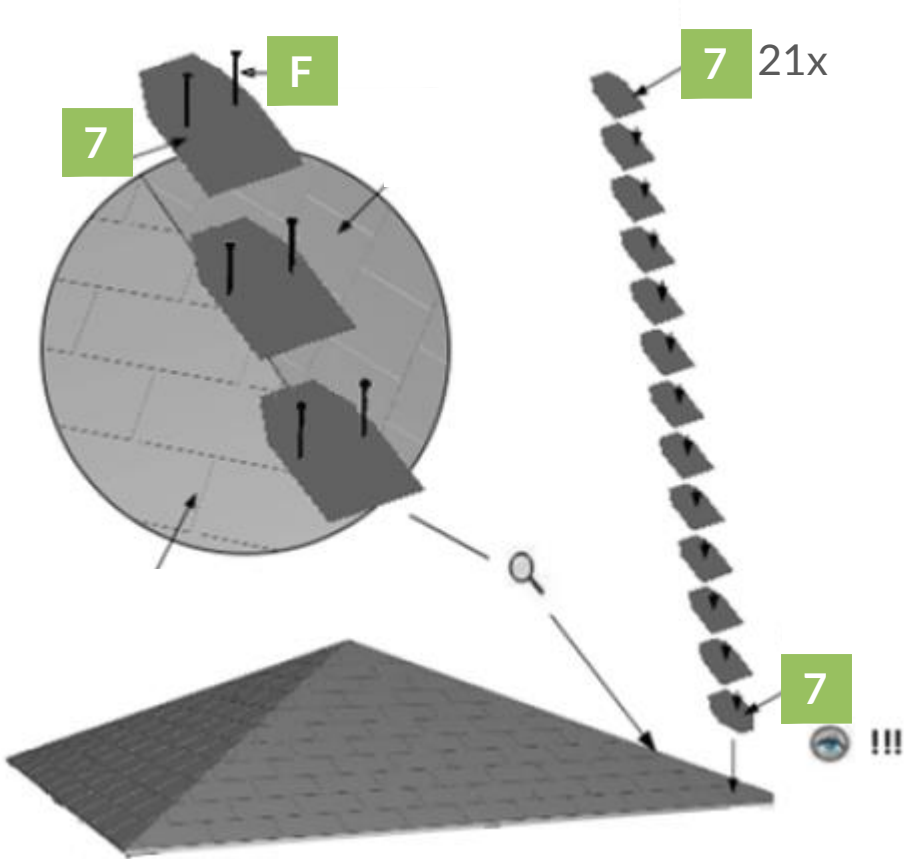

STEP 21

