


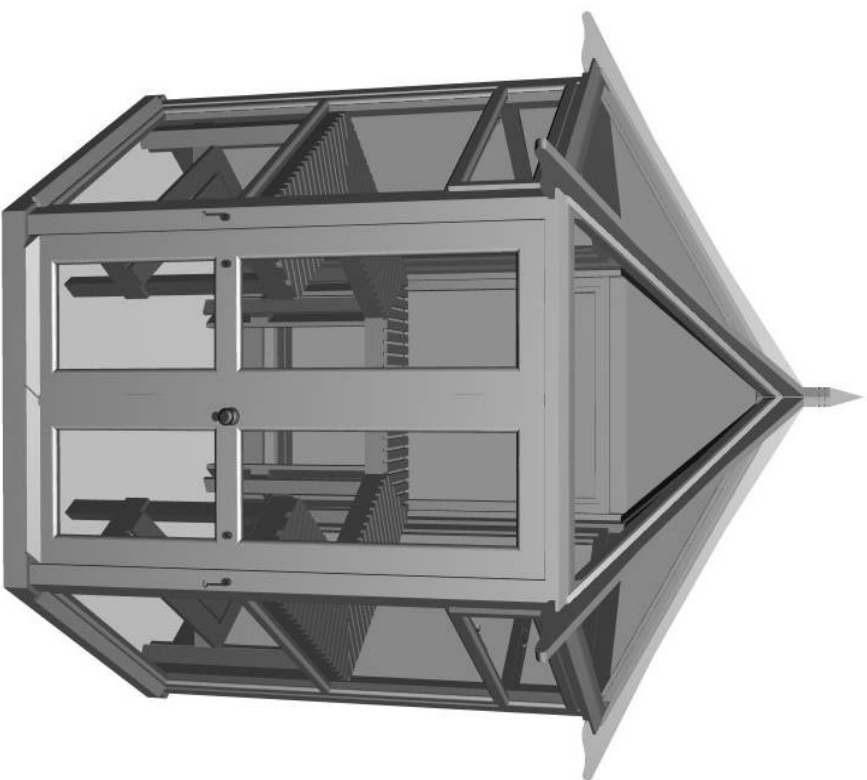

Victorian Greenhouse

PRODUCT 042311

2x



PART: 1


6 pcs



POST

PART: 2


6 pcs

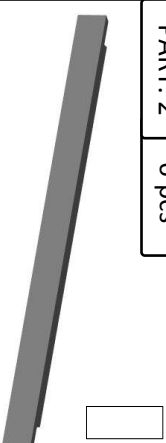

BOTTOM RING BEAM

PART: 3

6 pcs

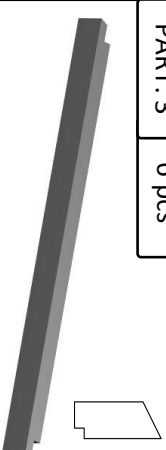

TOP RING BEAM

PART: 4

6 pcs



ROOF RAFTER

PART: 5


5 pcs



SASH PANEL

PART: 6


1 pc

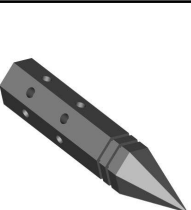

ROOF FINAL

PART: 7


1 pc

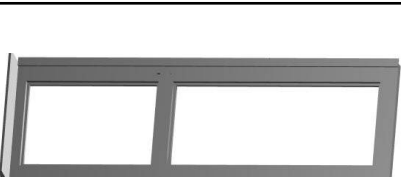

DOOR (RIGHT)

PART: 8

1 pc

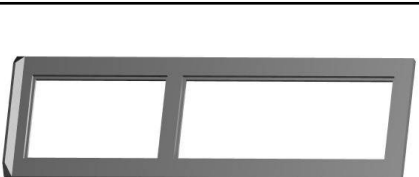

DOOR (LEFT)

PART: 9	1 pc
---------	------

BOTTOM DOOR STOP

PART: 11	1 pc
----------	------

TOP DOOR STOP

PART: 12	6 pcs
----------	-------

CILL

PART: 14	5 pcs
----------	-------

STAGING LEGS (RIGHT)

PART: 15	5 pcs
----------	-------

STAGING LEGS (LEFT)

PART: 10	5 pcs
----------	-------

OPEN SASH FRAME

PART: 13	5 pcs
----------	-------

STAGING TOP

PART: 16	5 pcs
----------	-------

LEGS STRETCHER

PART: 17	5 pcs
----------	-------

LEGS STRETCHER (SHORT)

PART: 18	19 pcs	GLASS
----------	--------	--------------

25 x 95cm	A	5x
36 x 62cm	B	2x
36 x 97cm	C	2x
72 x 100cm	D	10x

PART: 19	6 pcs	ROOF GLASS
----------	-------	-------------------

118 x 122cm

PART: 20	76 pcs
----------	--------

QUADRANT BEAD

25 cm	A	10x	97 cm	E	4x
95 cm	B	10x	72 cm	F	20x
36 cm	C	8x	100 cm	G	20x
62cm	D	4x			

PART: 21	10 pcs	183 cm
----------	--------	--------

QUADRANT BEAD

PART: 22	12 pcs	LEFT	A	6x
		RIGHT	B	6x

ROOF BEAD

PART: 23	1 pc
----------	------

DOOR KNOB

PART: 24	1 pc
----------	------

ESYRUCSION

PART: 26	10 pcs
----------	--------

WINDOW PEG

PART: 25	5 pcs
----------	-------

WINDOW STAY

PART: 28	2 pcs
----------	-------

EYE

PART: 27	2 pcs
----------	-------

HOOK


PART: 29
2 pcs



PART: 30
2 pcs




PART: 31
12 pcs



PART: 32
1 pcs



PART: 33
6 pcs

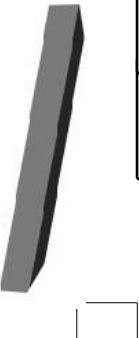

EXPLANATION


VIEW

MEASURE

ZOOM

DRAW

PART	JOIN COMPONENTS	PIECE
A	4,5 x 80 mm 	45 pcs
B	4,0 x 50 mm 	80 pcs
C	4,5 x 60 mm 	52 pcs
D	4,0 x 25 mm 	48 pcs
E	5,0 x 60 mm 	60 pcs
F	3,0 x 20 mm 	12 pcs
G	1,2 x 25 mm 	342 pcs
H	2,5 x 35 mm 	96 pcs
	SILICONE	5 pcs

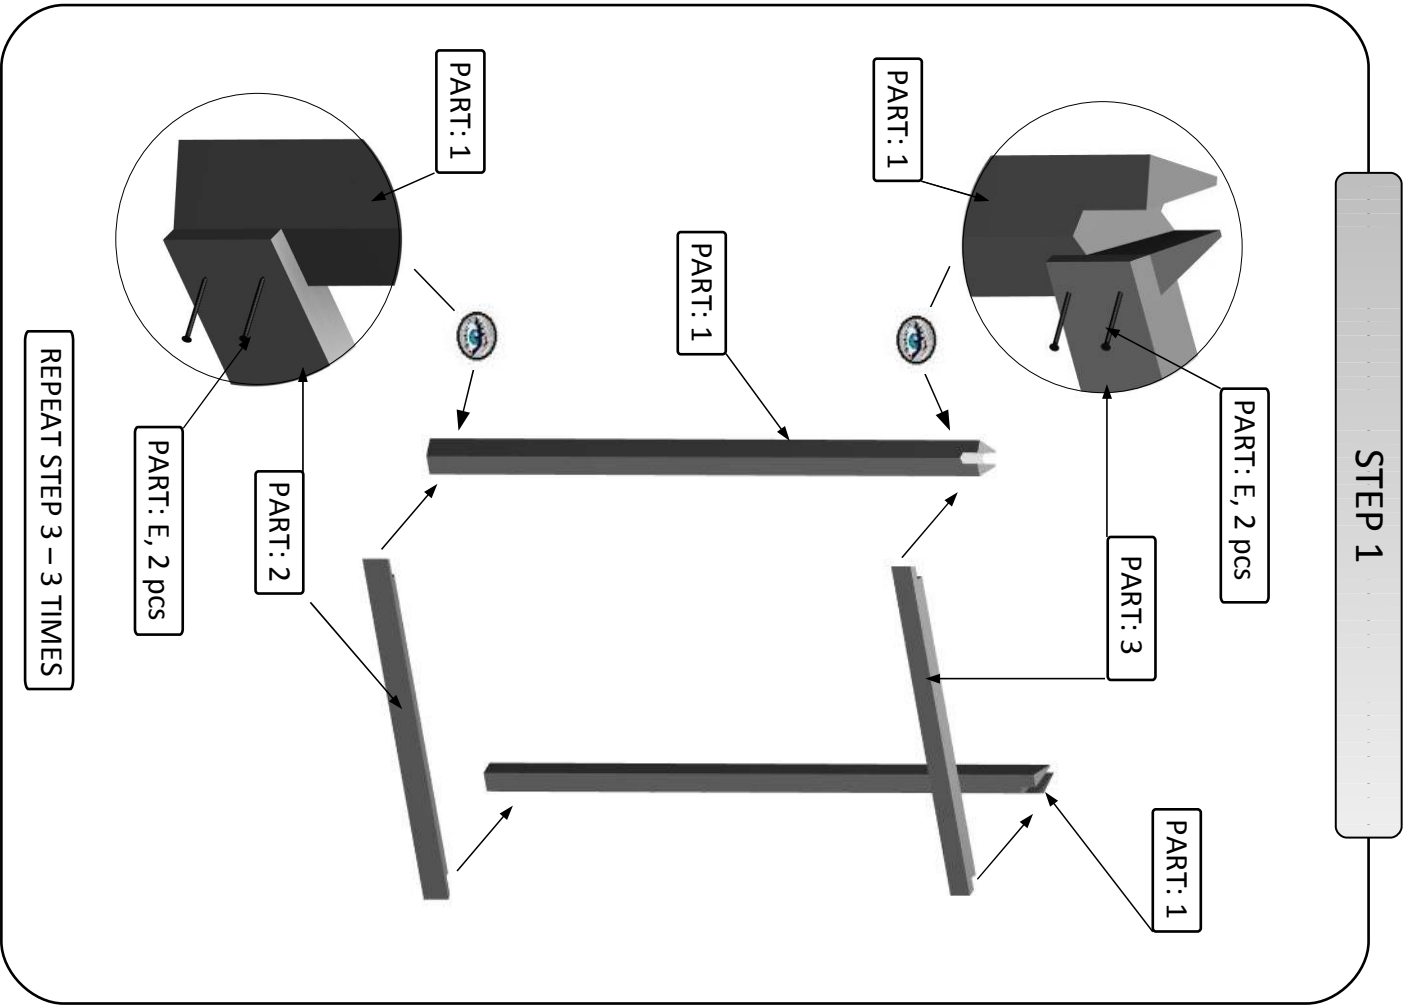

STEP 2

SEGMENTS CREATED IN STEP 1

LIKE IN STEP 1

PART: 3

PART: 2

GROUND MUST BE FLAT

REPEAT STEP 2 – 3 TIMES

STEP 3

PART: 1

PART: 1

PART: 3

PART: 10

PART: C, 8 pcs


PART: 1

PART: C


PART: 10

REPEAT STEP 3 – 5 TIMES

STEP 4

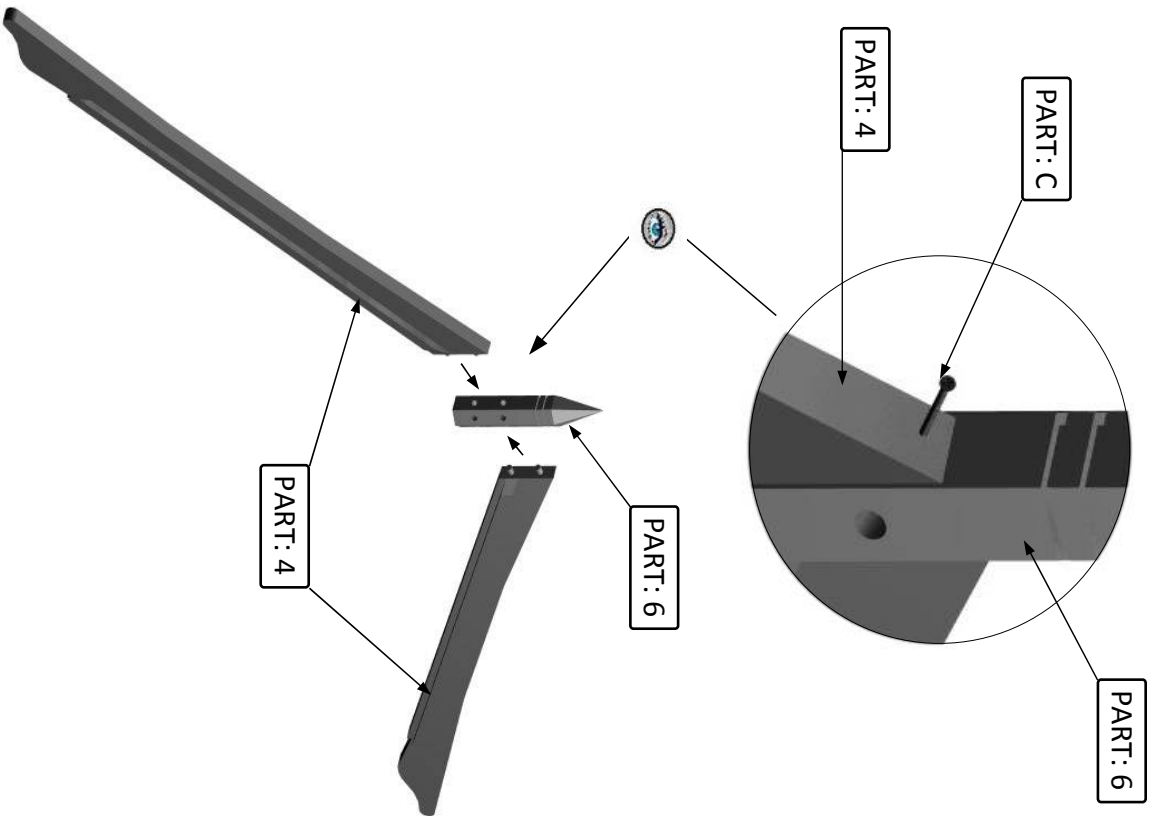


STEP 5

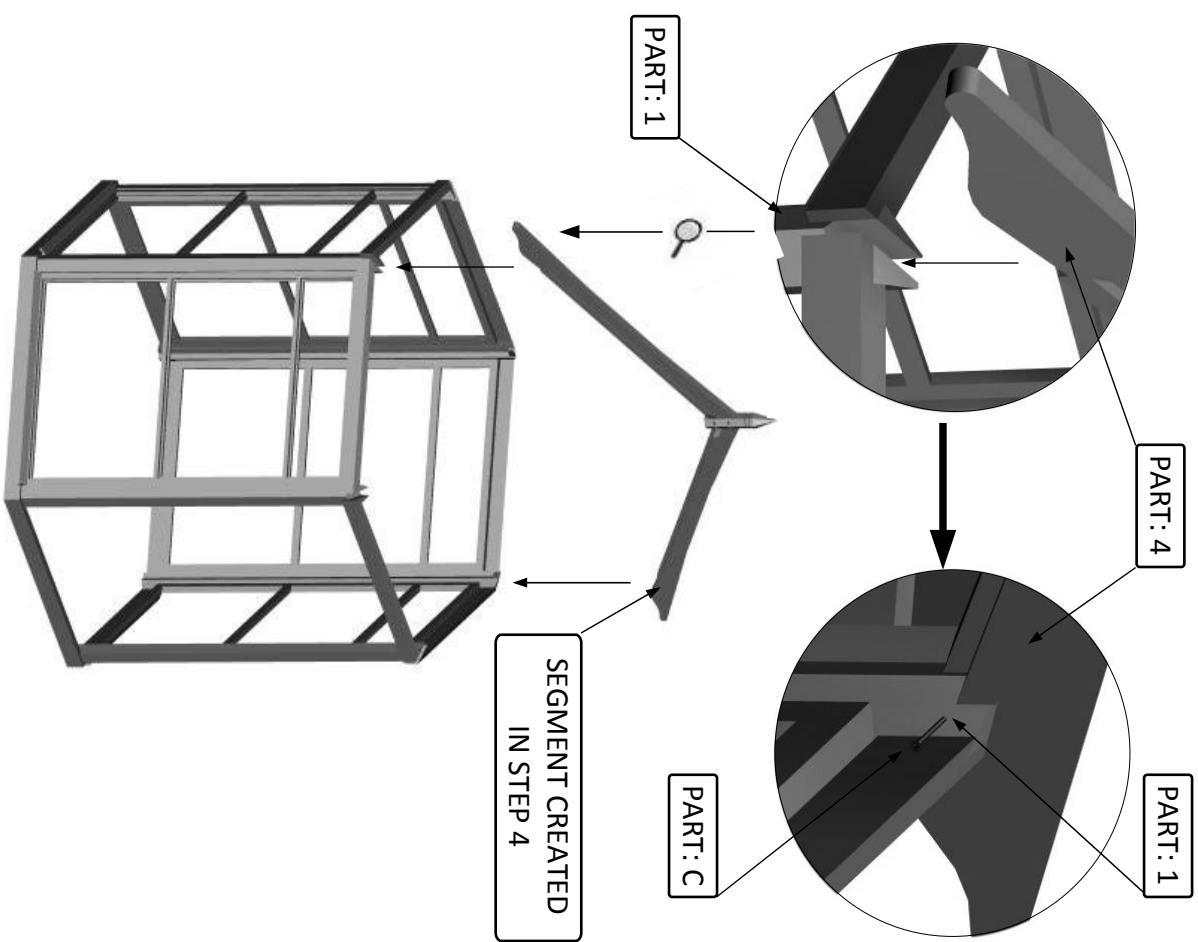


STEP 6


Screw PART: 33 in all corners

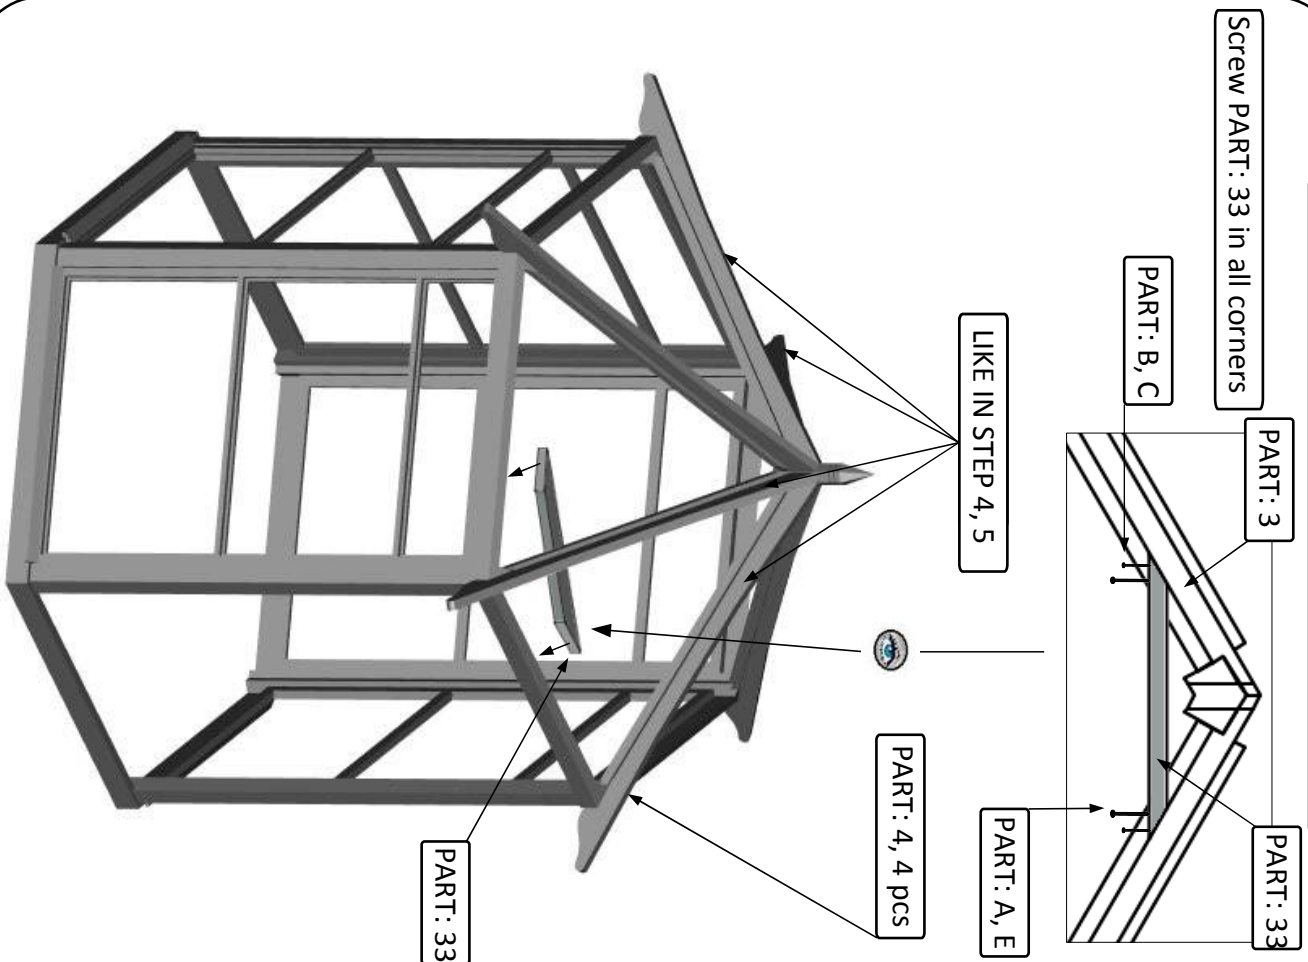


STEP 7

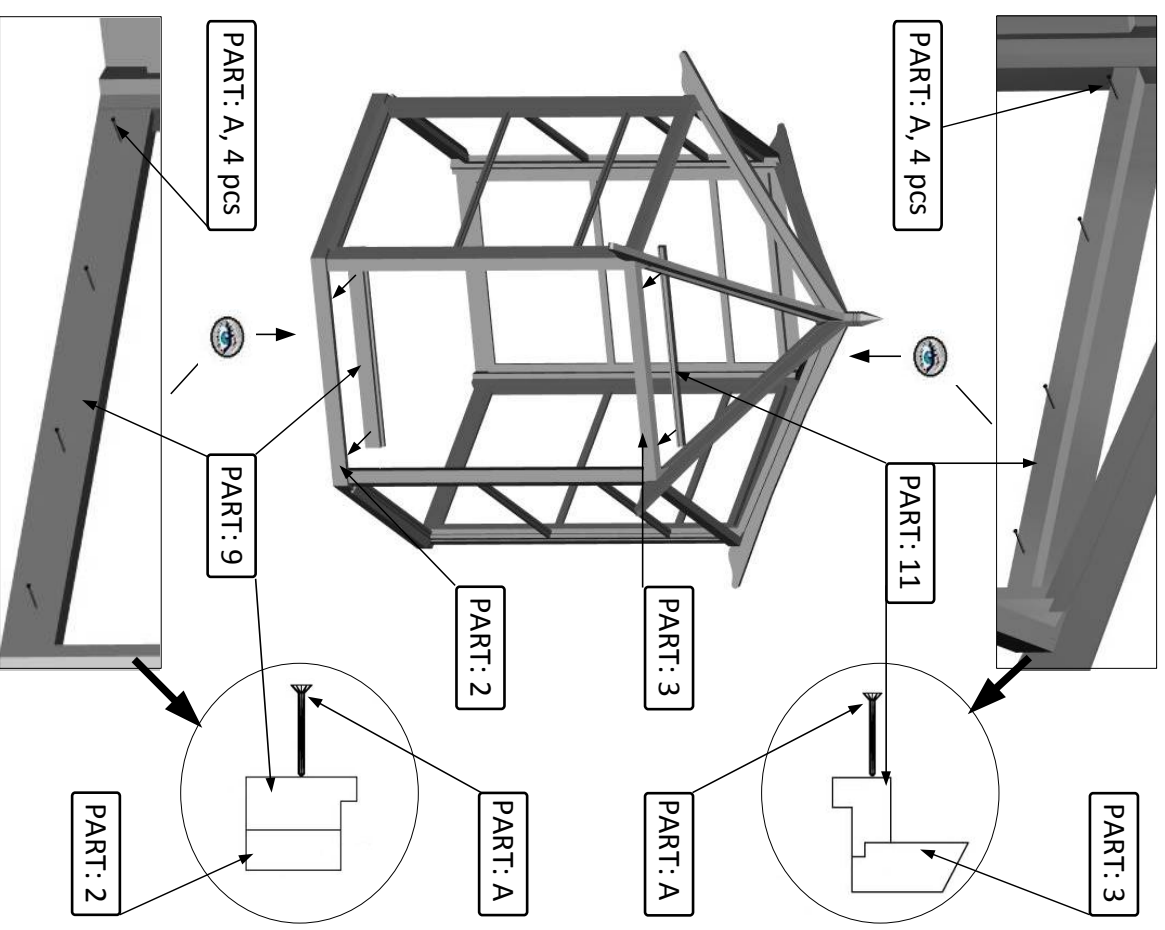

STEP 8

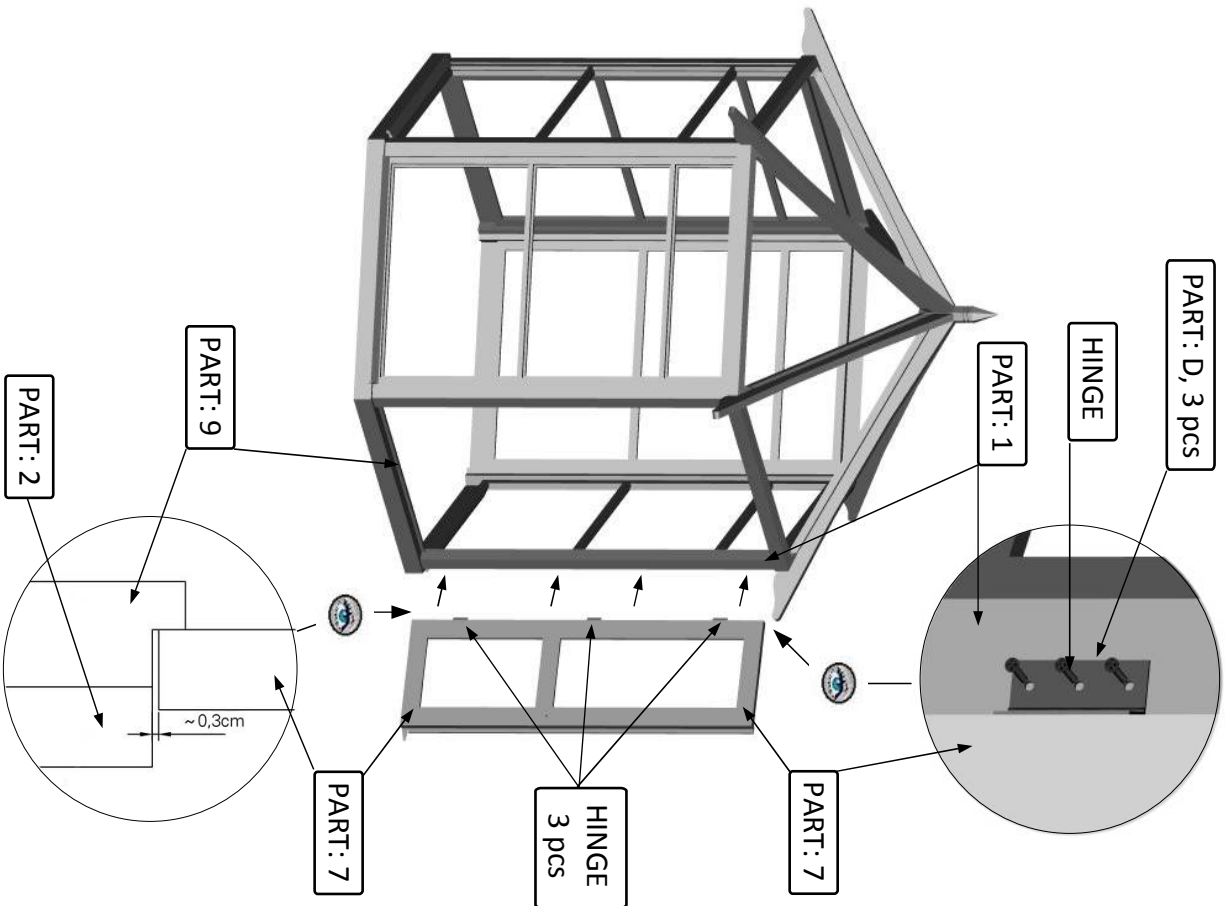


STEP 9

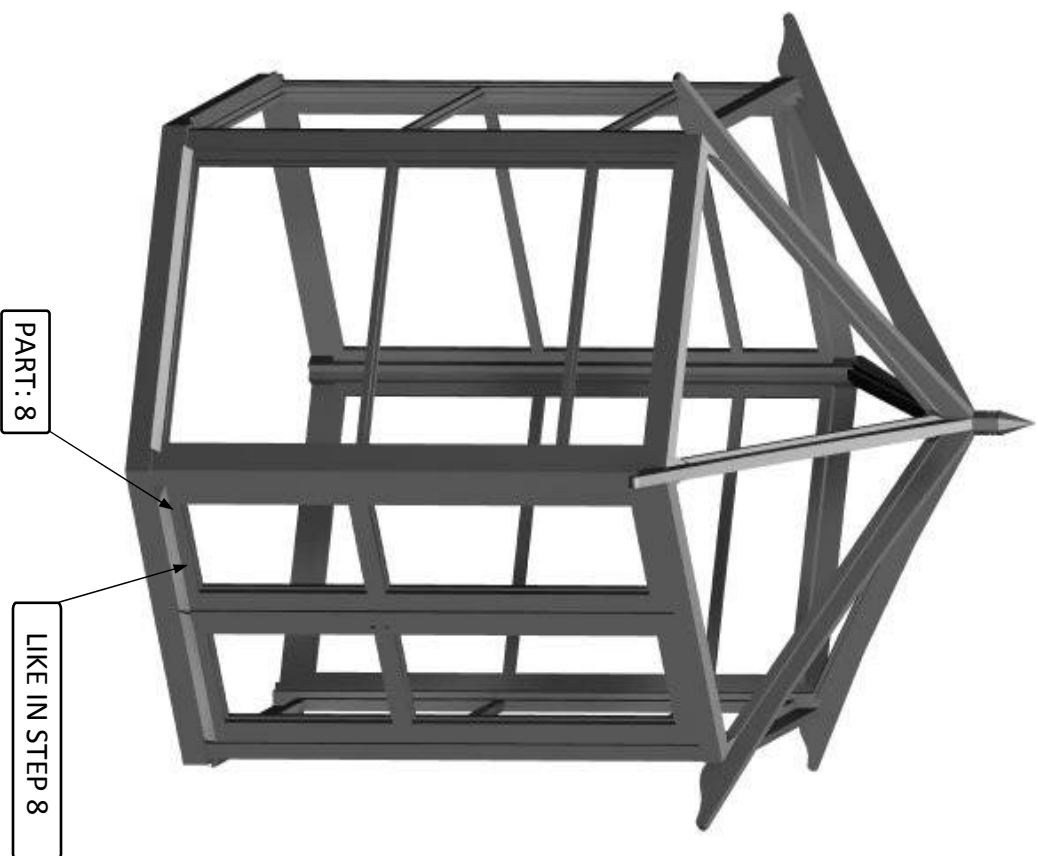


STEP 10

INSTALL WINDOW (PART: 5) LIKE AS DOOR IN STEP 8
HINGES IN WINDOW HAVE TO BE AT THE TOP

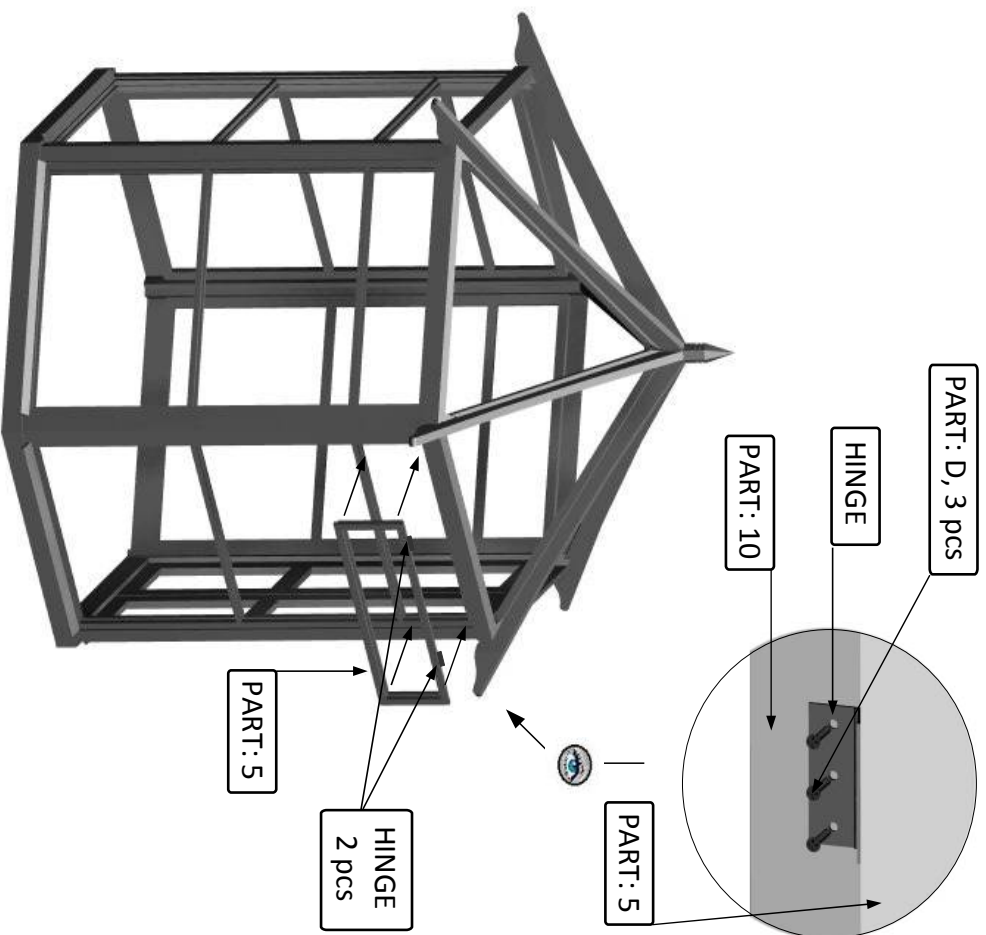


REPEAT STEP 10 – 5 TIMES

STEP 11

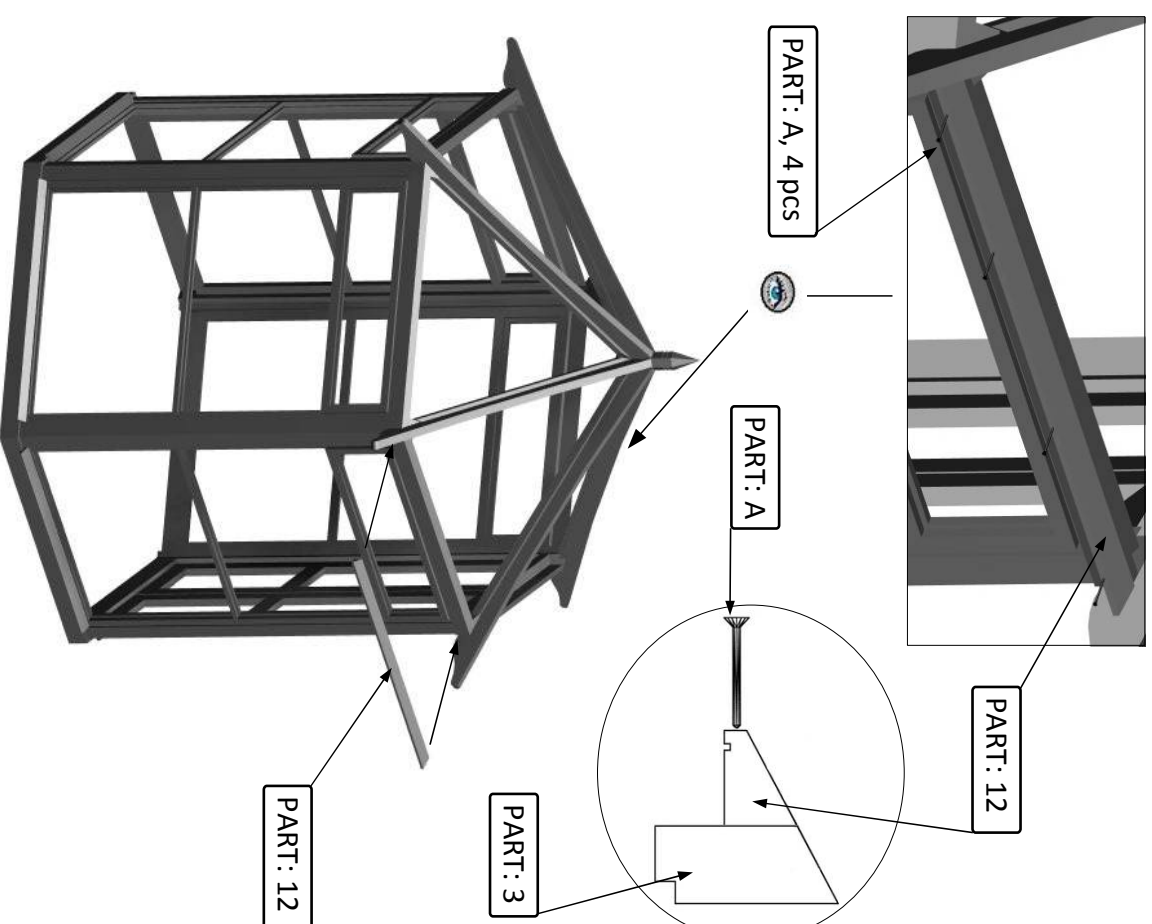


REPEAT STEP 11 – 6 TIMES

STEP 12

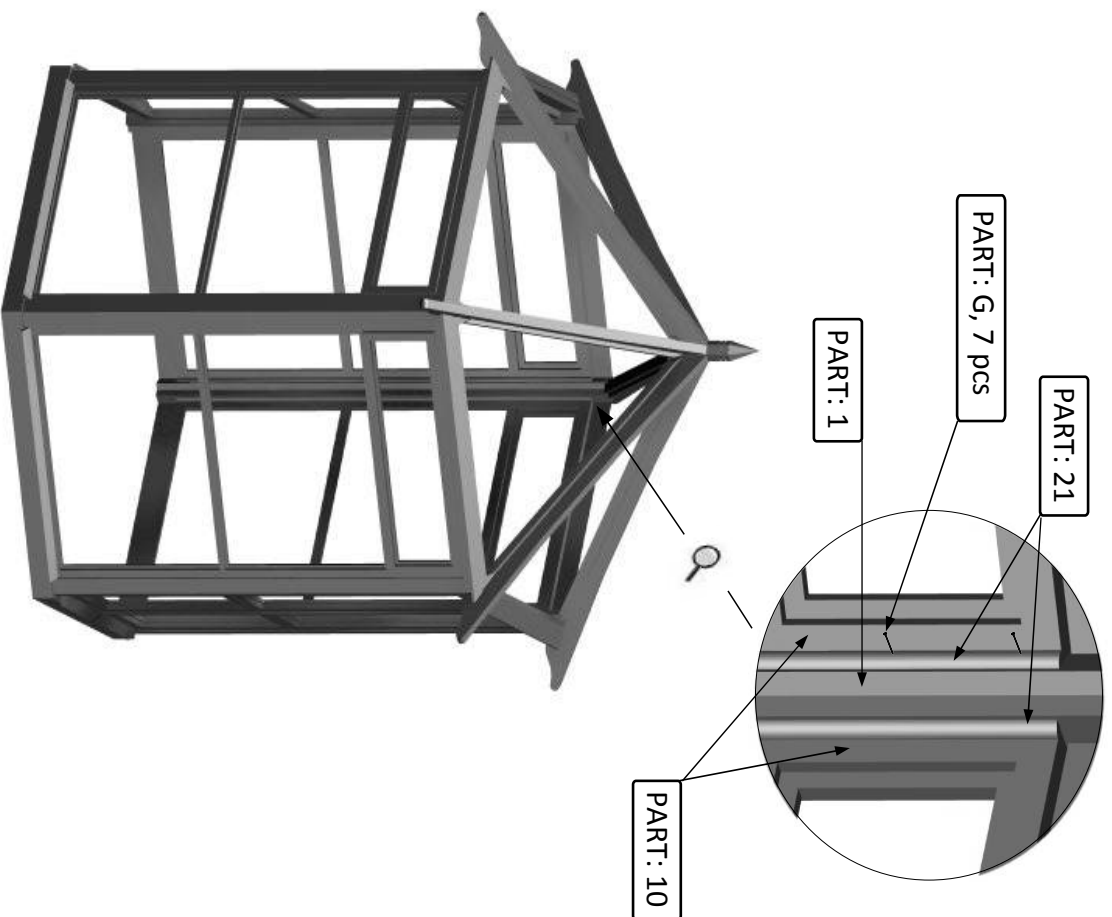

FOR ASSEMBLE PART: 21 IN THE CORNER FROM BOTH SIDES OF COLUMNS (PART: 1) USE NAILS PART: G (7 pcs TO PART: 21)


STEP 13

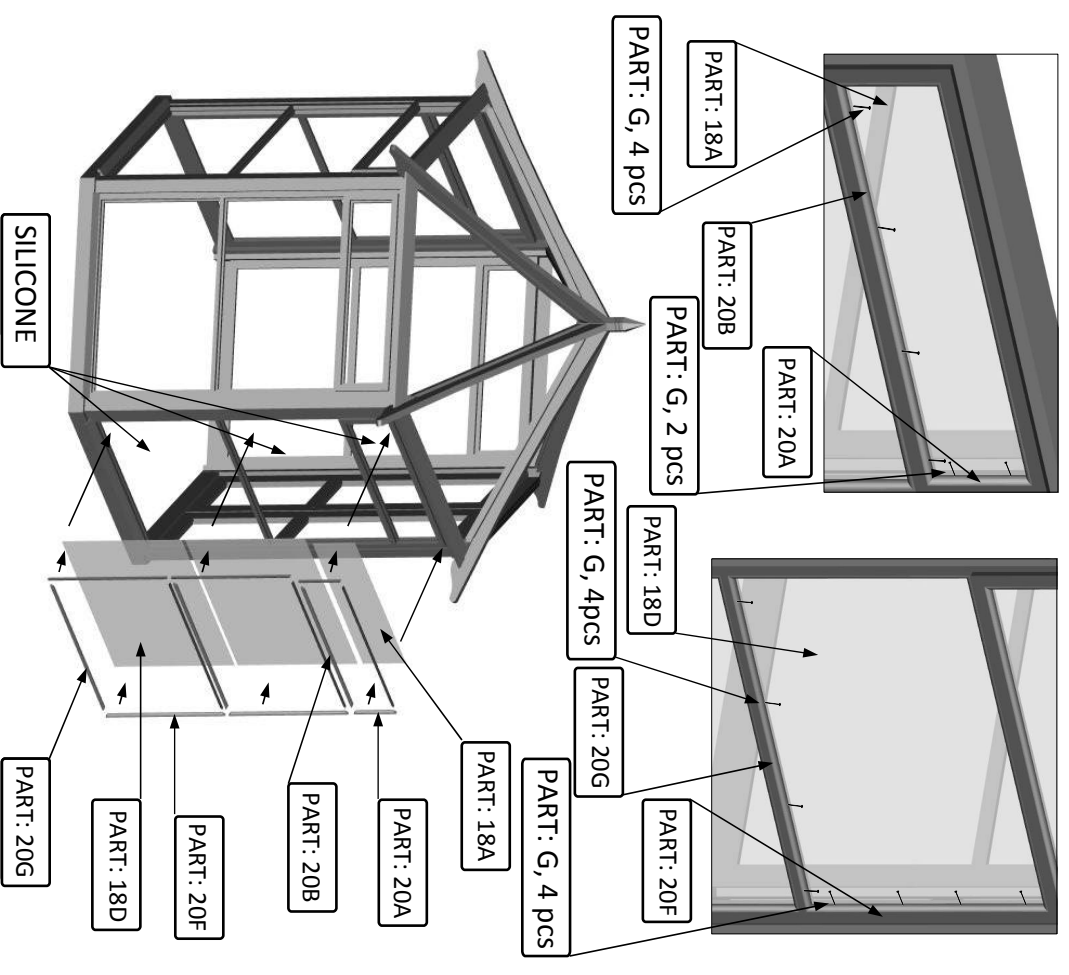


FIRST PUT THE SILICONE ON THE EDGES, THEN ASSEMBLE THE GLASS (PART: 18), USE NAILS PART: G TO ASSEMBLE QUADRANT BEAD (PART: 20)

REPEAT STEP 13 – 5 TIMES

STEP 14

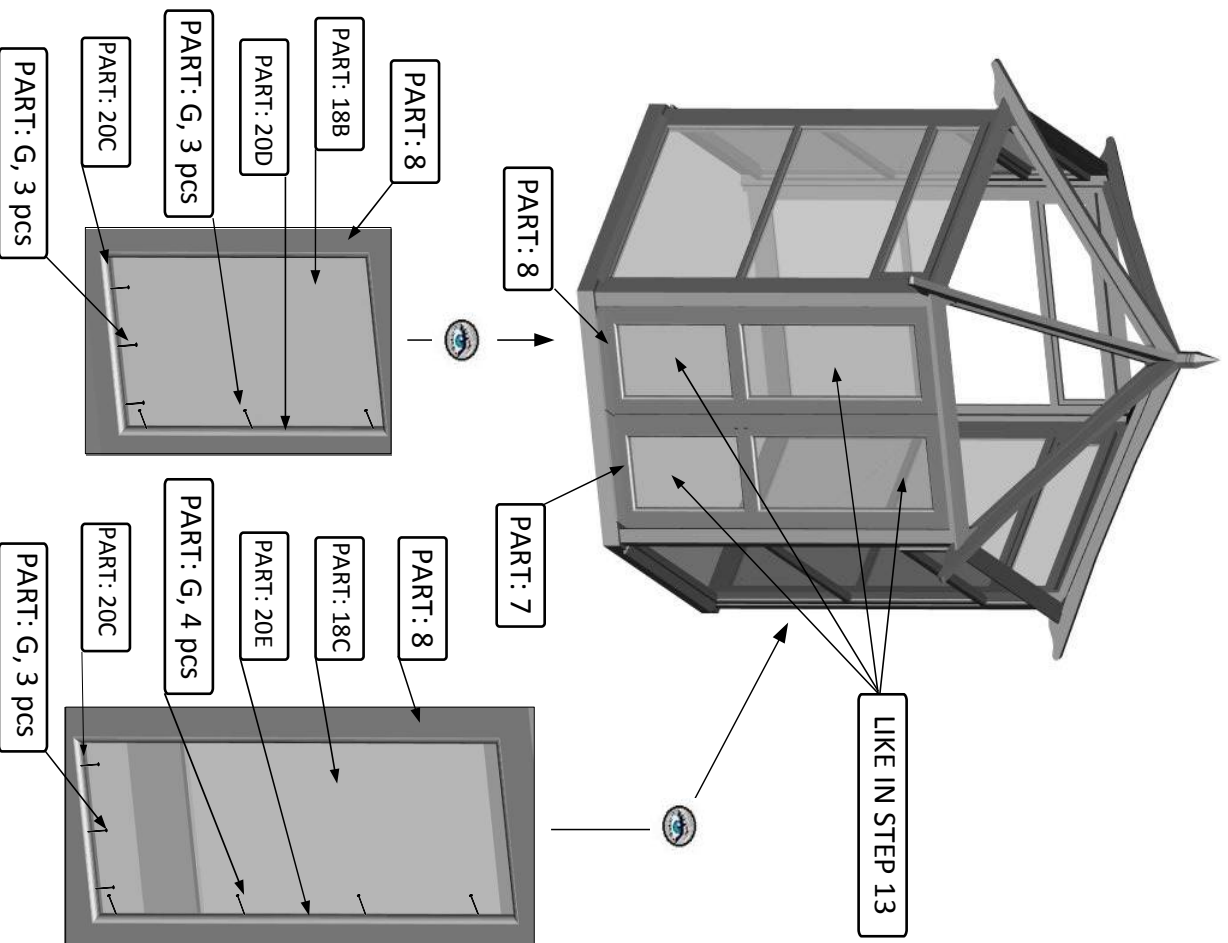


STEP 15

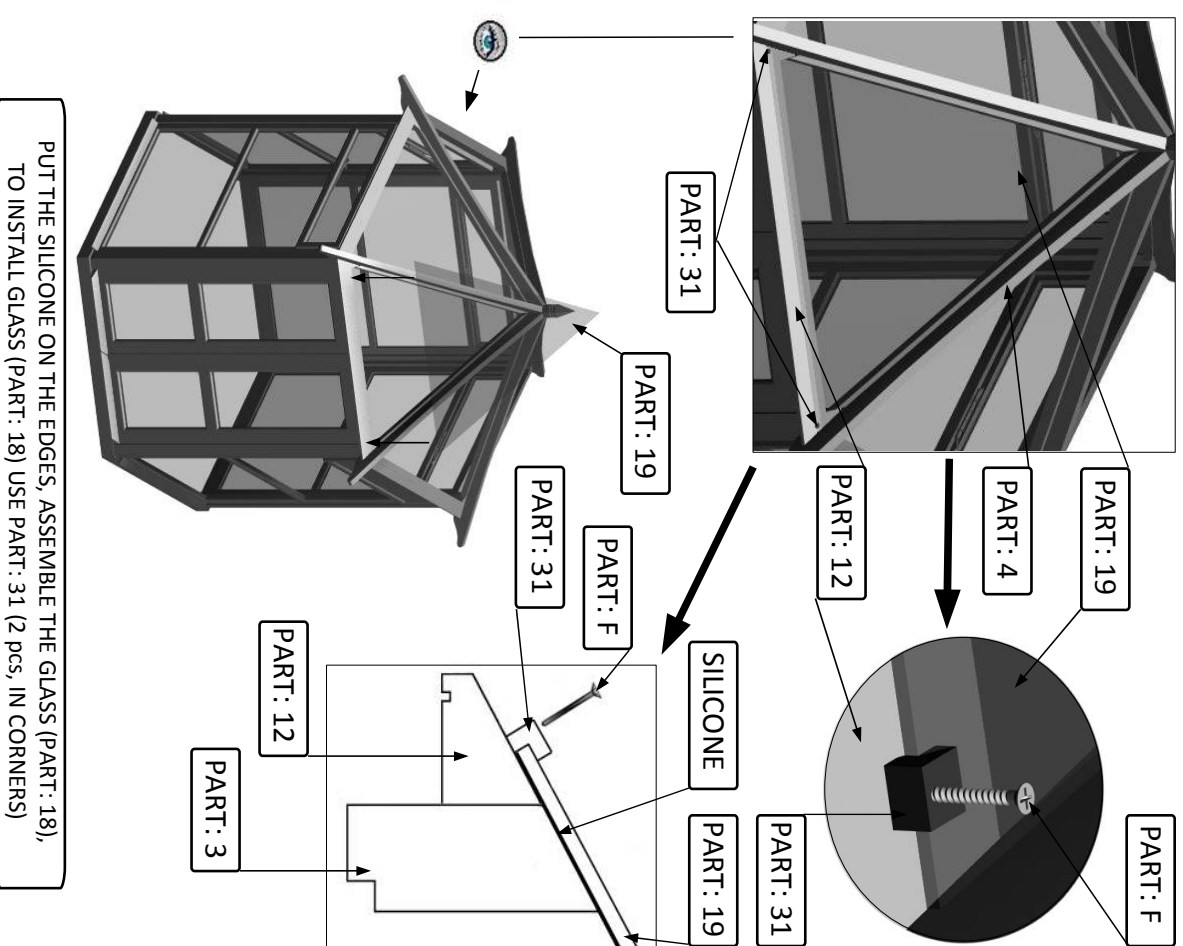

REPEAT STEP 15 – 6 TIMES


STEP 16

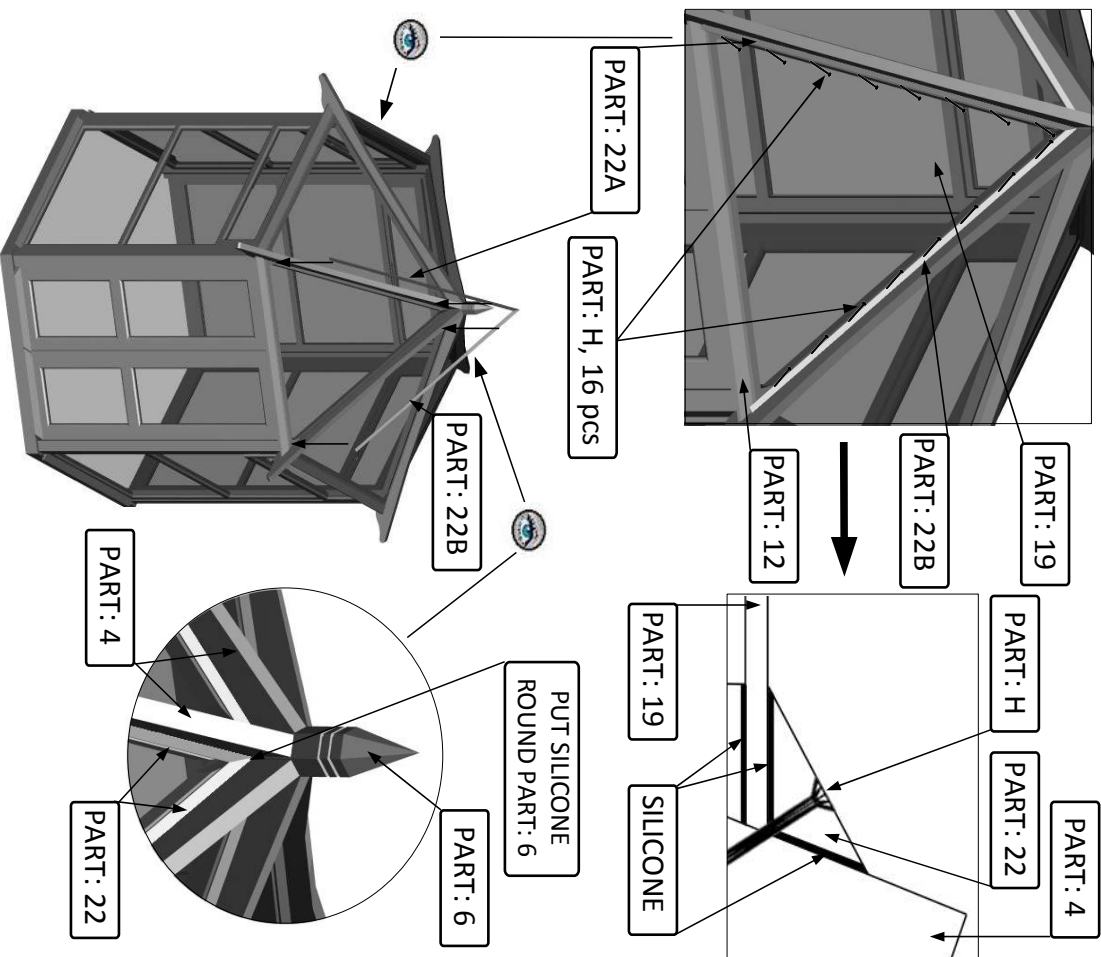


PUT THE SILICONE ALONG SING: 22
THEN USE NAILS PART H TO ASSEMBLE QUADRANT BEAD (PART: 22)

REPEAT STEP FOR ALL ROOF

STEP 17

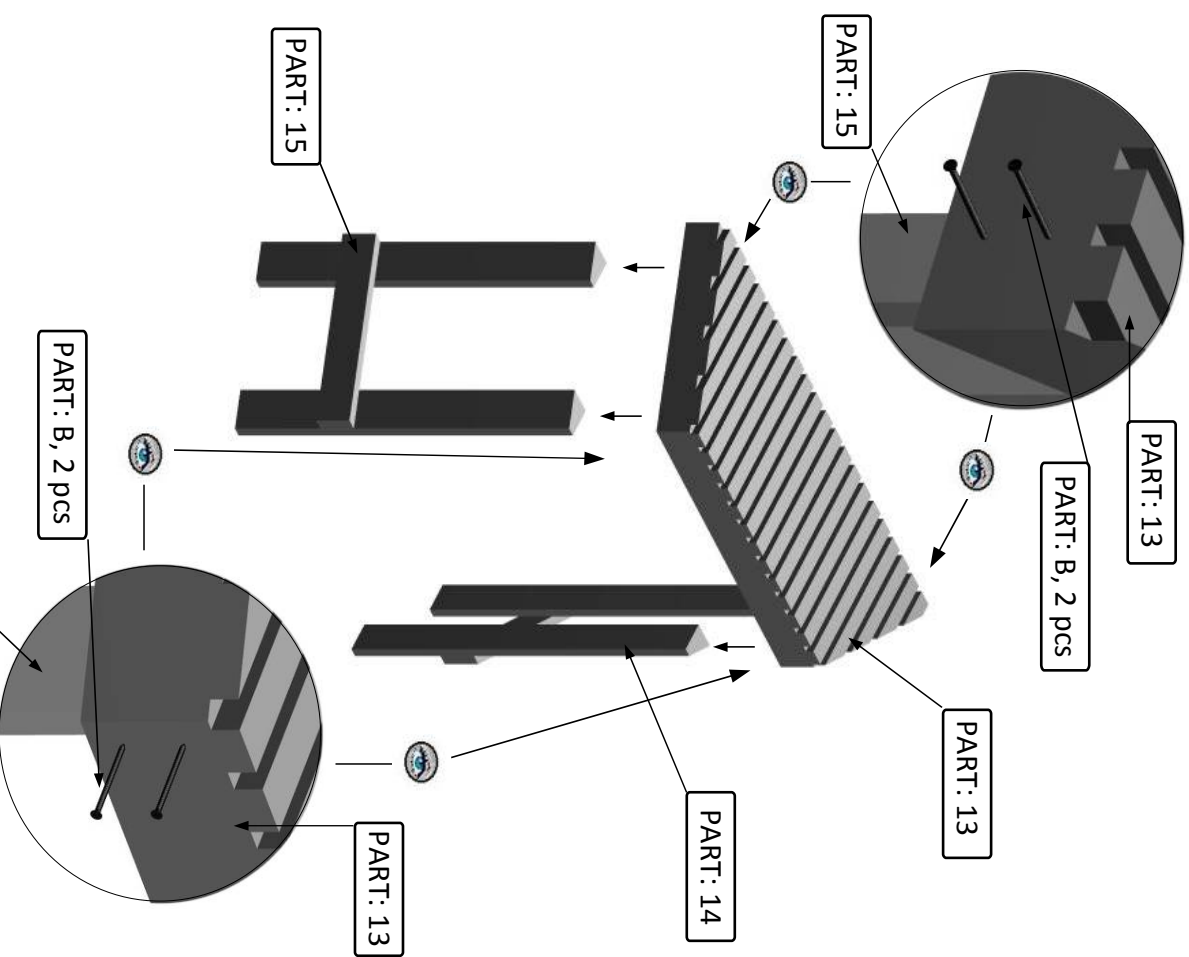


STEP 18

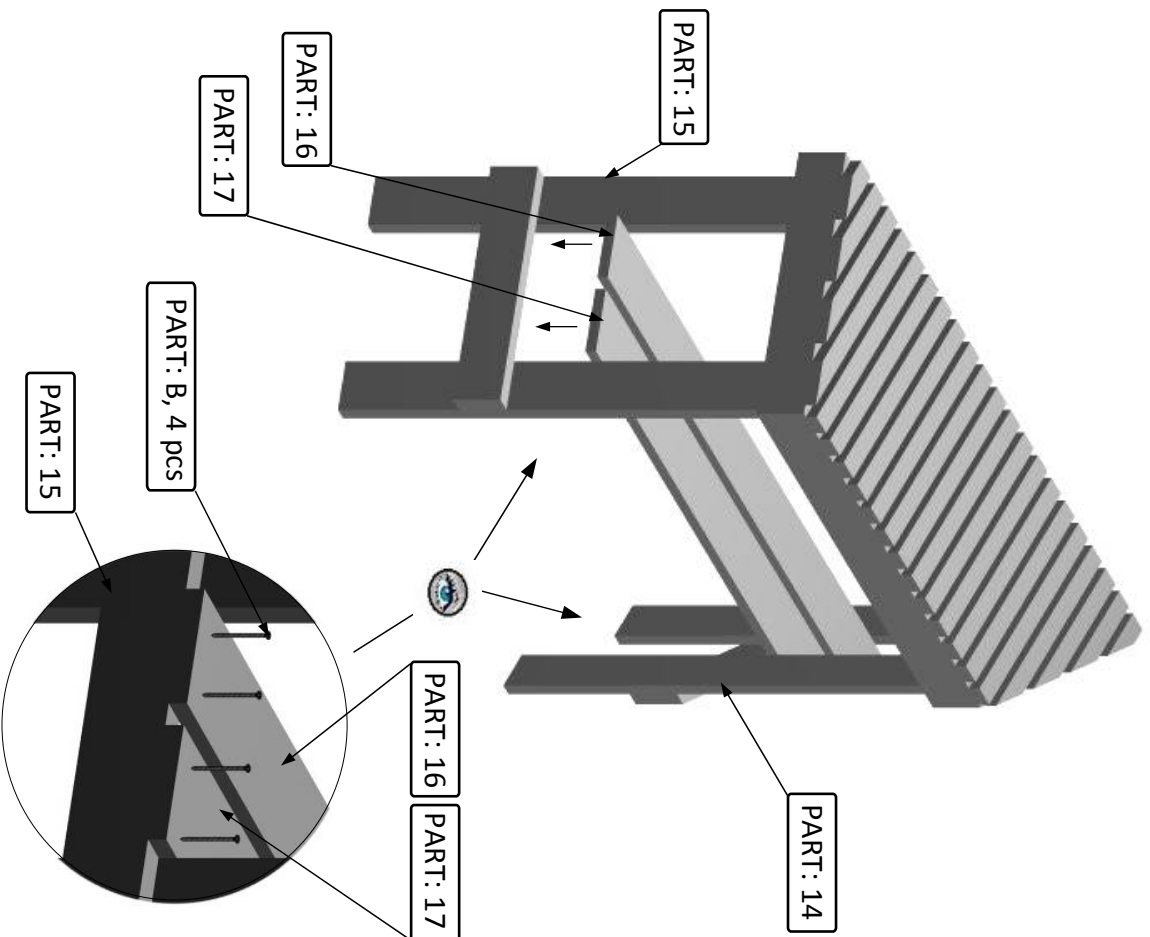

REPEAT STEP 17, 18 – 5 TIMES


STEP 19

PUT TABLES CREATED IN STEP 17, 18 INWARDS AS BELOW

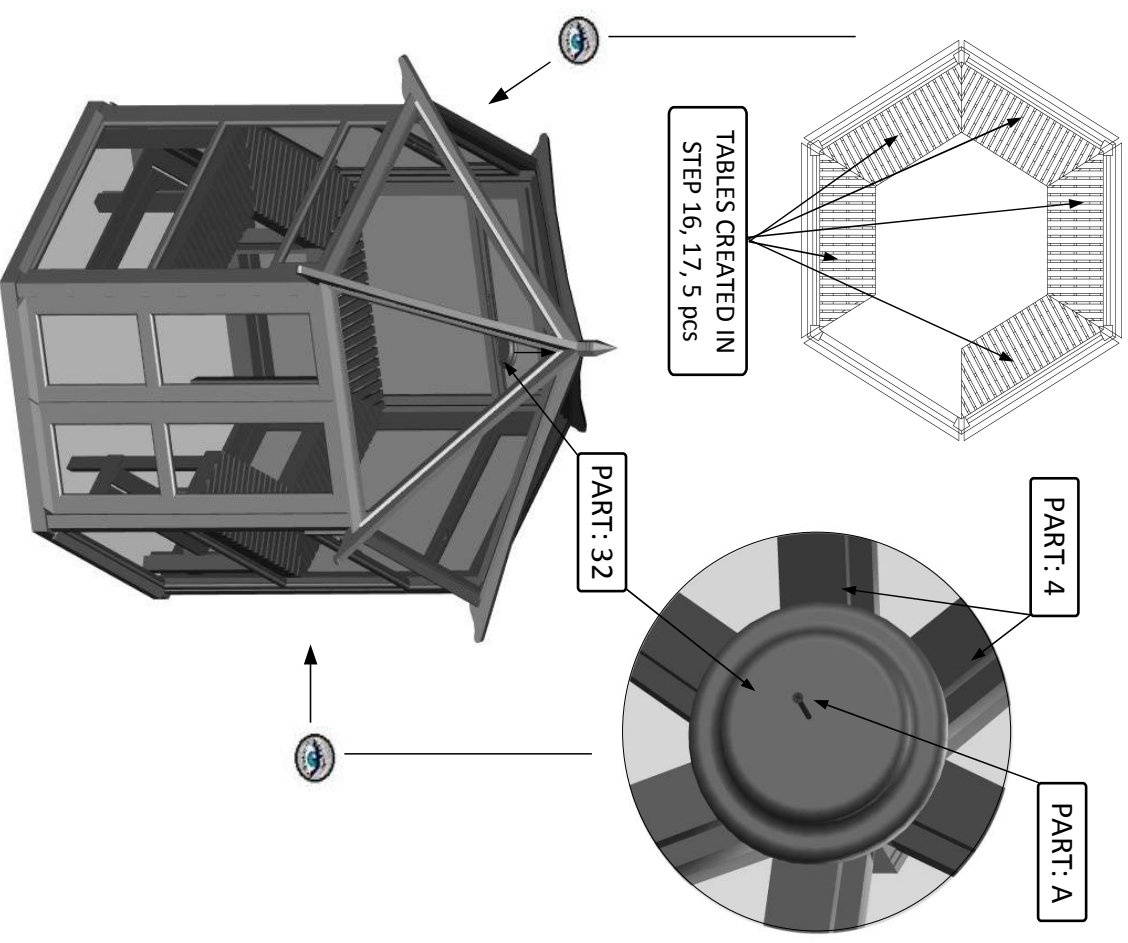


TABLES CREATED IN STEP 16, 17, 5 pcs

STEP 20

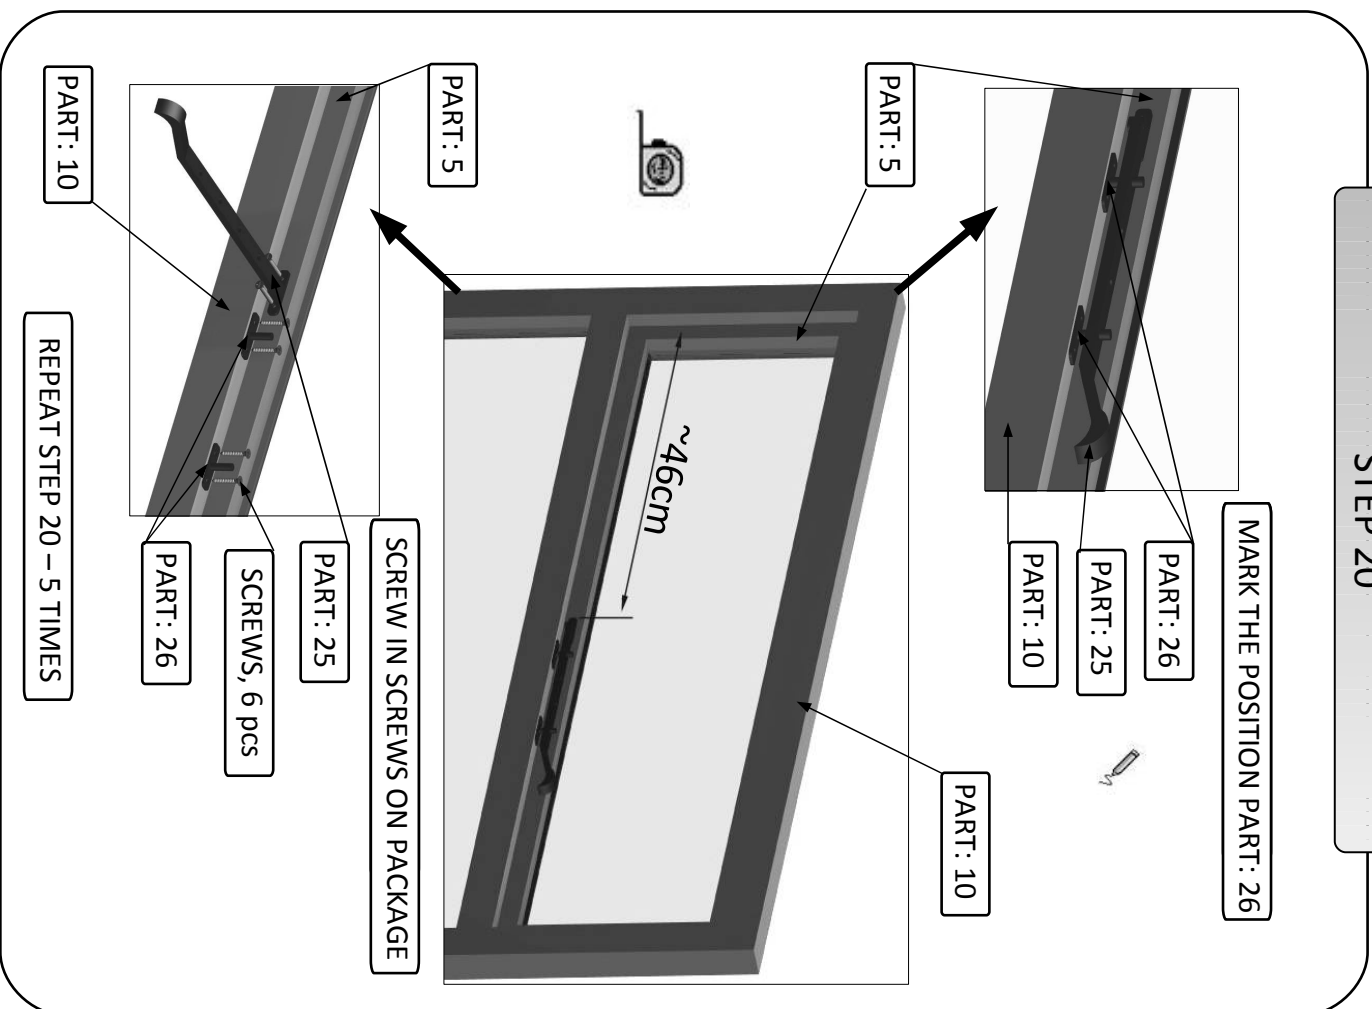


STEP 21

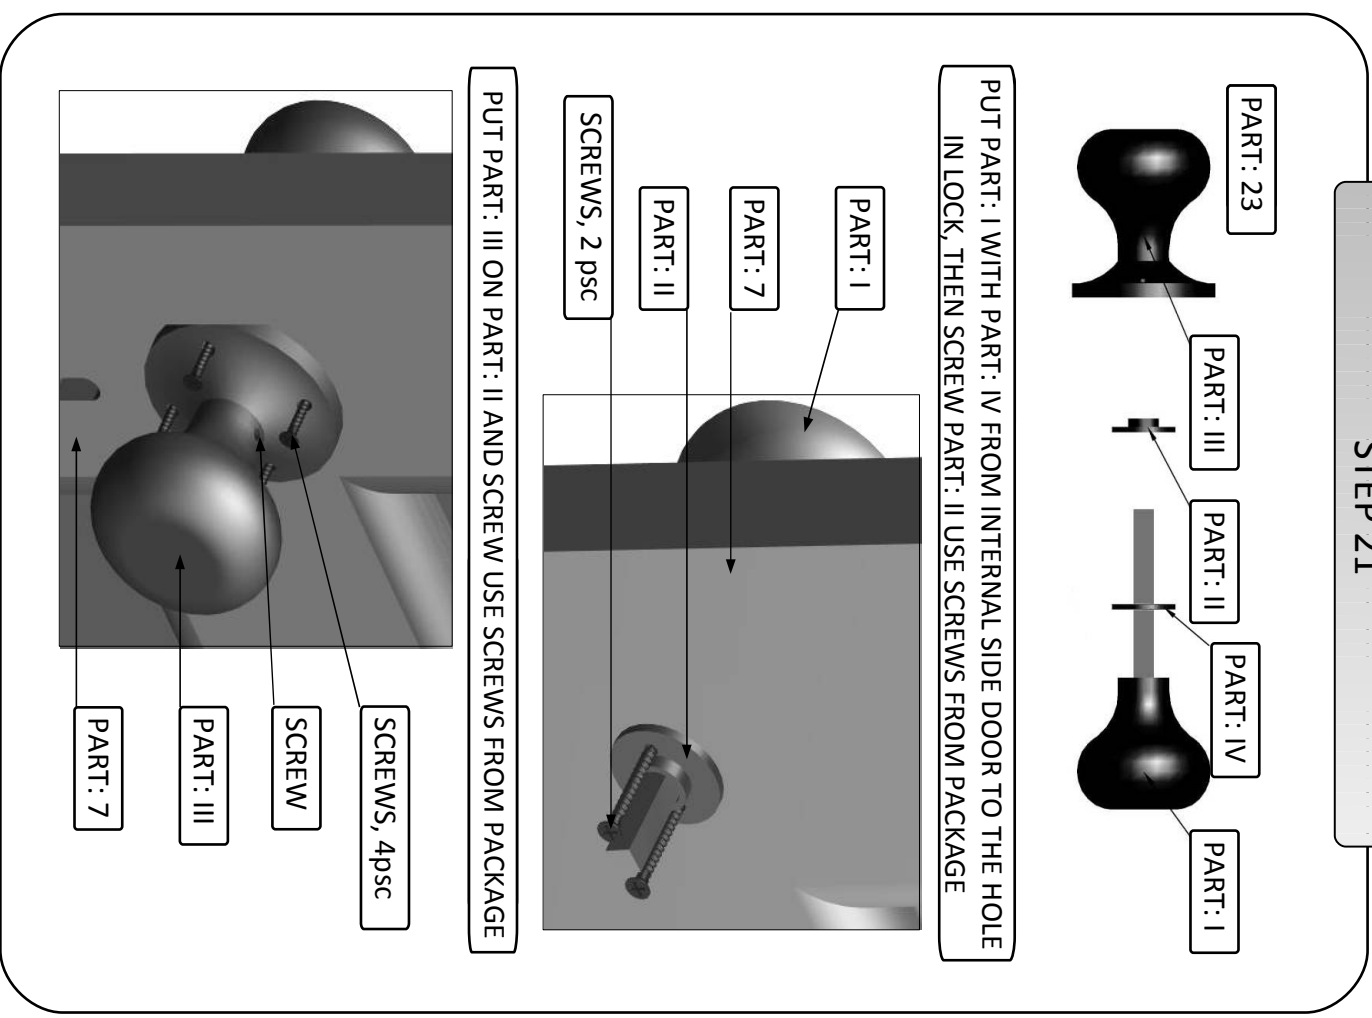


STEP 22

APPLY PART : 24 TO THE HOLE BELOW PART : 23
PUT THE KEY TO THE LOCK
AND PLACE PART : 24 SO THAT THE KEY BE IN THE MIDDLE
THEN SCREW USE SCREWS FROM PACKAGE

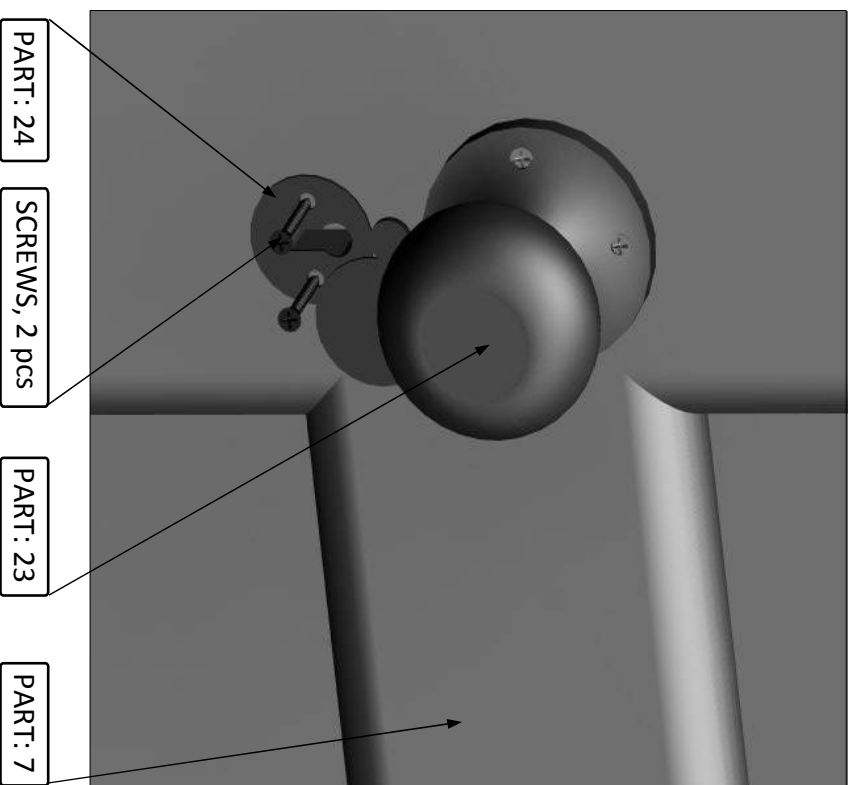

STEP 23

SCREW IN PART : 29 TO DOOR (PART : 8)
USE SCREWS FROM PACKAGE

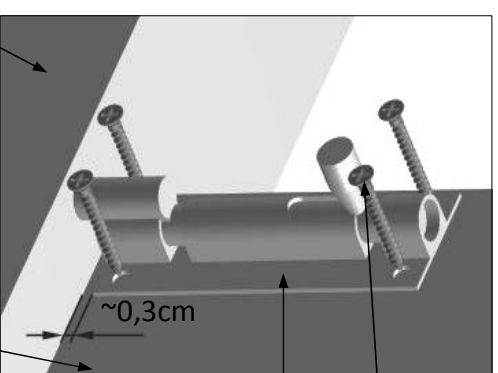

SCREWS, 4 pcs

PART : 29

PUT PART : 30 ON PART : 29 SO THAT THE HOLE
FIT ON THE PIN, THEN MARK POSITION




PART : 9

PART : 8

PART : 29

BORE HOLE USE DRILL DIAMETER 8
ON THE DEPTH 2cm THEN SCREW
USE SCREWS FROM PACKAGE

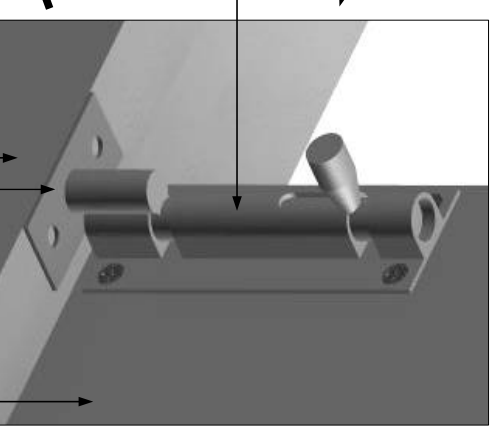

SCREWS, 2 pcs

PART : 9


PART : 30

PART : 8

DRILL

PART : 30

PART : 9

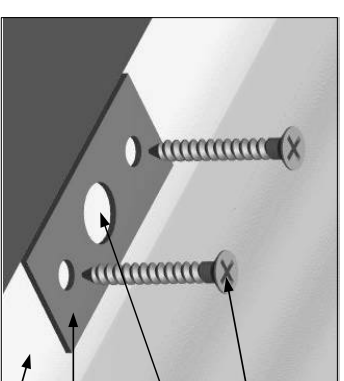

REPEAT STEP 22 AT THE TOP OF DOOR (PART : 8)


STEP 24

SCREW PART: 27 TO COLUMN (PART: 1)
USE SCREWS FROM PACKAGE

SCREWS, 2 pcs

PART: 27

PART: 1

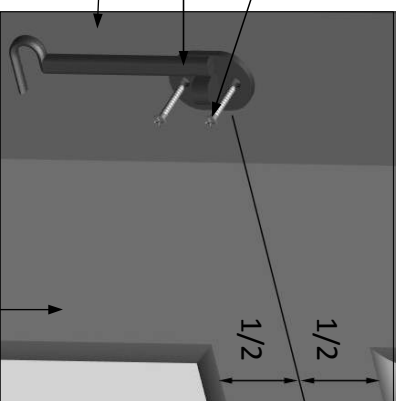

OPEN DOOR TO THE MOMENT WHERE
YOU WANT TO BLOCK IT
THEN APPLY PART: 28 AND MARK POSITION

PART: 8

PART: 8

PART: 28

SCREW IN PART: 28 USE
SCREWS FROM PACKAGE


PART: 1

PART: 27

SCREWS, 2 pcs

PART: 28

PART: 8

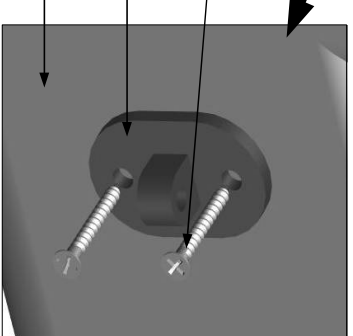

REPEAT STEP 24 AT THE SECOND SIDE OF DOOR

STEP 25

