



Victorian Summerhouse
PRODUCT C42231

2x



PART: 1

6 pcs



POST

PART: 2


6 pcs



BOTTOM RING BEAM

PART: 3

6 pcs



TOP RING BEAM

PART: 4


6 pcs



ROOF RAFTER

PART: 5


2 pcs

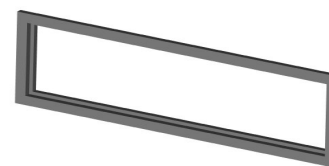

SASH PANEL

PART: 6

1 pc

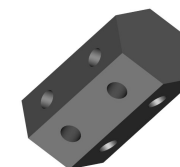

RAFTERS TIE

PART: 7


1 pc





















DOOR (RIGHT)




PART: 8

1 pc

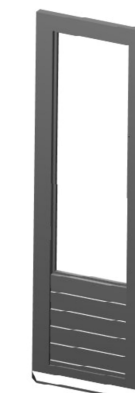

DOOR (LEFT)

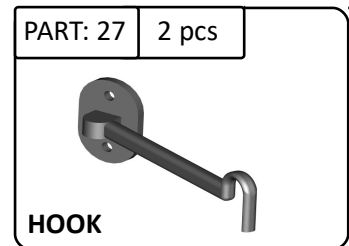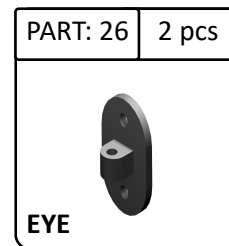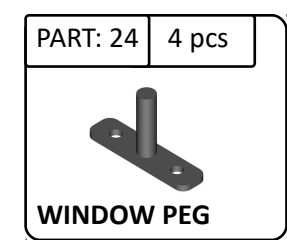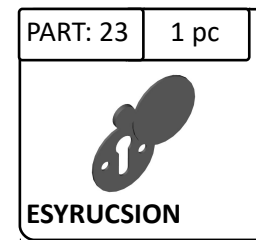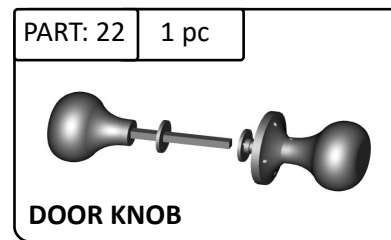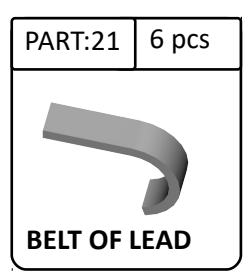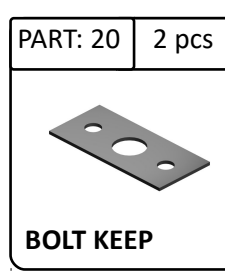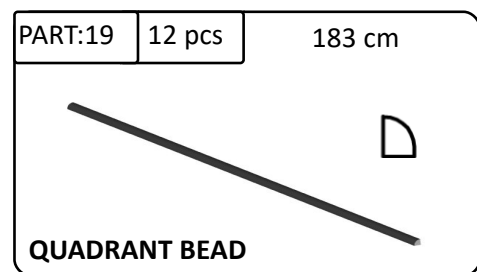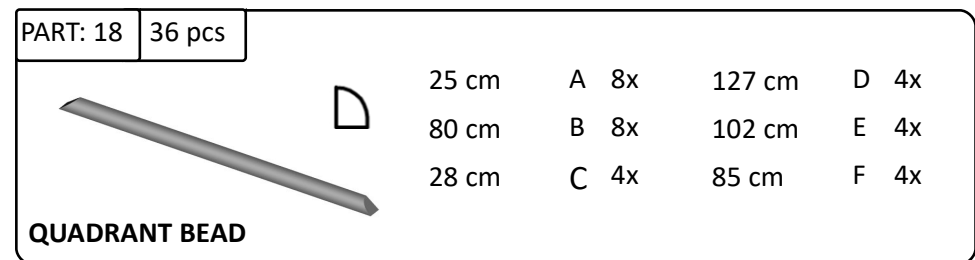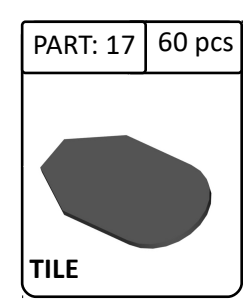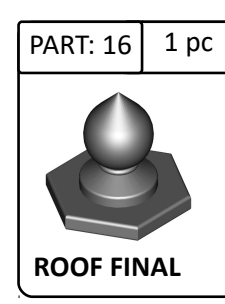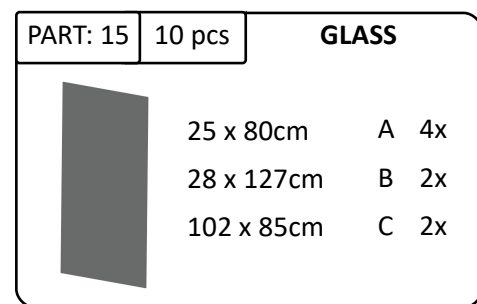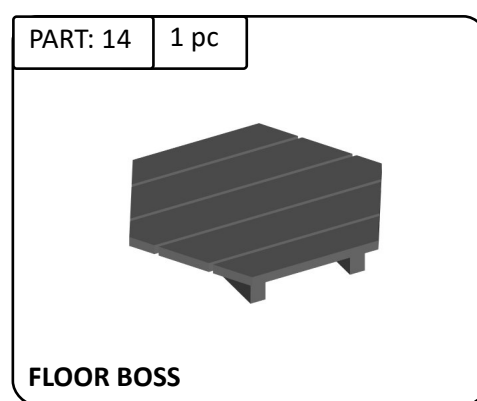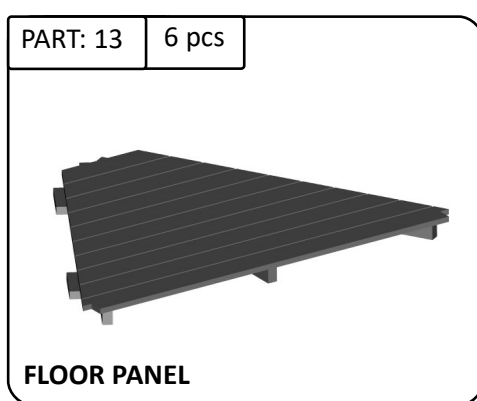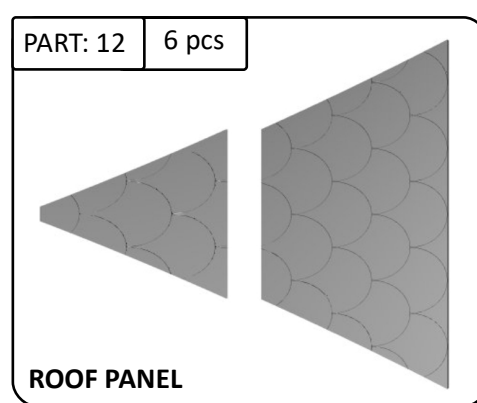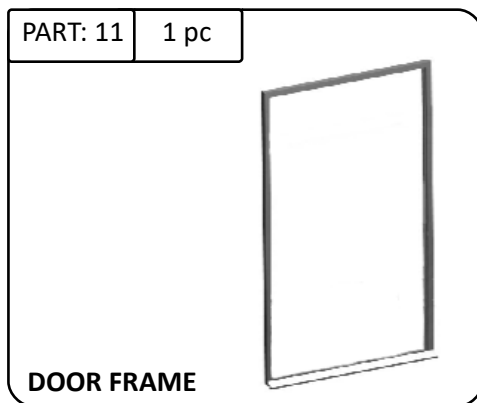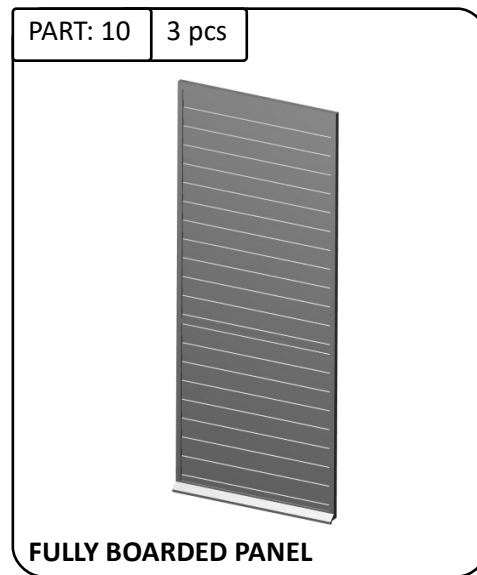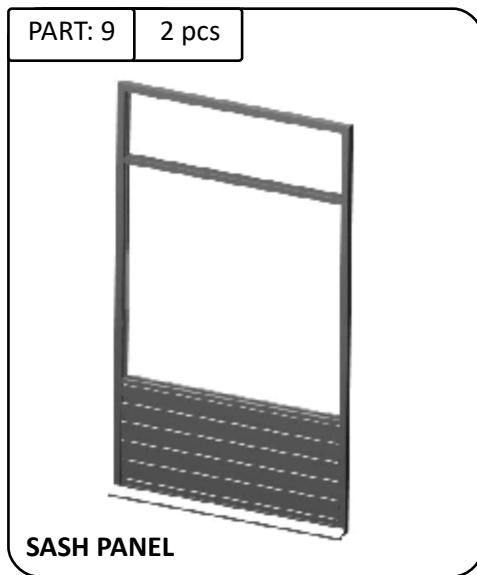

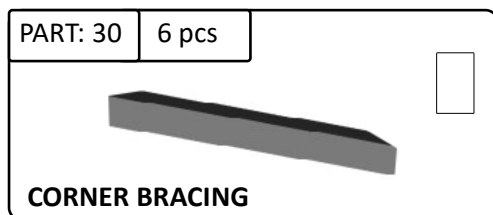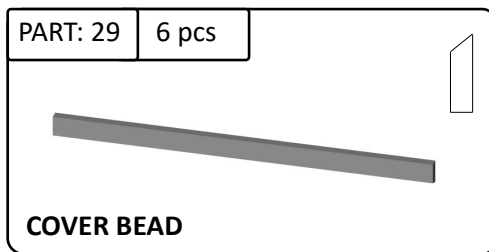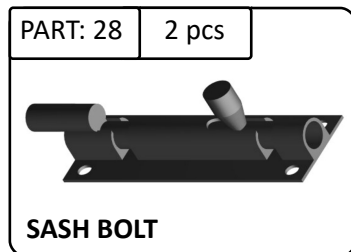

EXPLANATION



VIEW



MEASURE




ZOOM



DRAW

PART	FIXING HARDWARE		QUANTITY
A	5,0 x 90 mm		3 pcs
B	5,0 x 80 mm		12 pcs
C	5,0 x 60 mm		60 pcs
D	4,5 x 60 mm		100 pcs
E	3,5 x 40 mm		24 pcs
F	4,0 x 25 mm		30 pcs
G	1,2 x 20 mm		176 pcs
H	2,5 x 35 mm		120 pcs
I	2,5 x 50 mm		72 pcs
	SILICONE		1 pc
	WOODEN SCRIBER		1 pc

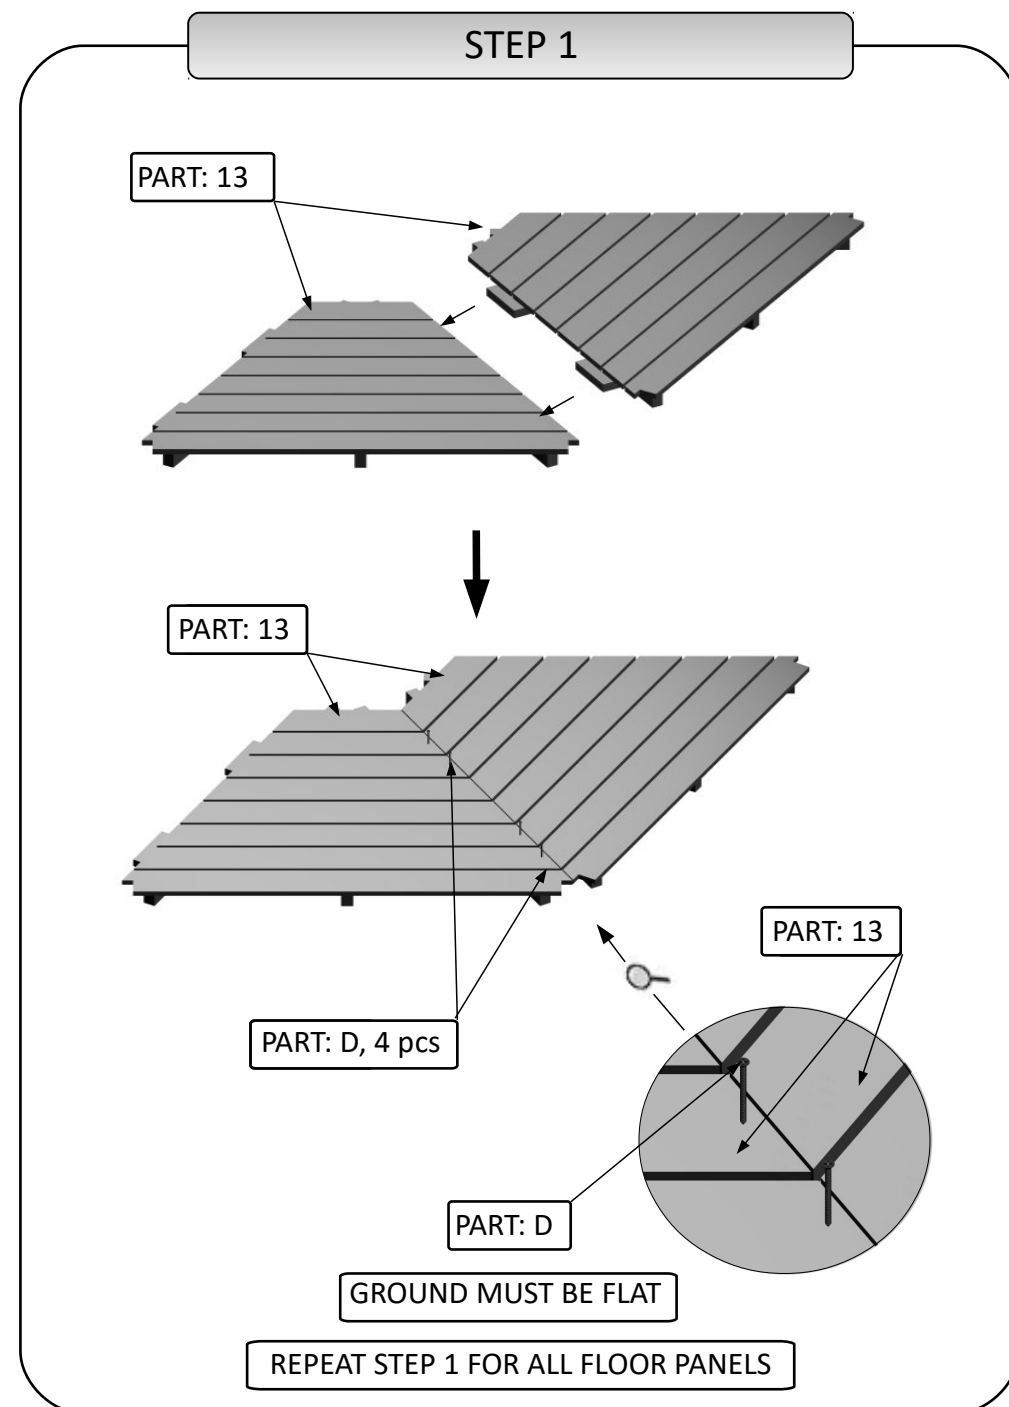

STEP 2

SEGMENT CREATED IN STEP 1

PART: 14

PART: 13

PART: 13

PART: D, 6 pcs

PART: 14

STEP 3

PART: C, 2 pcs

PART: 3

PART: 1

PART: 1

PART: 1

PART: 1


PART: 2

PART: C, 2 pcs

REPEAT STEP 3 – 3 TIMES

STEP 4

SEGMENTS CREATED IN STEP 3

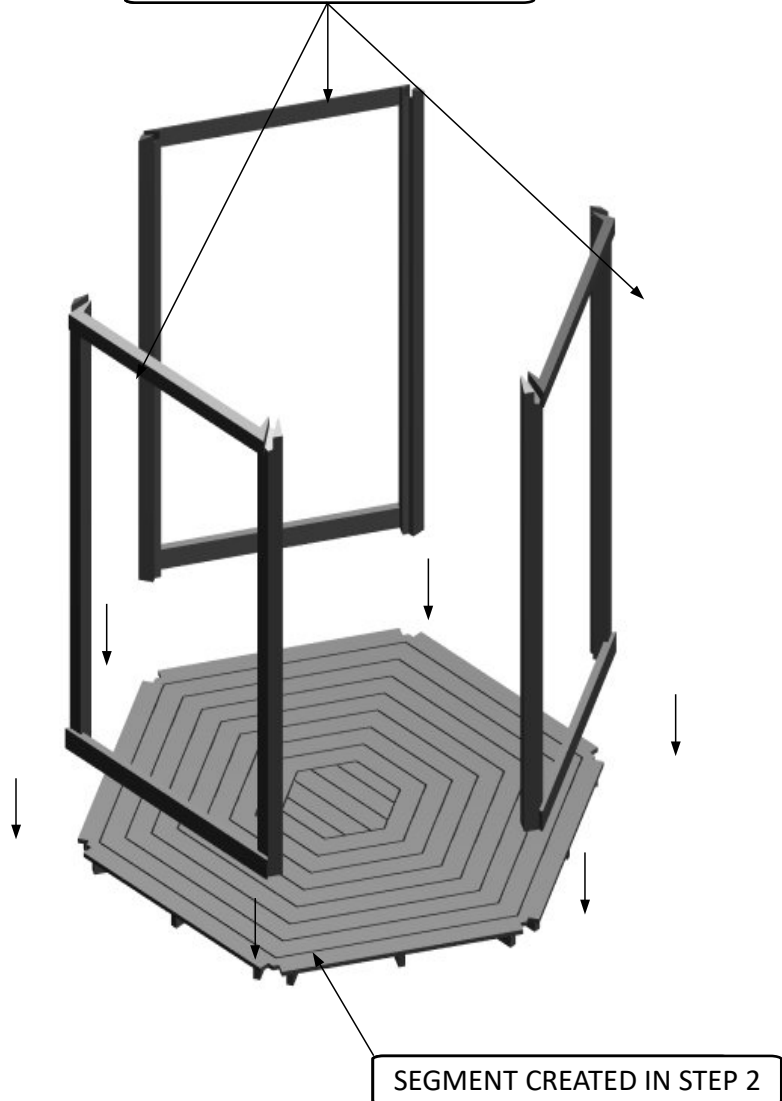

STEP 5


SEGMENTS CREATED IN STEP 3

LIKE IN STEP 3


PART: 3

PART: 2


REPEAT STEP 5 – 3 TIMES

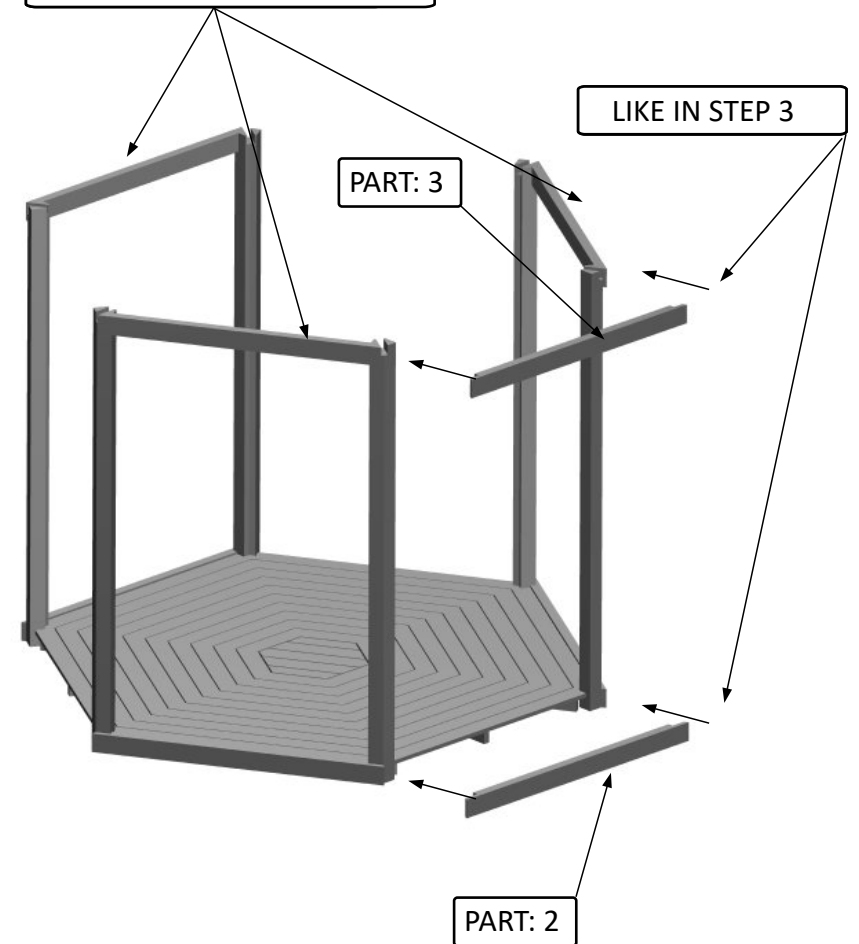


STEP 6

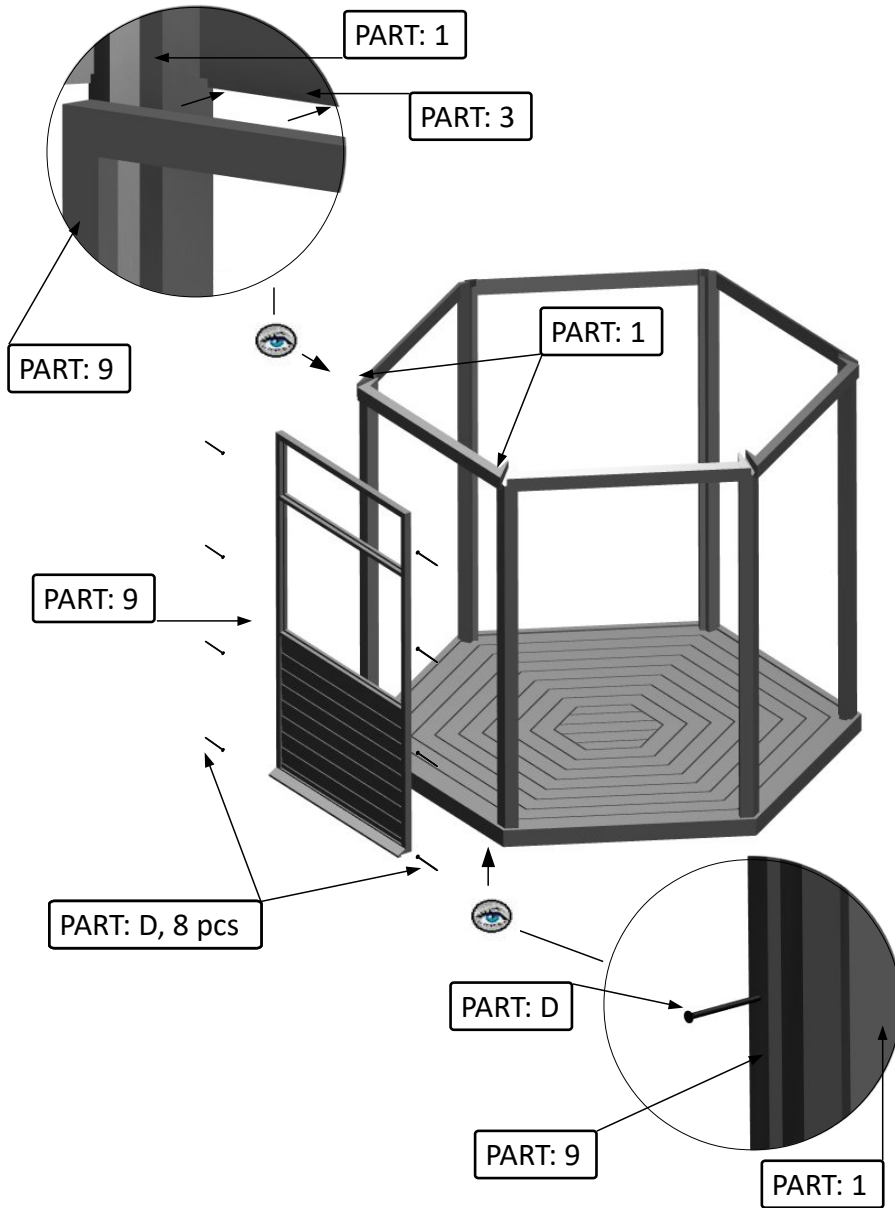


STEP 7

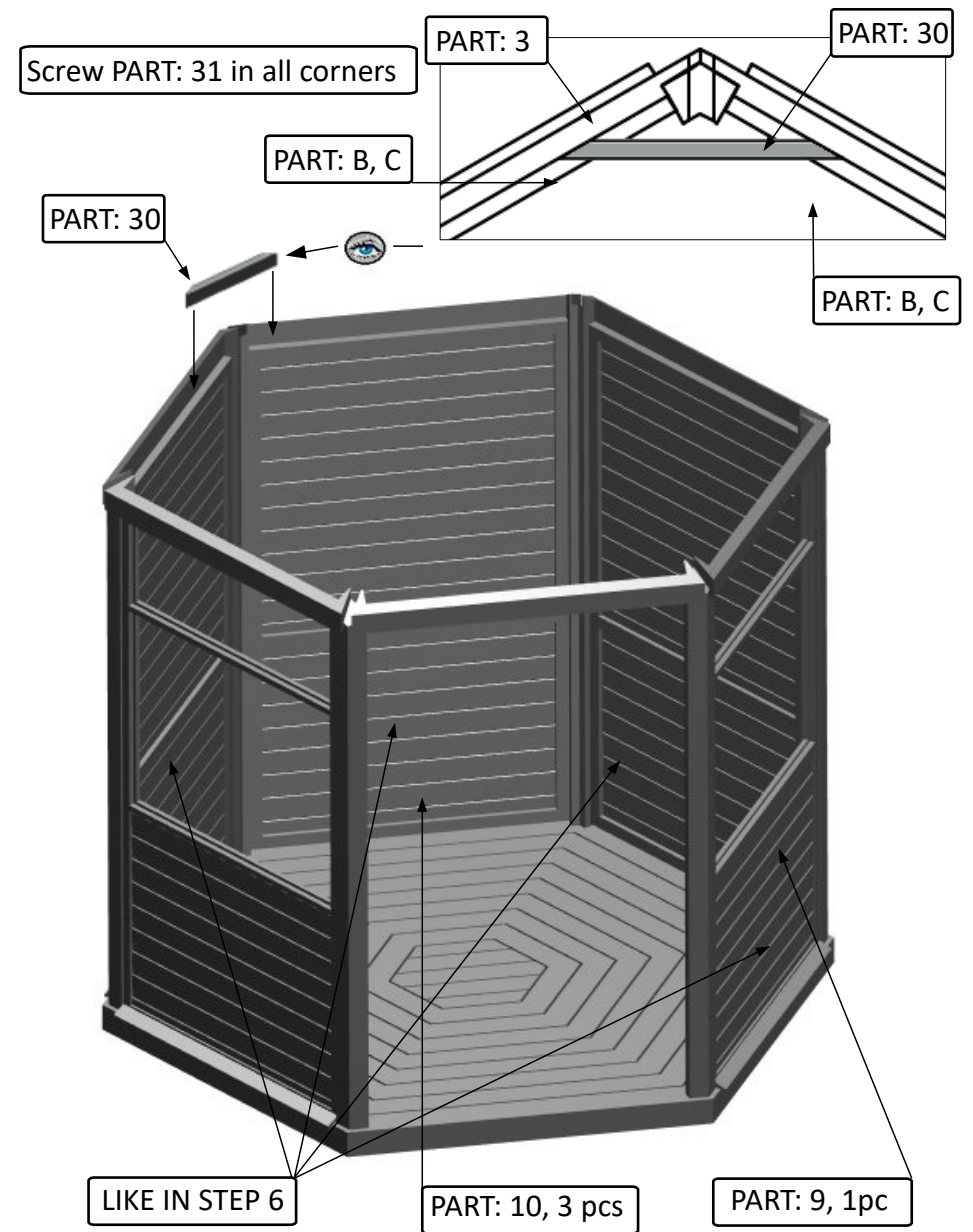

STEP 8

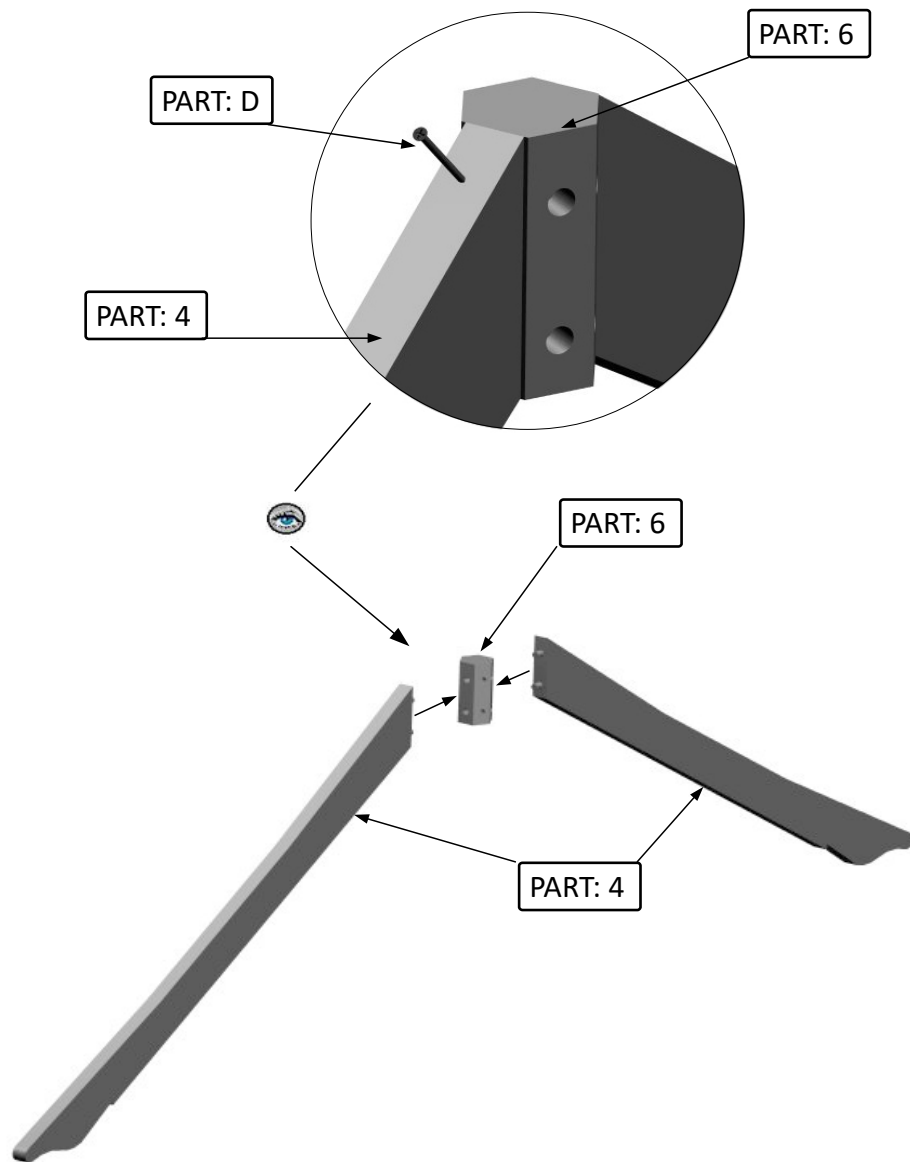


STEP 9

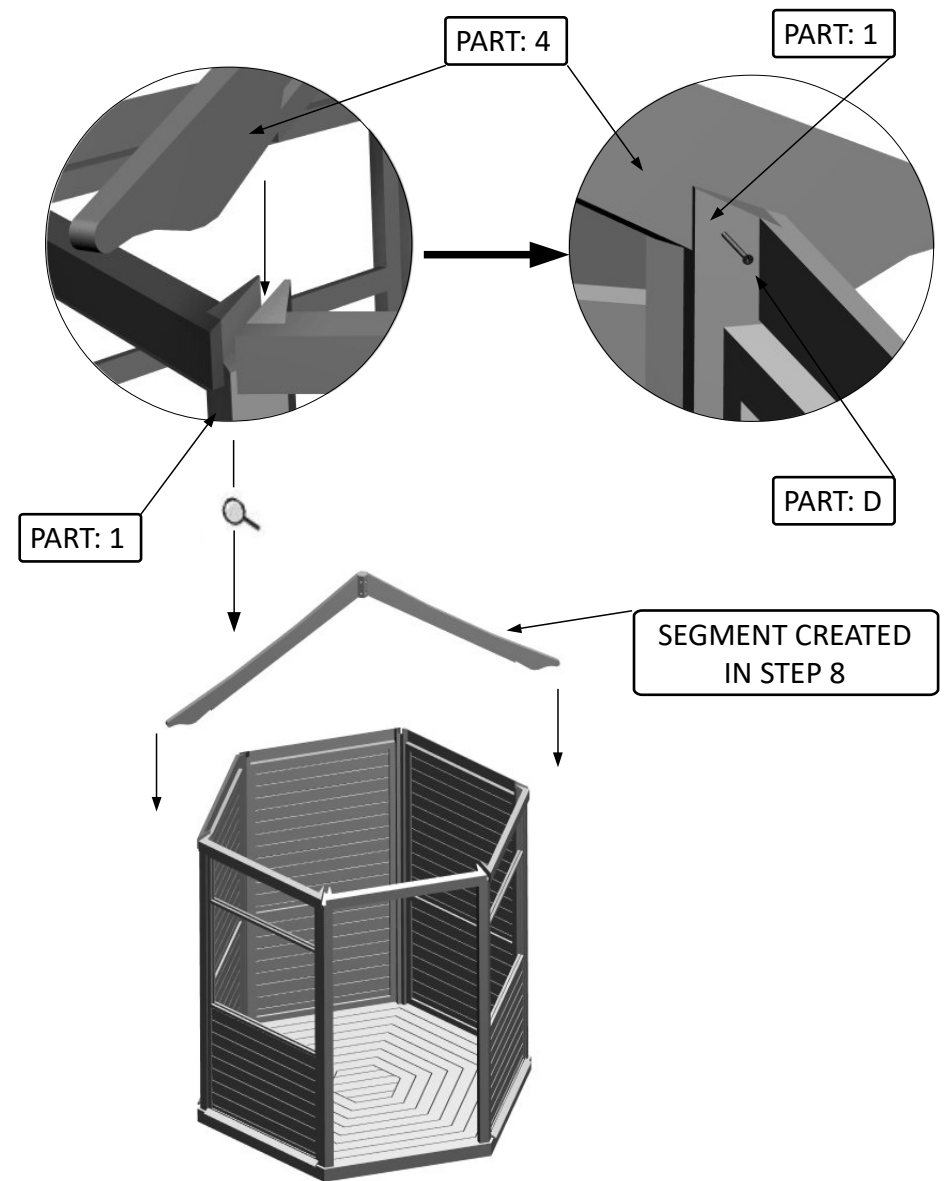

STEP 10

LIKE IN STEP 8, 9

PART: 4, 4 pcs

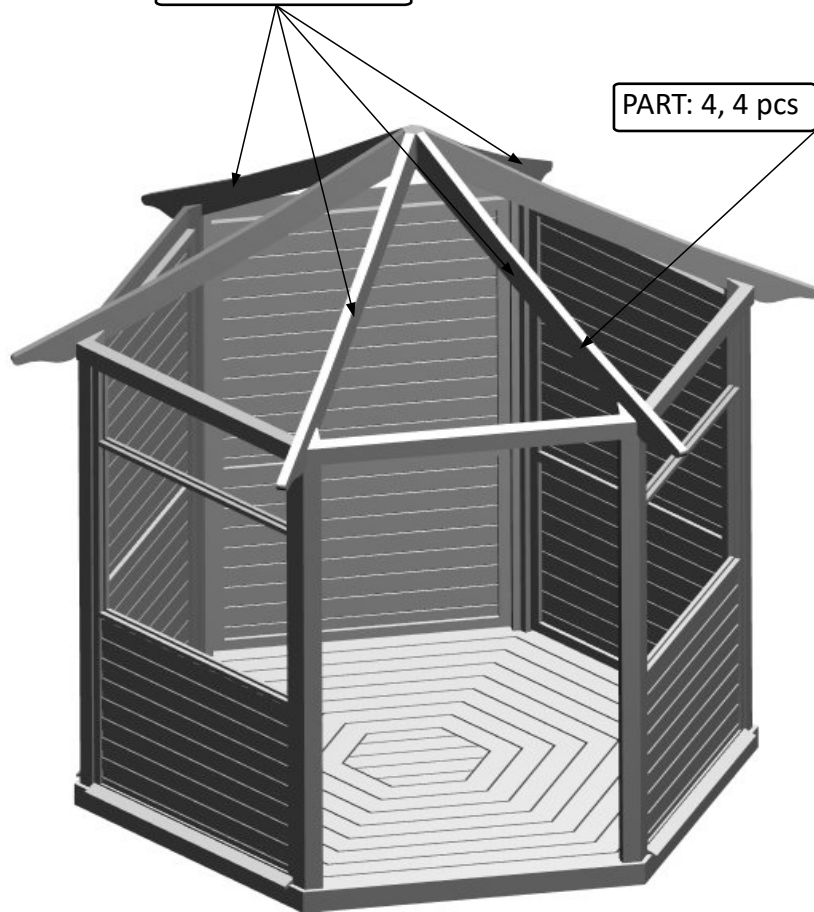


STEP 11

BEFORE ATTACHING THE DOOR FRAME (PART 11) TO THE POSTS, PLEASE TAKE OFF DOOR WINGS (PART 7; PART 8) FROM THE HINGES.

PART 11



PART D, 14 pcs

AFTER ASSEMBLY OF THE FRAME IS COMPLETED, REATTACH DOOR WINGS (PART 7; PART 8).

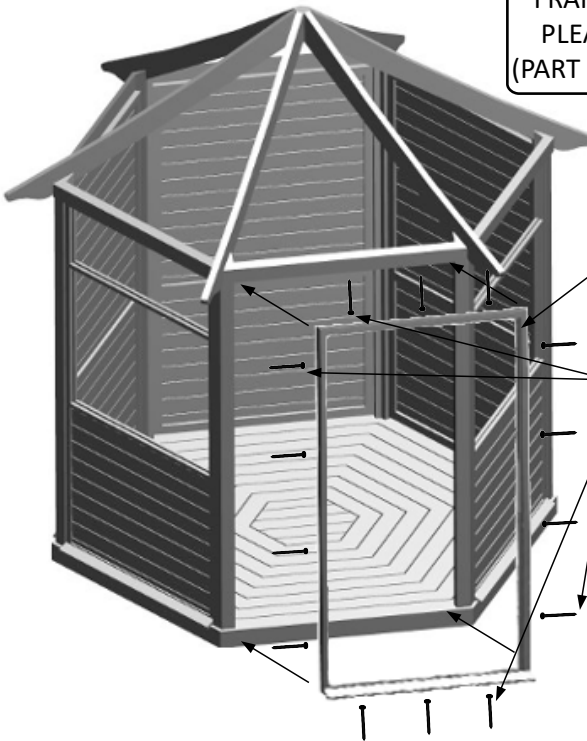


TO ADJUST THE POSITION OF DOOR WINGS (GAP BETWEEN THEM) TURN THE HINGES RIGHT OR LEFT

PART 7 OR 8

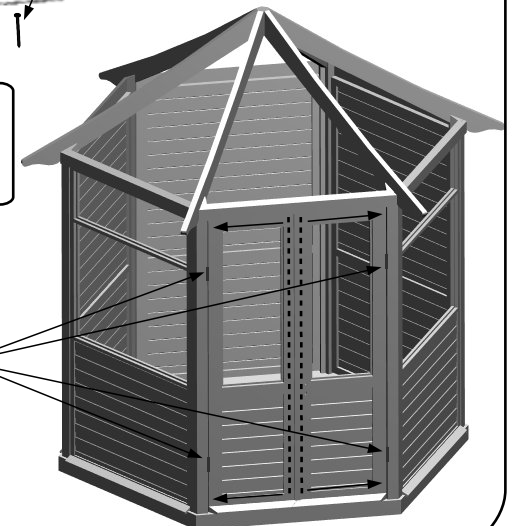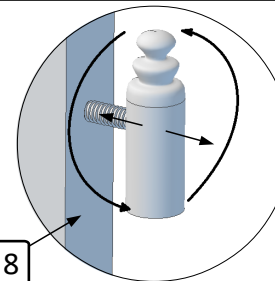


STEP 12

INSTALL WINDOW (PART: 5)
HINGES IN WINDOW HAVE TO BE AT THE TOP

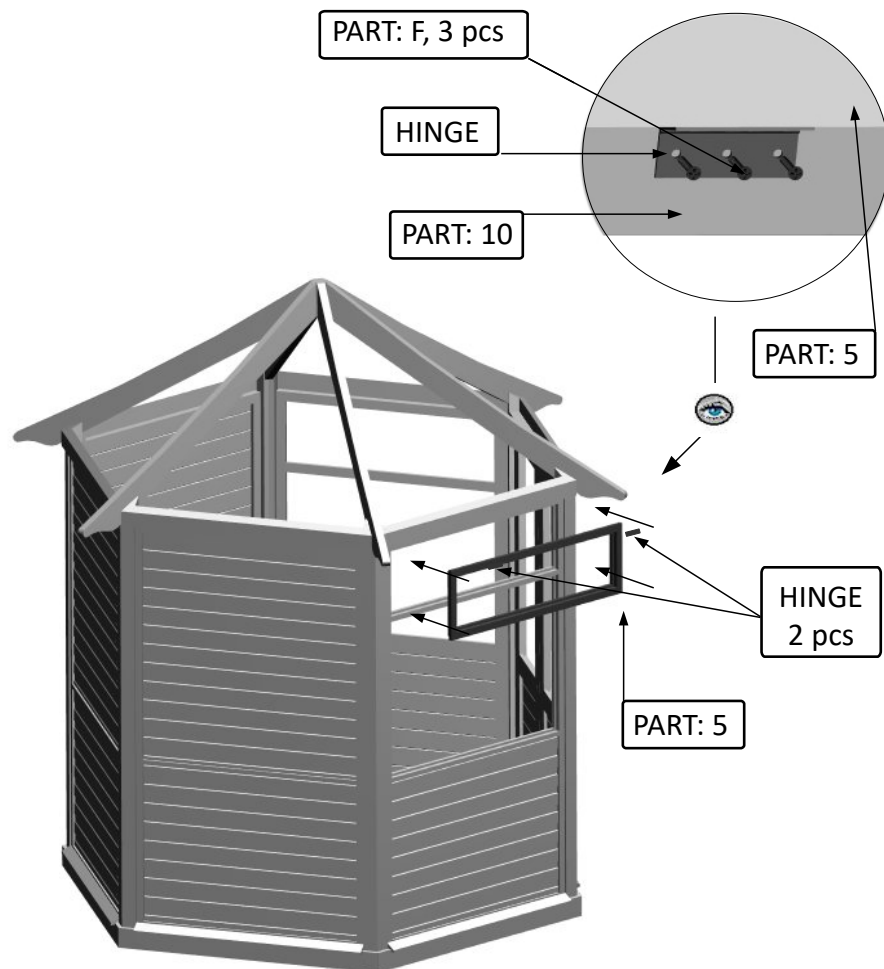


REPEAT STEP 12 – 2 TIMES

STEP 13

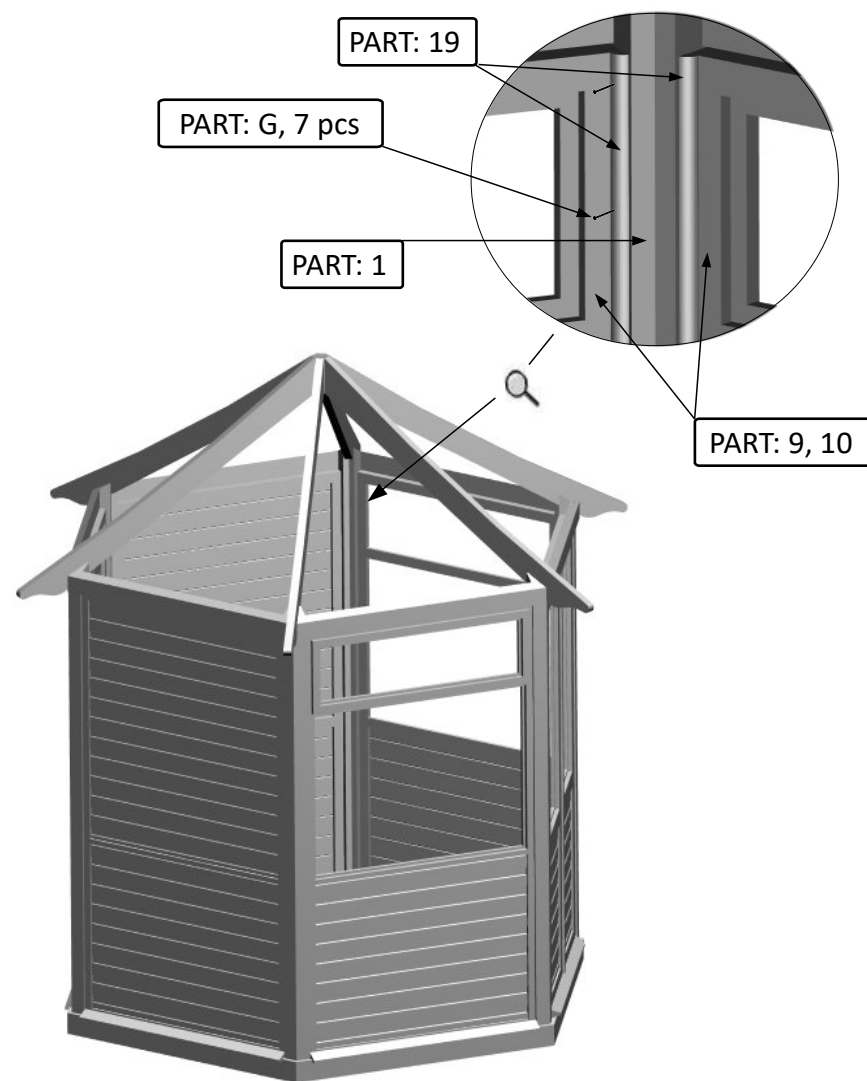

FOR ASSEMBLE PART: 19 IN THE CORNER FROM BOTH SIDES
OF COLUMNS (PART: 1) USE NAILS PART: G (7 pcs TO PART: 19)


STEP 14

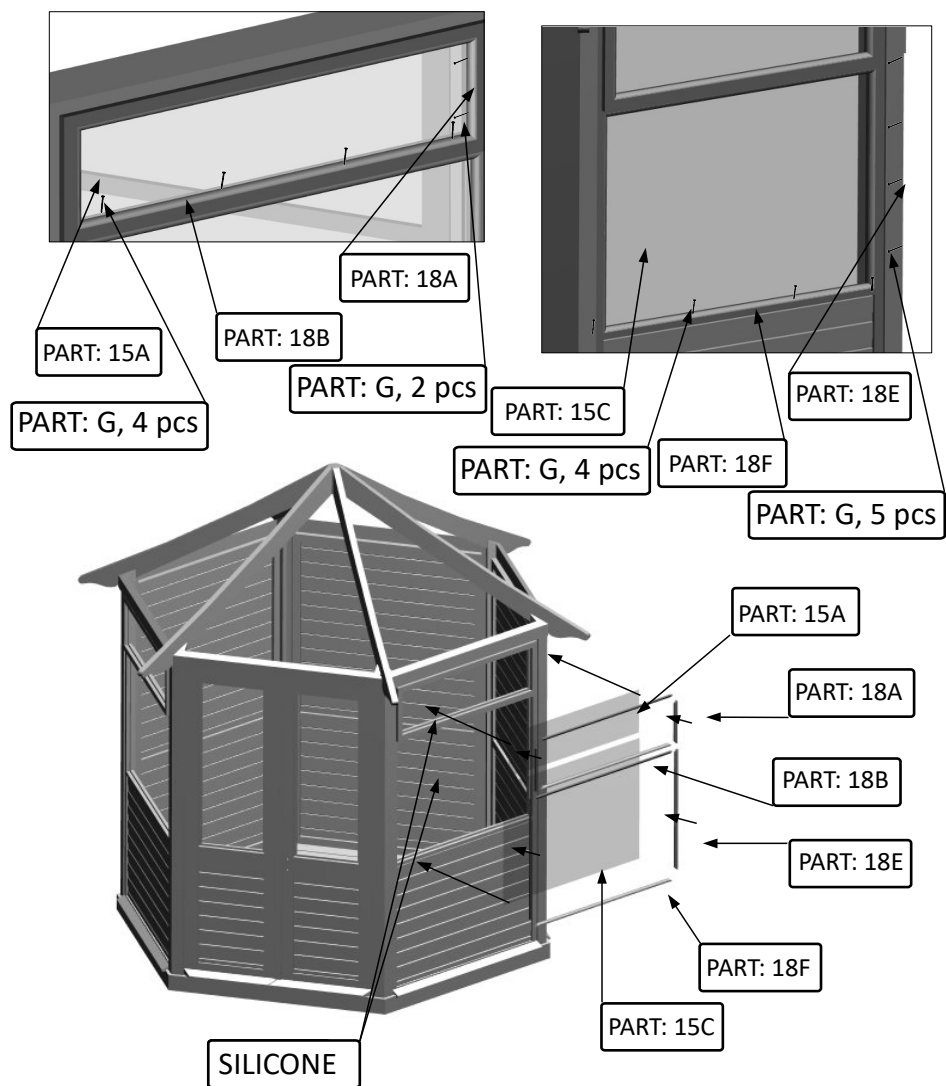


FIRST PUT THE SILICONE ON THE EDGES, THEN ASSEMBLE THE GLASS (PART: 15),
USE NAILS PART: G TO ASSEMBLE QUADRANT BEAD (PART: 18)

REPEAT STEP 14 – 2 TIMES


STEP 15

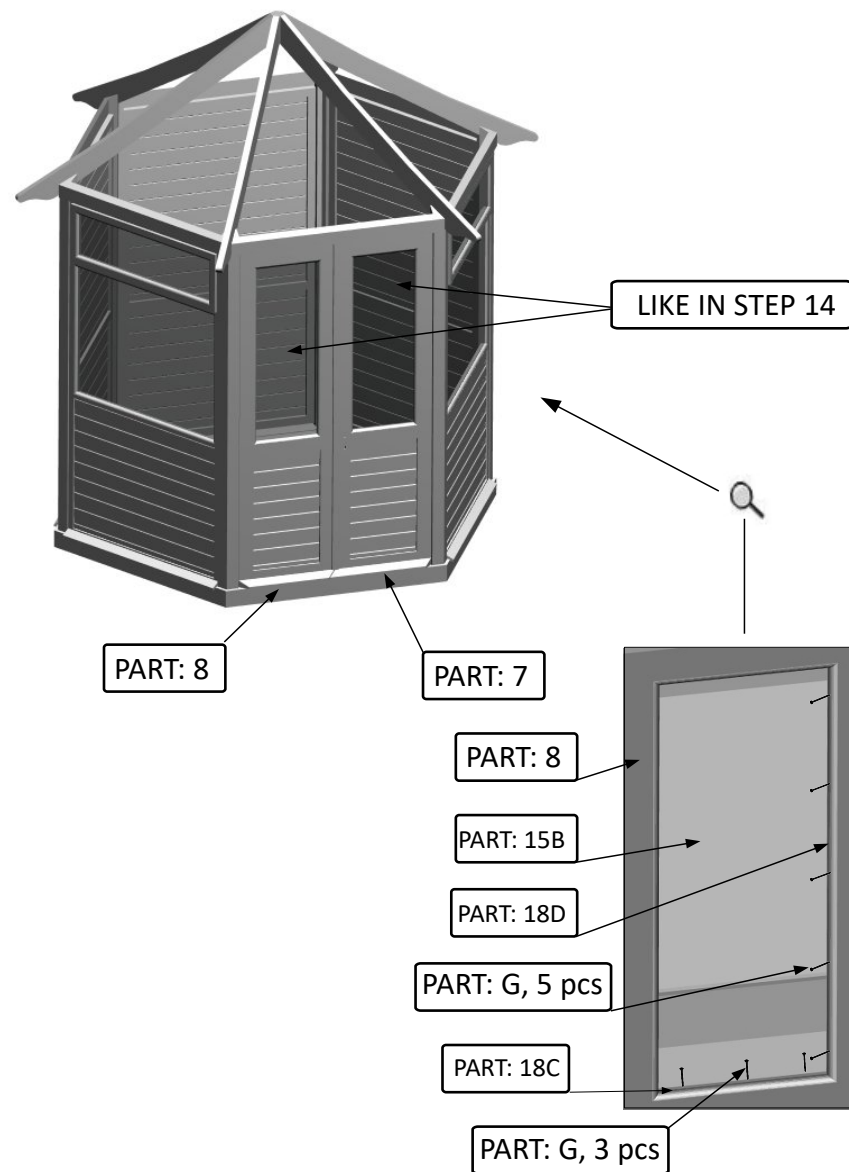


STEP 16

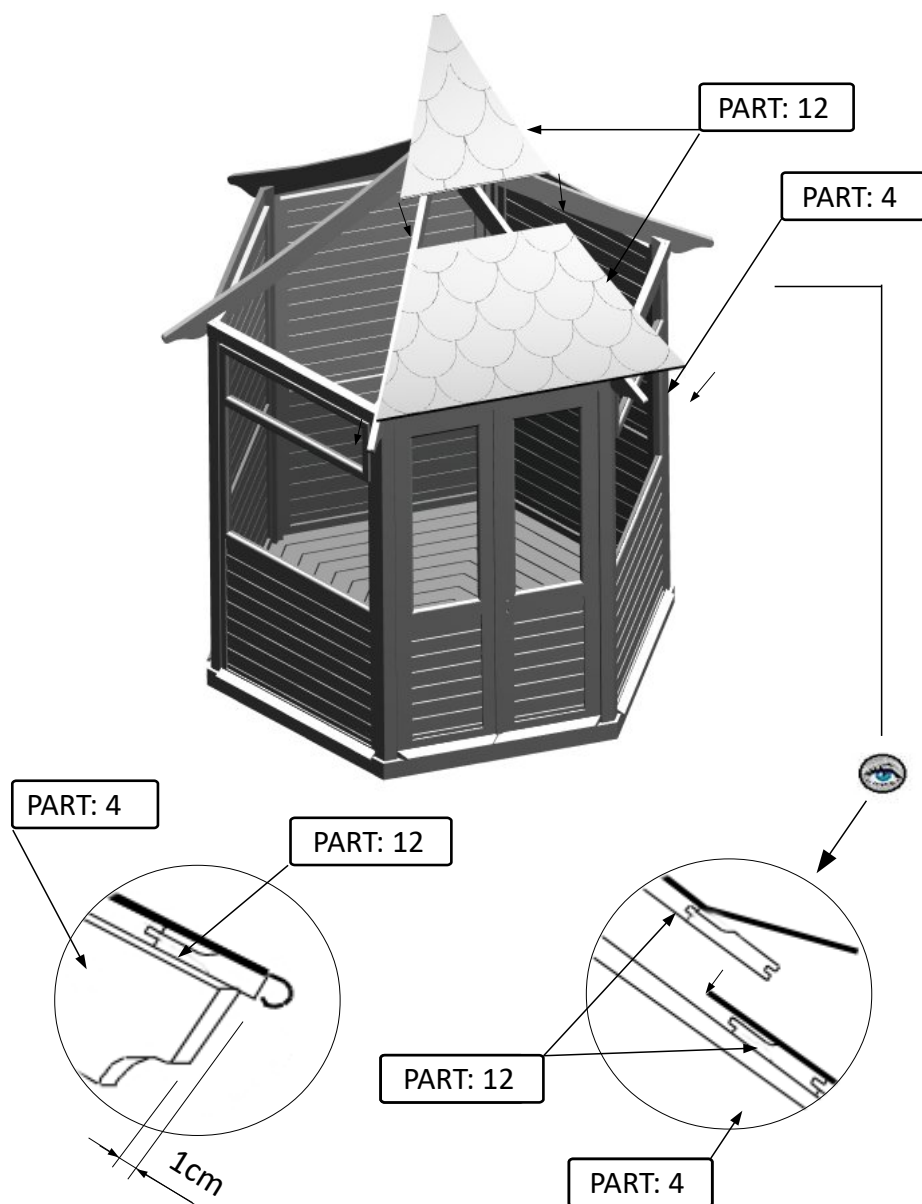

STEP 17

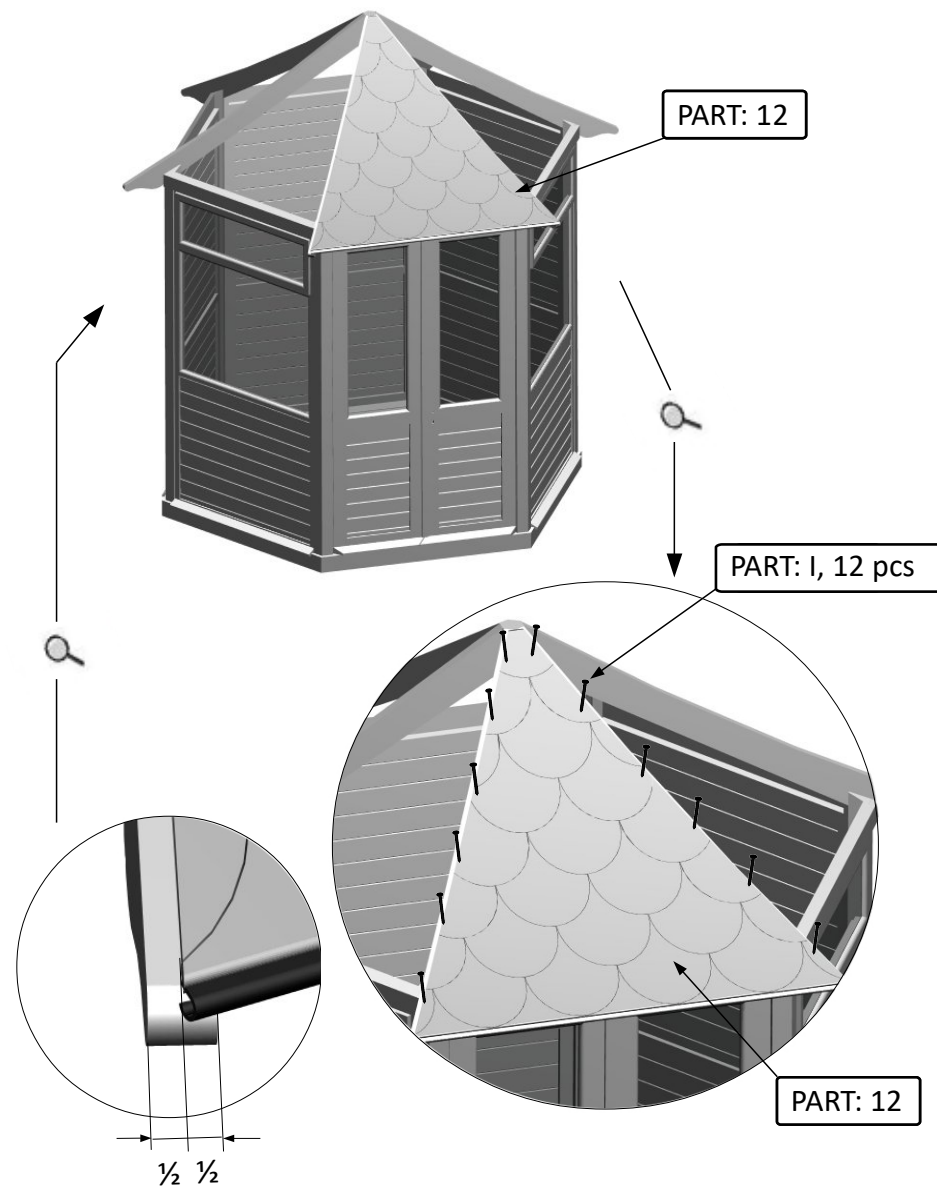


STEP 18

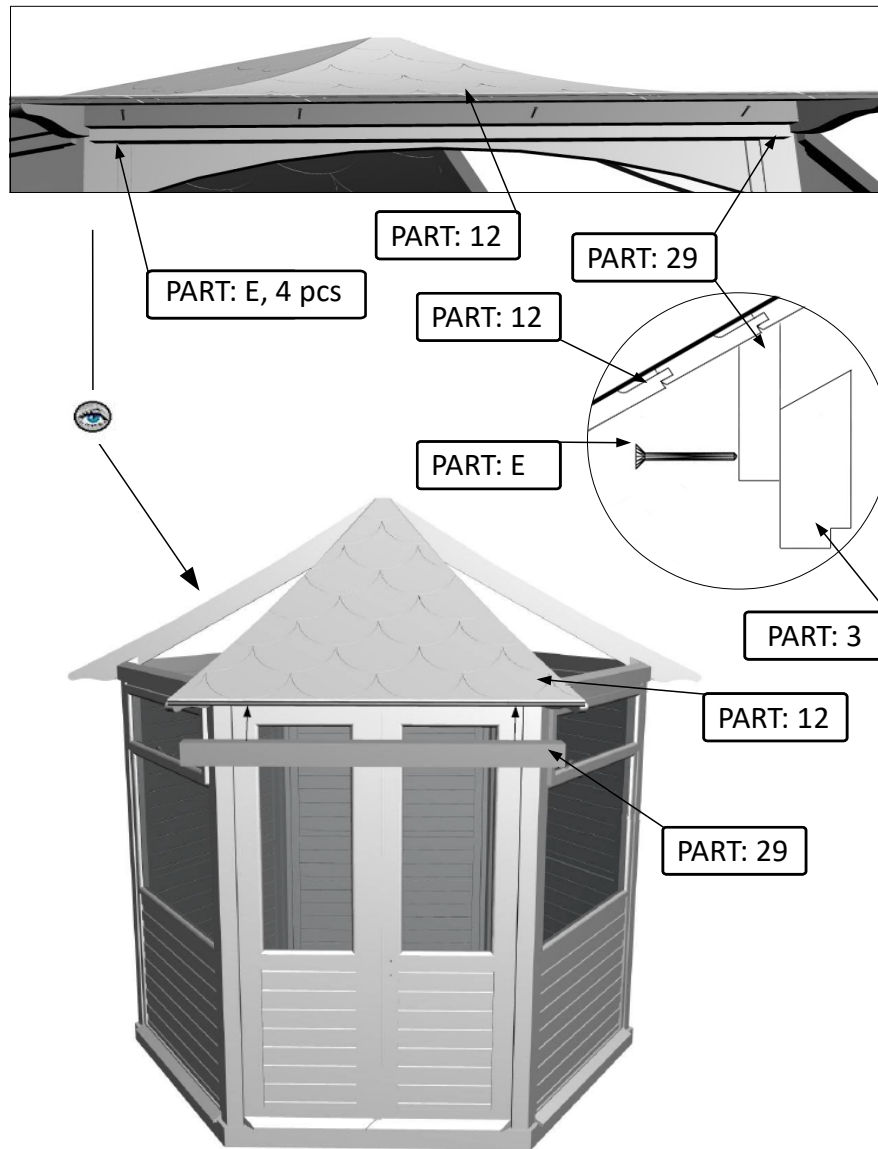


REPEAT STEPS: 16, 17, 18 – 6 TIMES

STEP 19

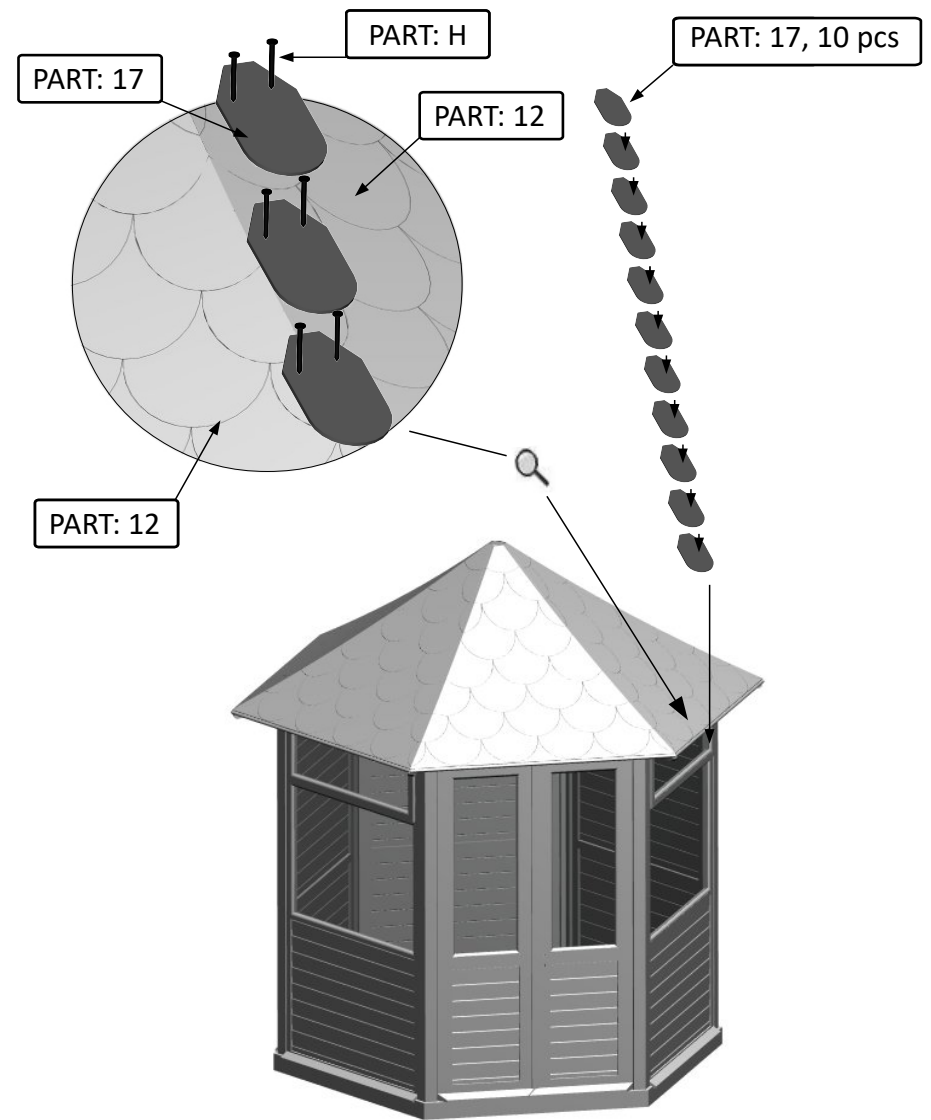


REPEAT STEP 19 AROUND THE ROOF

STEP 20

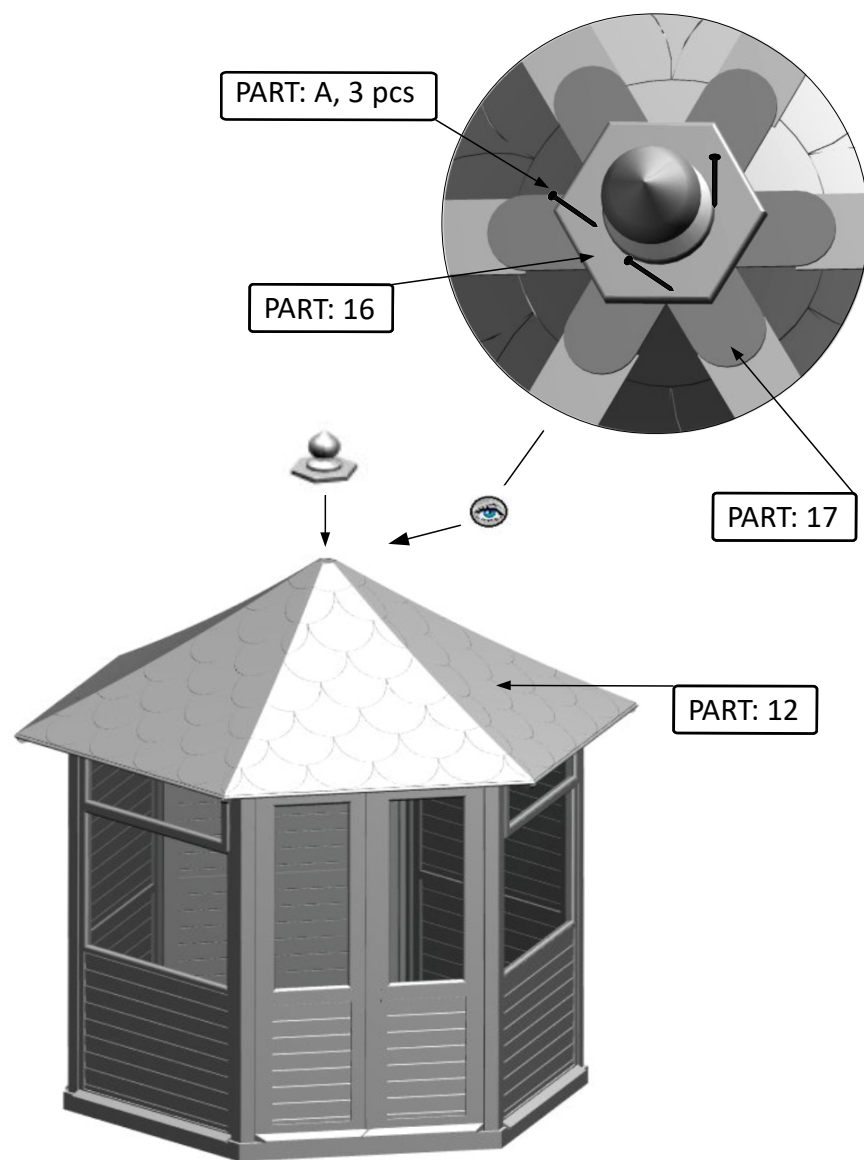


STEP 21

PUT BELT OF LEAD ON ROOF (PART: 12)
THEN USE WOODEN SCRIBER TO COMPENSATE LEAD (PART: 21)

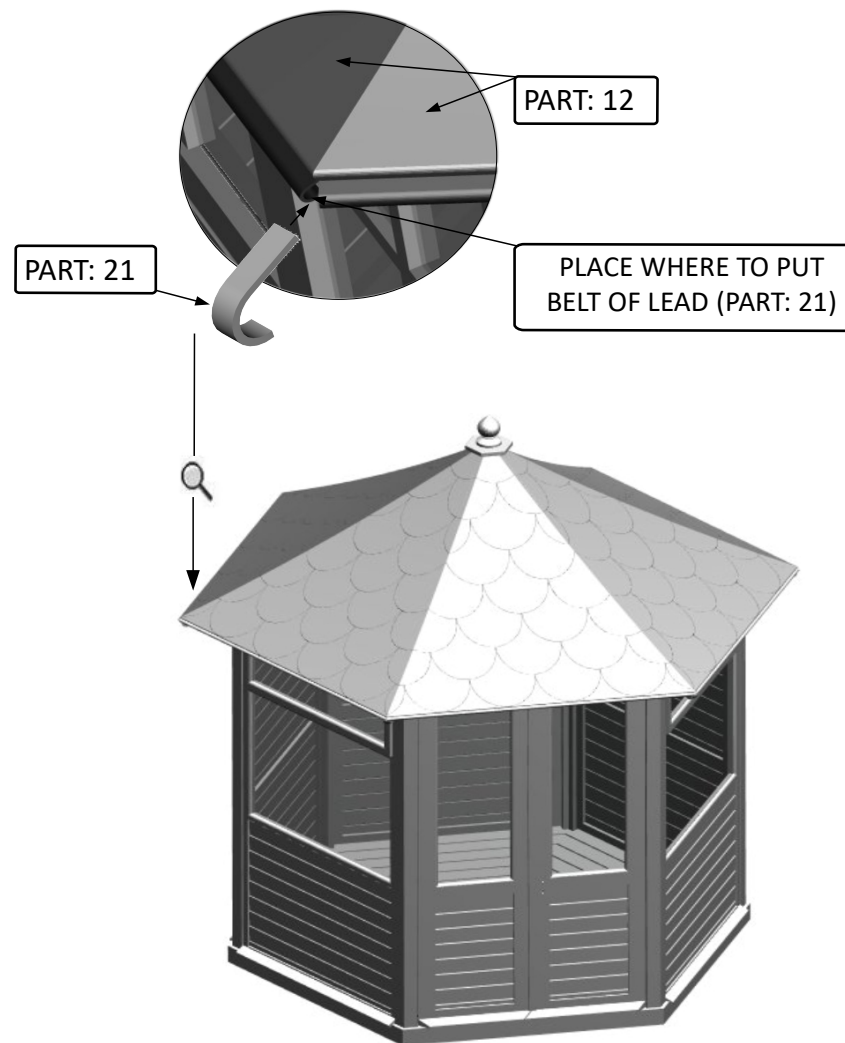


REPEAT STEP 21 AROUND THE ROOF

STEP 22

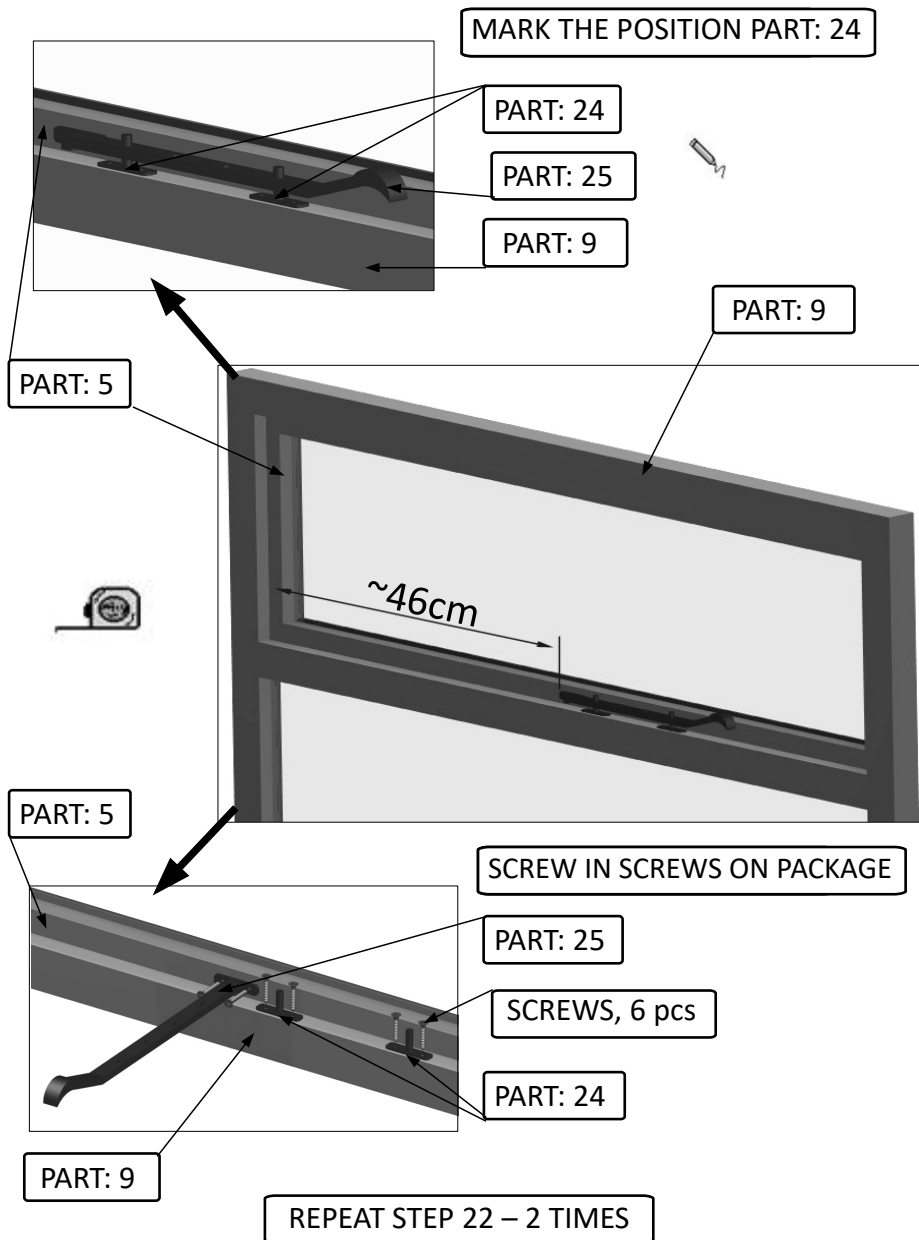


STEP 23

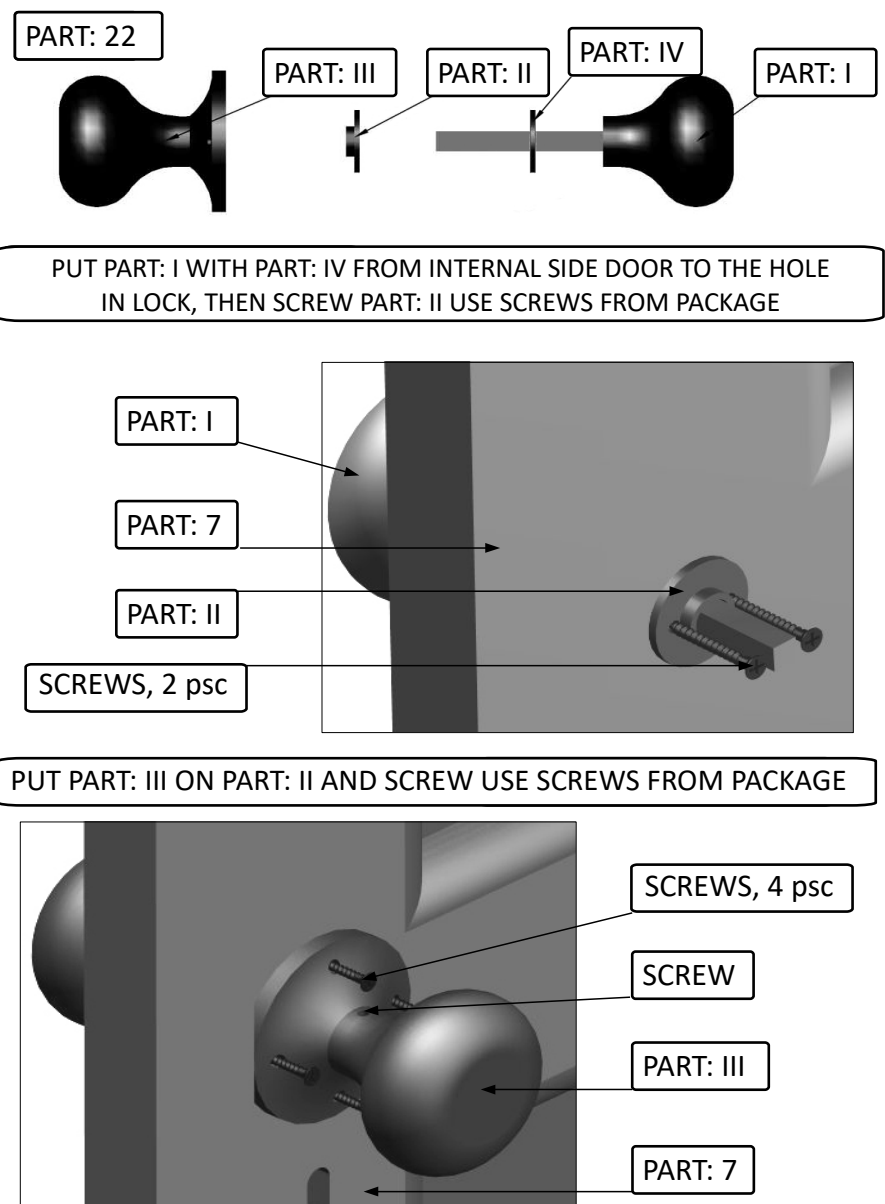

STEP 24

APPLY PART: 23 TO THE HOLE BELOW PART: 22
PUT THE KEY TO THE LOCK
AND PLACE PART: 23 SO THAT THE KEY BE IN THE MIDDLE
THEN SCREW USE SCREWS FROM PACKAGE

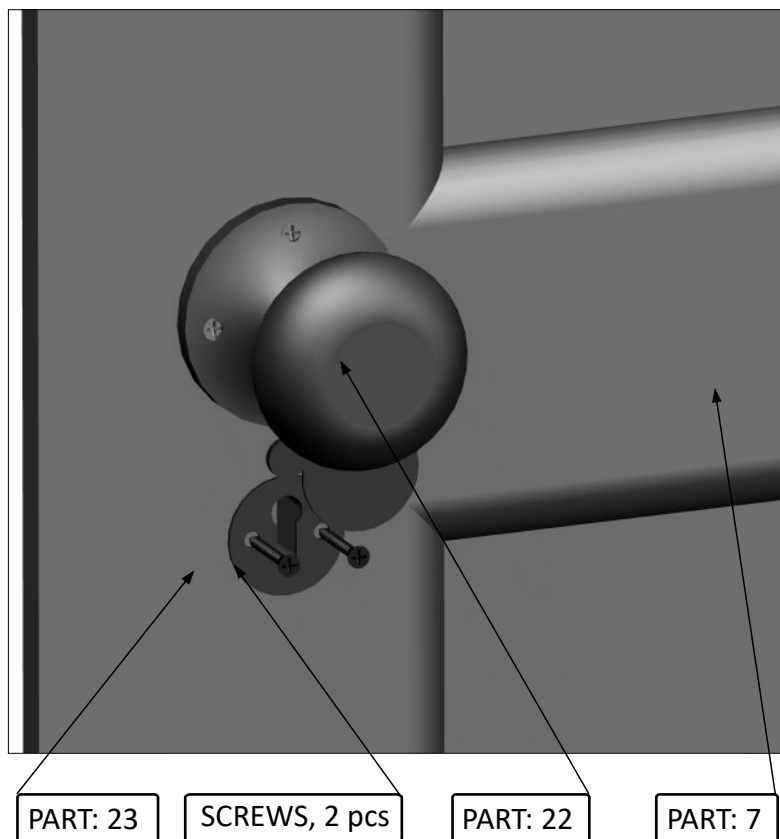


STEP 25

SCREW IN PART: 28 TO DOOR (PART: 8)
USE SCREWS FROM PACKAGE



SCREWS, 4 pcs

PART: 28

PUT PART: 20 ON PART: 28 SO THAT THE HOLE
FIT ON THE PIN, THEN MARK POSITION

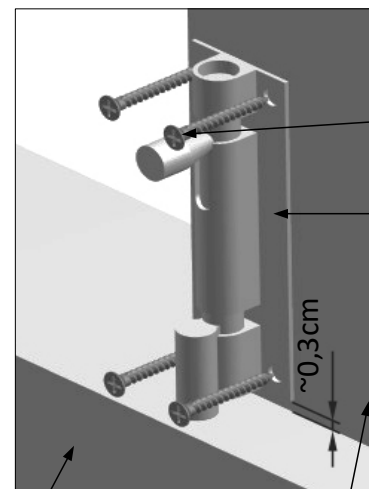

BORE HOLE USE DRILL DIAMETER 8
ON THE DEPTH 2cm
THEN SCREW USE SCREWS FROM
PACKAGE

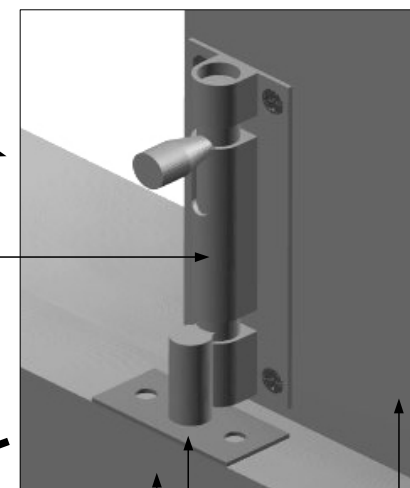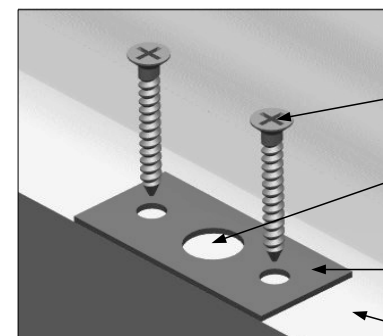

REPEAT STEP 25 AT THE TOP OF DOOR (PART: 8)

STEP 26

SCREW PART: 27 TO COLUMN (PART: 1)
USE SCREWS FROM PACKAGE

SCREWS, 2 pcs

PART: 27

PART: 1

OPEN DOOR TO THE MOMENT WHERE
YOU WANT TO BLOCK IT
THEN APPLY PART: 26 AND MARK POSITION

PART: 8

PART: 8

PART: 26

SCREW IN PART: 26 USE
SCREWS FROM PACKAGE

PART: 1

PART: 27

SCREWS, 2 pcs

PART: 26

PART: 8

REPEAT STEP 26 AT THE SECOND SIDE OF DOOR

