

York

040181

EQUIPMENT



2 people



Measure



Drill













Level



Angle
bracket

PARTS

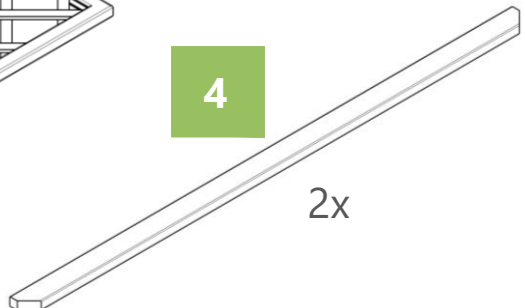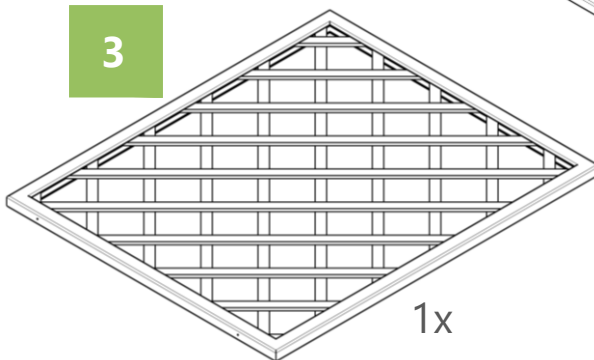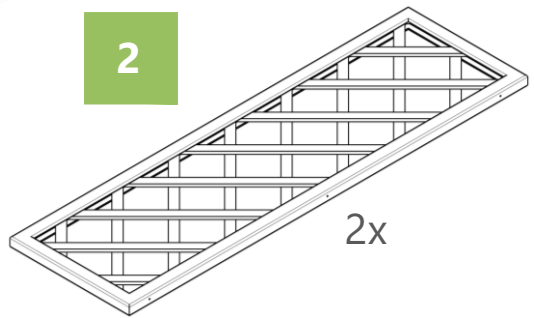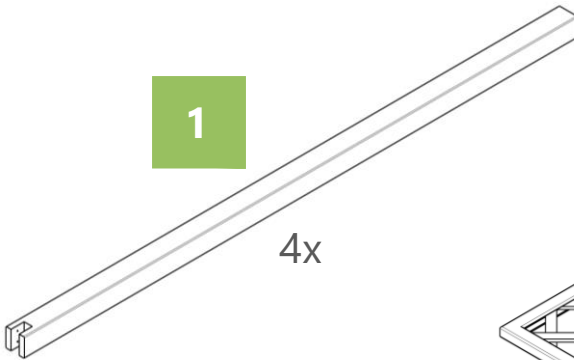

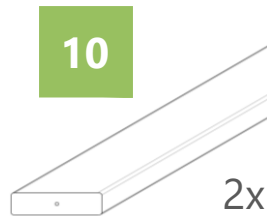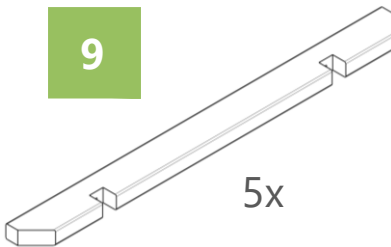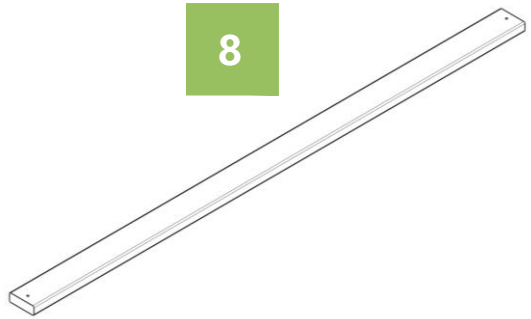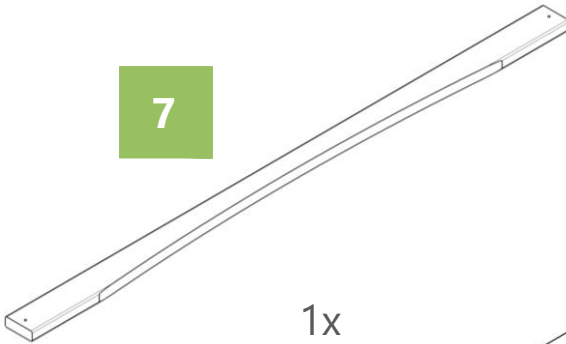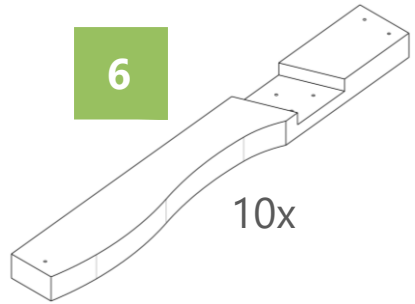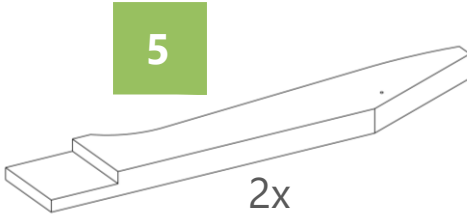

FITTINGS

A

1x



SCREW BIT: PZ2

B

10x  4x20 mm

C

6x  4x25 mm

D

25x  4x40 mm


E

44x  4x60 mm

F


4x  4x70 mm

Step 1

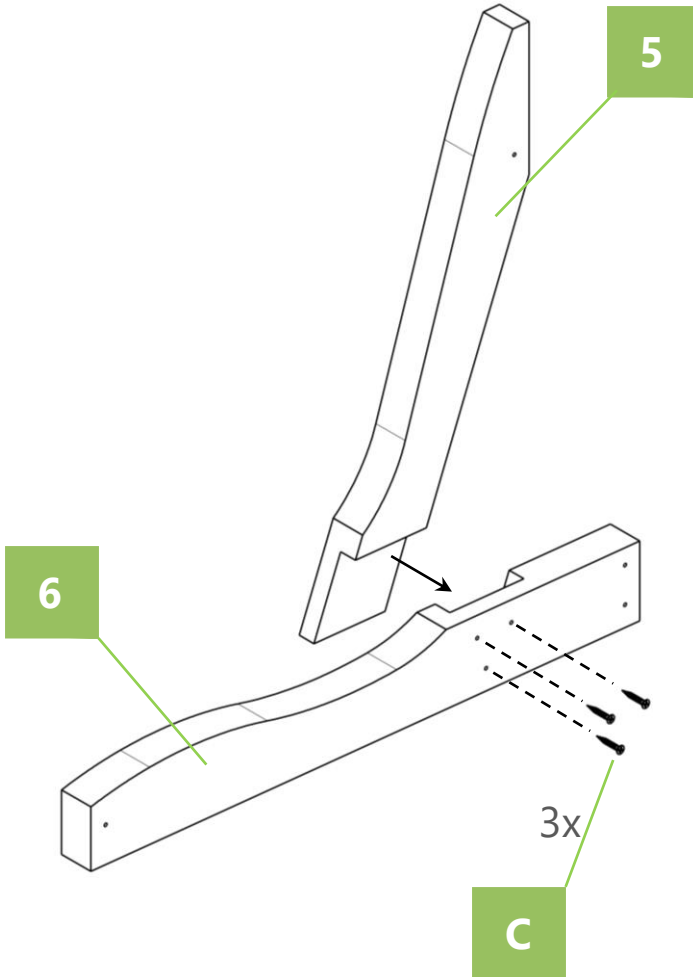


Assemble 2 such segments


Step 2

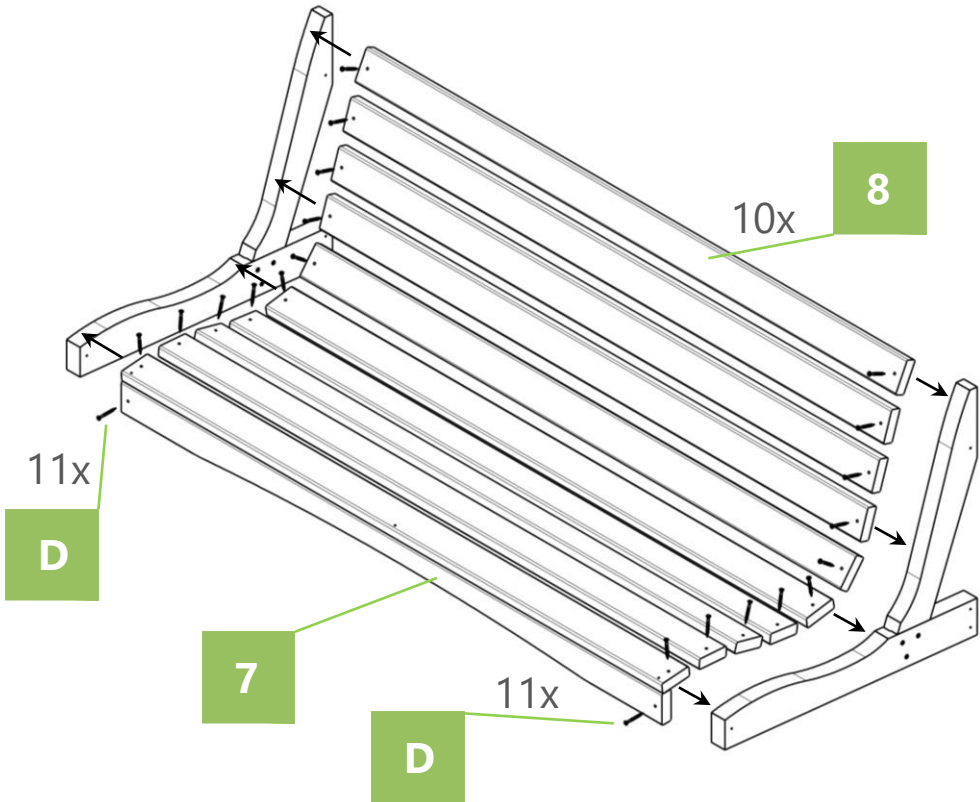

The mounting sequence of slats

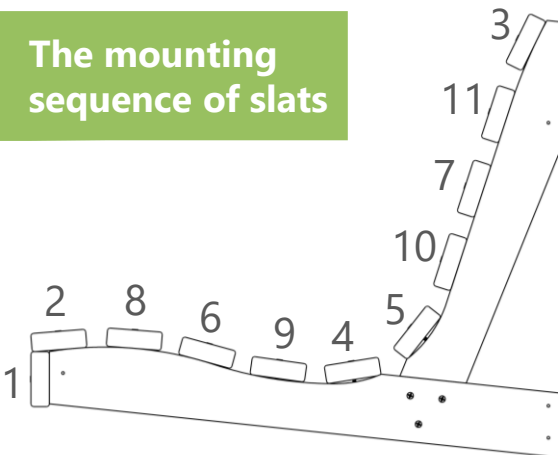


Step 3

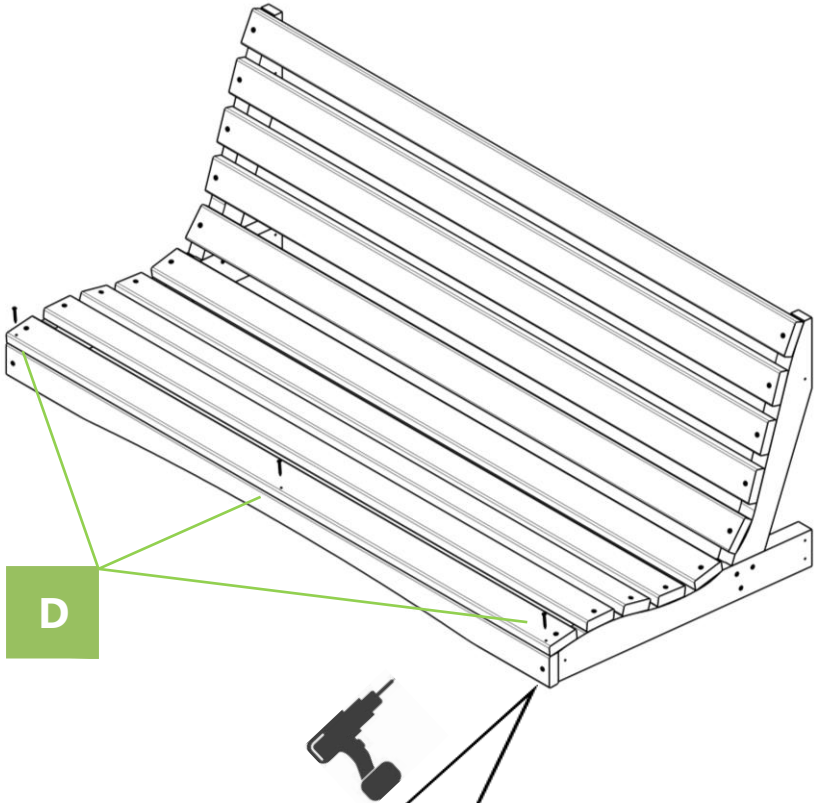


Pre-drill holes for
screws in the 2nd
slat.

Drill bit: **Ø4**

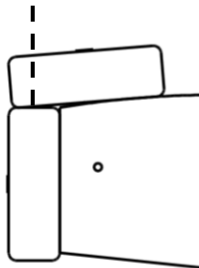

Step 4

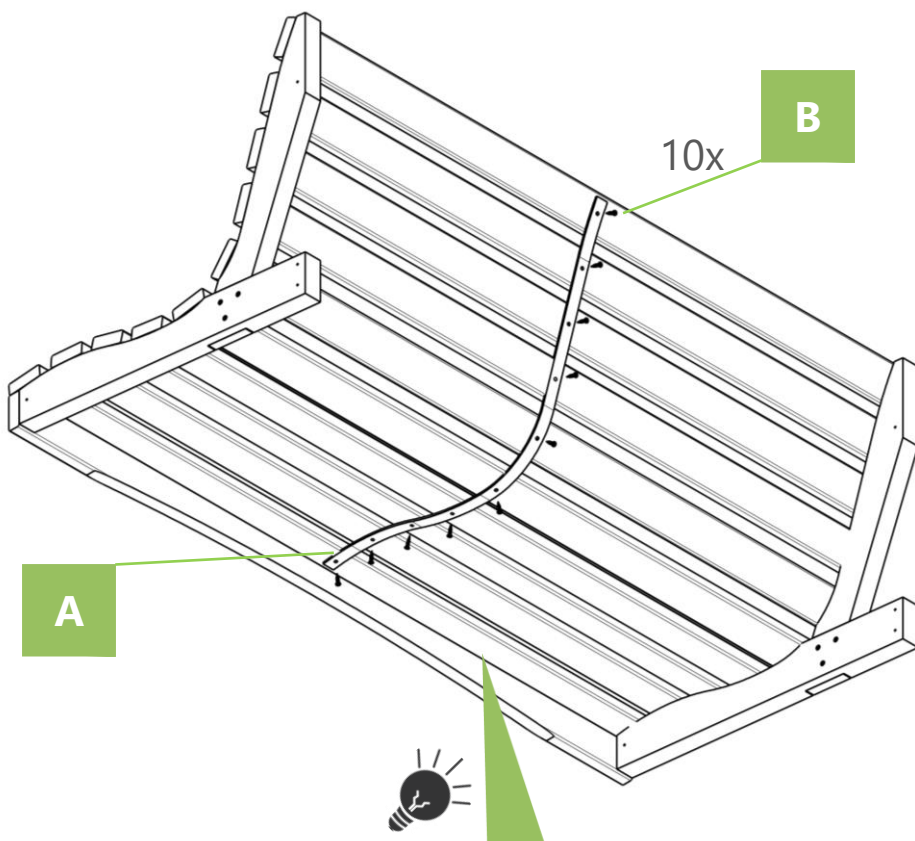


Start mounting the steel flat bar from the 2nd slat from the bottom (see step2 – slat no. 2). Adjust it to the profile of the bench by bending it.

Step 5




Pay attention to the positioning of the posts notches


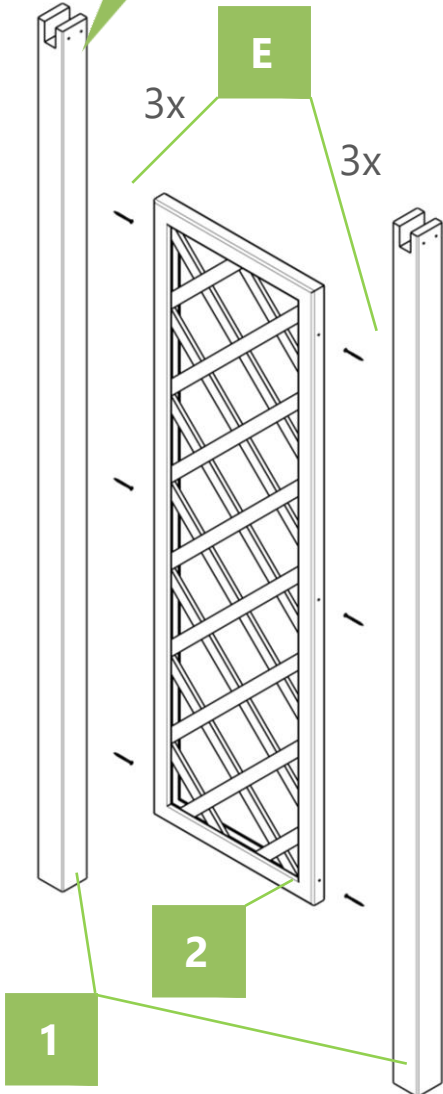


Assemble 2 such segments


Mount the trellis in the middle of the post

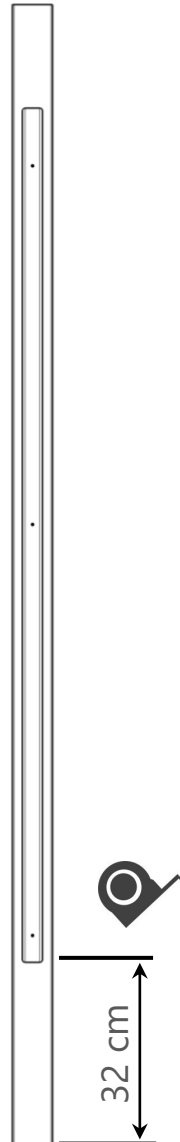


Step 6

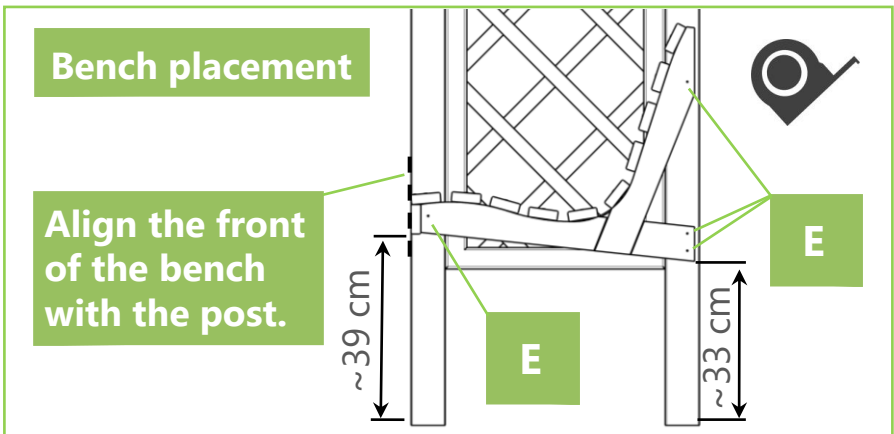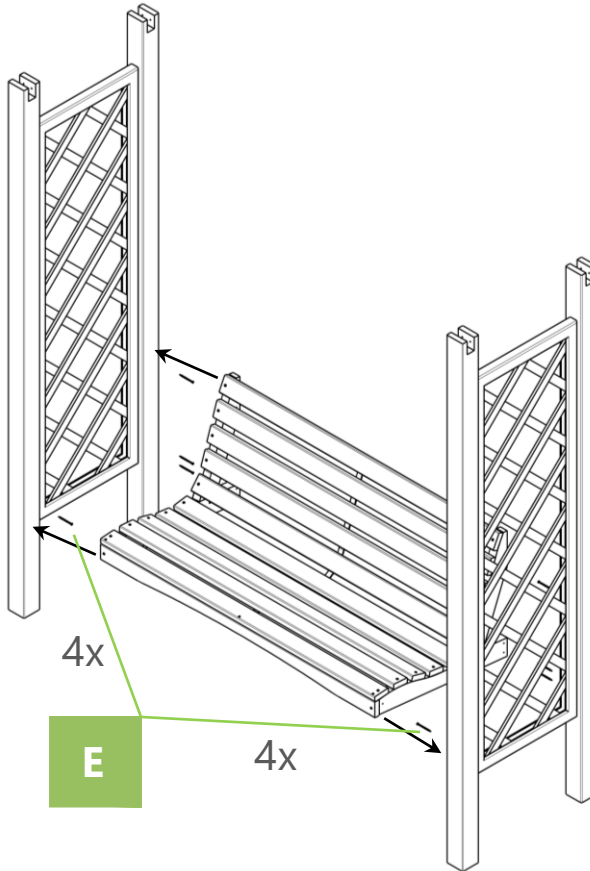

Step 7

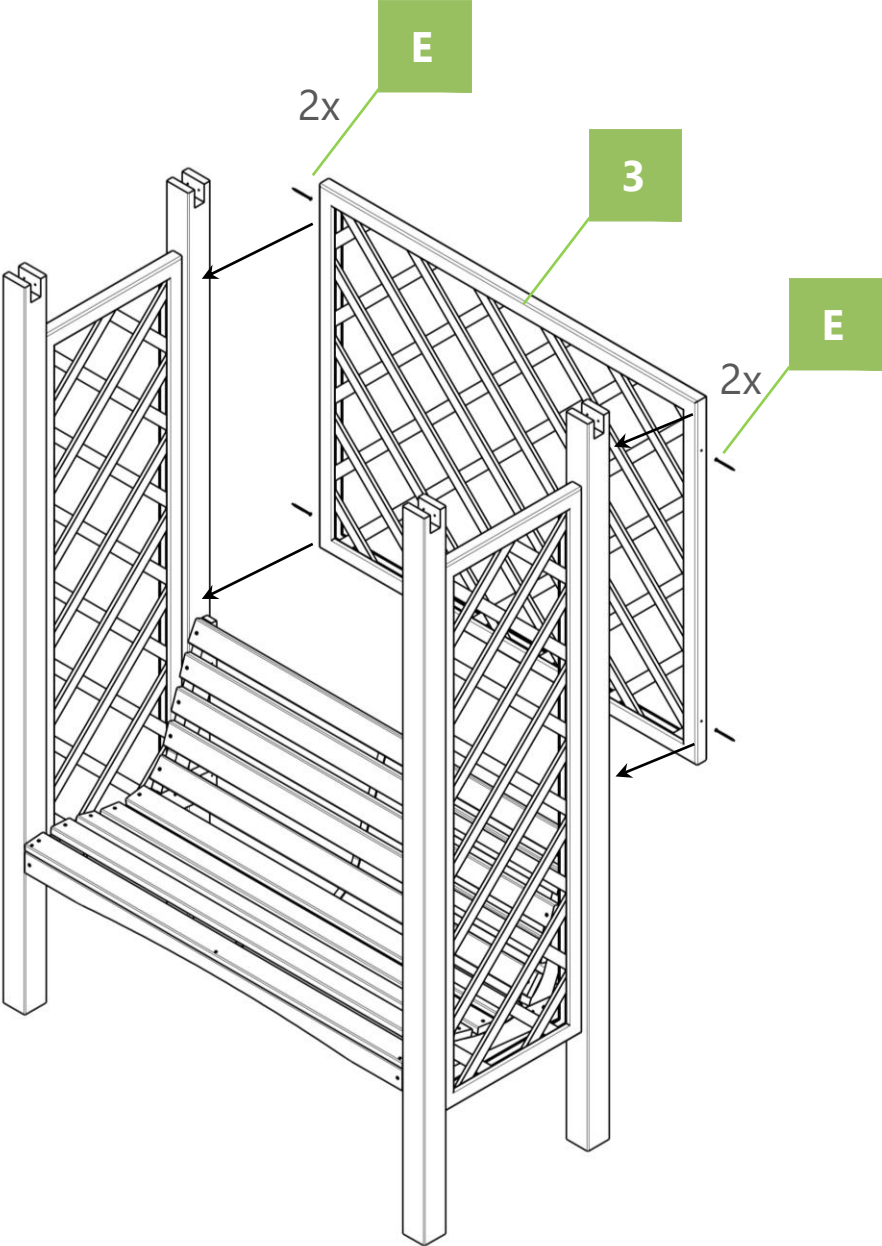

Step 8

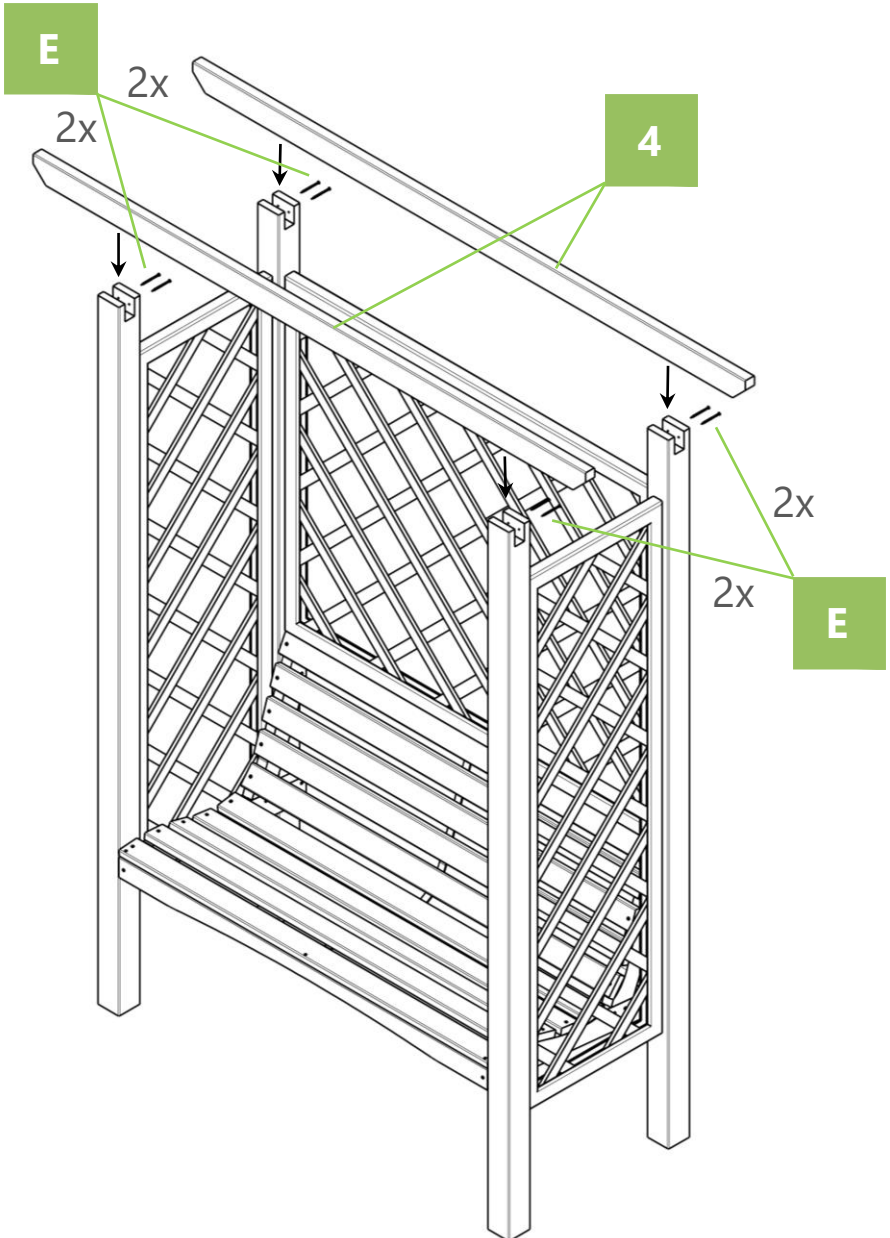

Step 9

